


# Operation manual

## Interface module LRZ 921

Ethernet USB module

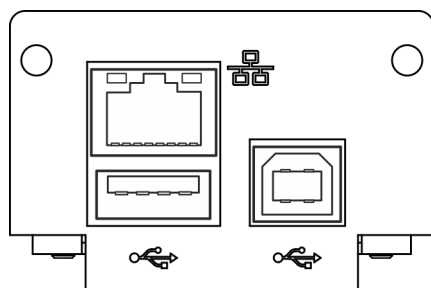

V2R4

Read this manual prior to performing any task!

Manufacturer:

LAUDA DR. R. WOBSE GMBH & CO. KG

Laudaplatz 1

97922 Lauda-Königshofen

Germany

Telephone: +49 (0)9343 503-0

E-mail: [info@lauda.de](mailto:info@lauda.de)

Internet: <https://www.lauda.de>

Translation of the original operation manual

Q4DA-E.13-017, 2, en\_US 09/18/2023 © LAUDA 2021

Replaces issue V1R45

## Table of contents

<b>1</b>	<b>General.....</b>	<b>5</b>
1.1	Intended use.....	5
1.2	Compatibility.....	5
1.3	Technical changes.....	6
1.4	Warranty conditions.....	6
1.5	Copyright.....	6
1.6	Contact LAUDA.....	6
<b>2</b>	<b>Safety.....</b>	<b>7</b>
2.1	General safety information and warnings.....	7
2.2	Information about the interface module.....	8
2.3	Personnel qualification.....	8
<b>3</b>	<b>Unpacking.....</b>	<b>9</b>
<b>4</b>	<b>Device description.....</b>	<b>10</b>
4.1	Purpose.....	10
4.2	Structure.....	10
<b>5</b>	<b>Before starting up.....</b>	<b>11</b>
5.1	Installing the interface module.....	11
5.2	Using the module box.....	13
<b>6</b>	<b>Commissioning.....</b>	<b>14</b>
6.1	Contact assignment of Ethernet interface.....	14
6.2	Software update.....	14
<b>7</b>	<b>Operation.....</b>	<b>15</b>
7.1	Menu structure.....	16
7.2	Interface functions.....	16
7.2.1	General Information.....	17
7.2.2	Read commands.....	18
7.2.3	Write commands.....	22
7.2.4	Availability of the interface functions.....	25
7.2.5	Error messages.....	27
7.3	Establishing a network connection.....	28
7.3.1	Configuring network settings.....	29
7.3.2	Checking the network connection.....	30
7.4	Setting up the process interface.....	30
7.4.1	Activating the process interface (Process SST on/off).....	30
7.4.2	Setting up the virtual COM port.....	31
7.4.3	Checking the connection monitoring function.....	32
<b>8</b>	<b>Maintenance.....</b>	<b>33</b>

<b>9</b>	<b>Faults.....</b>	<b>34</b>
9.1	Error.....	34
9.2	Warning.....	34
<b>10</b>	<b>Decommissioning.....</b>	<b>35</b>
<b>11</b>	<b>Disposal.....</b>	<b>36</b>
<b>12</b>	<b>Technical data.....</b>	<b>37</b>
<b>13</b>	<b>Index.....</b>	<b>38</b>

## 1 General

Many types of LAUDA constant temperature equipment have vacant module slots for installing additional interfaces. The number, size and arrangement of the module slots vary depending on the device and are described in the operating manual accompanying the constant temperature equipment. Two additional module slots available as accessories can be fitted to a LiBus module box, which is then connected as an external casing to the LiBus interface on the constant temperature equipment.

This operating manual describes how to install and configure the Ethernet USB interface module (catalog no. LRZ 921).

Constant temperature equipment can be connected to a PC or network via the Ethernet interface and controlled from there using the LAUDA command set. The interface functions provided for this purpose are described in chapters and .

The two USB interfaces are intended for future expansion and do not currently have any function.

### 1.1 Intended use

The interface module can only be operated as intended and under the conditions specified in this operating manual.

The interface module is an accessory that increases the connections options of LAUDA constant temperature equipment. It may only be installed in constant temperature equipment that supports the interface provided. Refer to the chapter "Compatibility" in this operating manual for a list of compatible product lines.

Operation of the interface module is also permitted in combination with the LiBus module box (LAUDA catalog no. LCZ 9727). This operating manual also contains a description of how to install and connect up the module box.

#### Reasonably foreseeable improper use

- Operation after incomplete assembly
- Operation on incompatible constant temperature equipment
- Operation using cables or connections that are defective or do not confirm to standards

### 1.2 Compatibility

The interface module is available as an accessory for the following LAUDA product lines:

- ECO
- Proline
- Variocool, not compatible with Variocool NRTL
- Integral XT, not compatible with Integral IN



#### *Operating interfaces of the same type:*

*Only one Ethernet interface can be used for each item of constant temperature equipment.*

### 1.3 Technical changes


All technical modifications are prohibited without the written consent of the manufacturer. Damage resulting from a failure to observe this condition will void all warranty claims.

However, LAUDA reserves the right to make general technical modifications.

### 1.4 Warranty conditions

LAUDA grants a standard warranty of one year.

### 1.5 Copyright

This operating manual was written in German, checked and approved. If the content of other language editions deviates from the German edition, the information in the German edition shall take precedence. If you notice any discrepancies in the content, please contact LAUDA Service, see  Chapter 1.6 "Contact LAUDA" on page 6.

Company and product names mentioned in the operating manual are usually registered trademarks of the respective companies and are therefore subject to brand and patent protection. Some of the images used may also show accessories that are not included in the delivery.

All rights reserved, including those relating to technical modifications and translations. This operating manual or parts thereof may not be modified, translated or used in any other capacity without the written consent of LAUDA. Violation of this may obligate the violator to the payment of damages. Other claims reserved.

### 1.6 Contact LAUDA

Contact the LAUDA Service department in the following cases:

- Troubleshooting
- Technical questions
- Ordering accessories and spare parts

Please contact our sales department for questions relating to your specific application.

#### Contact information

LAUDA Service

Phone: +49 (0)9343 503-350

Email: [service@lauda.de](mailto:service@lauda.de)


## 2 Safety

### 2.1 General safety information and warnings



- Read this operating manual carefully before use.
- Keep the operating manual in a place within easy reach of the interface module.
- This operating manual is part of the interface module. If the interface module is passed on, the operating manual must be kept with it.
- This operating manual is applicable in combination with the operating manual of the constant temperature equipment in which the interface module is installed.
- Manuals for LAUDA products are available for download on the LAUDA website: <https://www.lauda.de>
- The warnings and safety instructions in this operating manual must be observed without fail.
- There are also certain requirements for personnel, see ➔ Chapter 2.3 “Personnel qualification” on page 8.

#### Structure of warnings

Warning signs	Type of danger
	Warning – danger zone.
Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an imminently dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a potentially dangerous situation that can result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a potentially dangerous situation that can result in material and environmental damage if it is not avoided.

## 2.2 Information about the interface module

- Always disconnect the constant temperature equipment from the power supply before installing the interface module or connecting interfaces.
- Always take the recommended safety measures against electrostatic discharge before handling interface modules.
- Avoid touching the circuit board with metallic tools.
- Do not start up the constant temperature equipment before installation of the interface module is complete.
- Store any unused interface modules in their packaging in accordance with the specified ambient conditions.
- Use only suitable cables of sufficient length for cable connections.
- Make sure that the protective screen on the cables and connectors complies with EMC regulations. LAUDA recommends using pre-assembled cables.
- Always lay cables correctly so that they do not pose a tripping hazard. Secure the laid cables and make sure that they cannot be damaged during operation.
- Check the condition of the cables and interfaces prior to each operation.
- Immediately clean any soiled parts, in particular unused interfaces.
- Make sure that the signals transmitted via the interface correspond to the permitted operating parameters of the interface module.

## 2.3 Personnel qualification

### Specialized personnel

Only specialized personnel are permitted to install interfaces modules. Specialized personnel are personnel whose education, knowledge, and experience qualify them to assess the function and risks associated with the device and its use.



## 3 Unpacking



### DANGER! Transport damage

#### Electric shock

- Closely inspect the device for transport damage prior to commissioning!
- Never operate a device that has sustained transport damage!



### NOTICE! Electrostatic discharge

#### Material damage

- Always observe safety measures against electrostatic discharge.

Please observe the following installation sequence:

1. Remove the interface module from its packaging.
2. If you want to store the interface module at the installation location, use the outer packaging. This packaging is protected against static charging.
3. After installing the equipment, dispose of the packaging materials in line with environmental regulations, see ➤ “Packaging” on page 36.



*If you discover any damage on the interface module, contact LAUDA Service immediately, see ➤ Chapter 1.6 “Contact LAUDA” on page 6.*

## 4 Device description

### 4.1 Purpose

The Ethernet USB module was developed for the following purposes:

- Integrating constant temperature equipment in an Ethernet network.
- Controlling constant temperature equipment via the LAUDA command set.



*The two USB interfaces on the Ethernet USB module have no function. They will therefore not be mentioned again in this operating manual.*

### 4.2 Structure

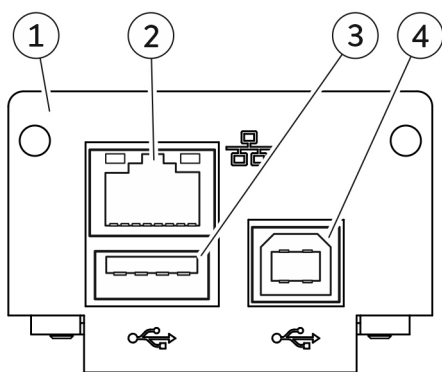


Fig. 1: Ethernet USB module

- 1 Cover with holes for M3x10 fastening screws
- 2 Ethernet interface (10/100 Mbit/s, RJ 45 with 2 LEDs \*)
- 3 Host USB port, USB 2.0 type A (intended for future expansion)
- 4 Device USB port, USB 2.0 type B (intended for future expansion)

\* The two LEDs indicate whether the interface is connected and whether data is being transmitted (link/activity).



#### **Material damage during repairs**

*The Ethernet USB module is fitted with a micro-SD card for remote maintenance purposes.*

***Only LAUDA service personnel are permitted to remove or exchange the micro-SD card.***

## 5 Before starting up

### 5.1 Installing the interface module

The interface module is connected to an internal LiBus ribbon cable and inserted into a vacant module slot. The number and arrangement of the module slots vary depending on the device. The module slots are protected by a cover that is screwed onto the casing or attached to the slot opening.



**WARNING!**  
Touching live parts

#### Electric shock

- Disconnect the device from the power supply before starting any installation work.
- Always observe safety measures against electrostatic discharge.



*The module installation description essentially applies to all LAUDA constant temperature equipment; the example diagrams here show the installation of an analog module in constant temperature equipment from the Variocool product line.*

*Please note that an interface module with a small cover can only be installed in a low module slot. The fitted cover must cover the opening on the module slot completely.*

*You will require two M3 x 10 screws and a suitable screwdriver to secure the interface module.*

Please observe the following installation sequence:

1. Turn off the constant temperature equipment and pull out the mains plug.
2. If necessary, remove the screws from the cover on the relevant module slot. If necessary, use a slotted screwdriver to prise off the cover.

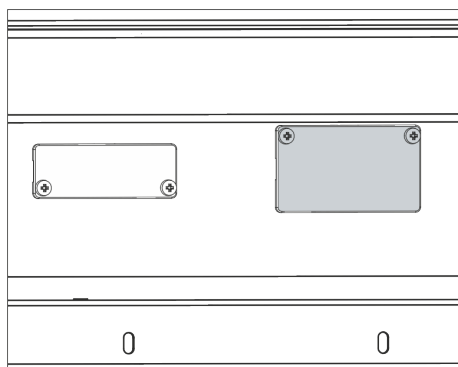


Fig. 2: Removing the cover (schematic diagram)

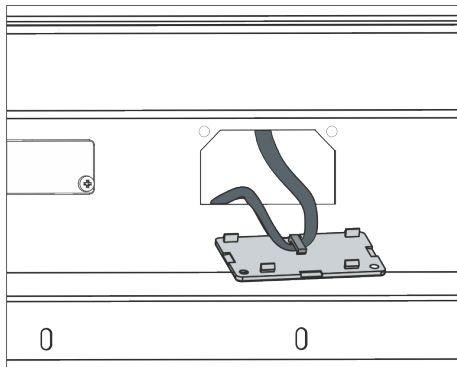


Fig. 3: Detaching the LiBus ribbon cable (schematic diagram)

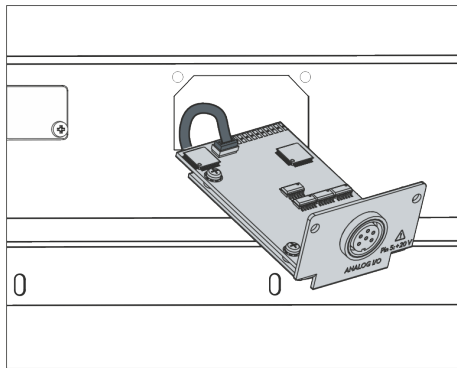


Fig. 4: Connecting the interface module (schematic diagram)

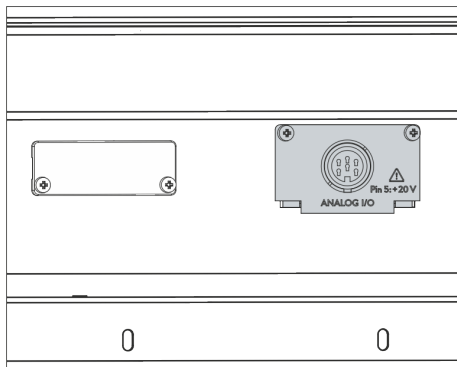


Fig. 5: Securing the cover (schematic diagram)

3. Remove the cover from the module slot.
  - The module slot is open. The LiBus ribbon cable is attached to the inside of the cover and is easily accessible.
4. Disconnect the LiBus ribbon cable from the cover.
5. Connect the red plug on the LiBus ribbon cable to the red socket on the circuit board of the interface module. Plug and socket are reverse polarity protected: Make sure that the lug on the plug is aligned with the recess in the socket.
  - The interface module is correctly connected to the constant temperature equipment.
6. Slide the LiBus ribbon cable and the interface module into the module slot.
7. Secure the cover to the casing using two M3 x 10 screws.
  - The new interface on the constant temperature equipment is ready for operation.

## 5.2 Using the module box

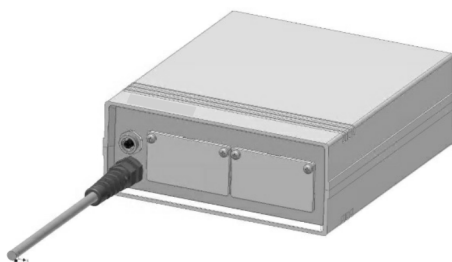


Fig. 6: LiBus module box, catalog no. LCZ 9727

You can extend LAUDA constant temperature equipment by two additional module slots using the LiBus module box. The module box is designed for interface modules with a large cover and is connected to constant temperature equipment via a vacant LiBus socket.

The socket on the constant temperature equipment bears the label **LiBus**.

Please observe the following installation sequence:

1. Switch off the constant temperature equipment.
2. Disconnect the cable on the module box from the constant temperature equipment.
  - The module box is disconnected from the power supply.
3. Check which interfaces are already present on the constant temperature equipment and module box.



*Observe the information on interface module compatibility. Only install an interface module with the same type of interface if operation with several of these interfaces is permitted.*

4. Install the required interface module in the module box. Please read the information on installing the module box in the constant temperature equipment, see chapter "Installing the interface module".
5. Position the module box close to the constant temperature equipment.
6. Connect the cable on the module box to the LiBus socket on the constant temperature equipment.
  - The interfaces on the module box are ready for operation.

## 6 Commissioning

### 6.1 Contact assignment of Ethernet interface

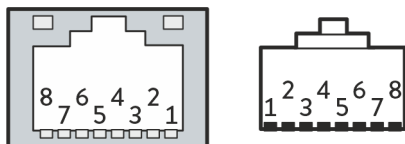


Fig. 7: RJ45 contacts on socket / plug

The Ethernet interface is equipped with standard type RJ45 sockets (8P8C modular plugs according to CFR Part 68). Standard Ethernet cables that correspond to category CAT5e or higher (8P8C assignment with twisted pairs) must be used for the connection.

Table 1: RJ45 contact assignment

Contact	Signal 10Base-T / 100Base-TX
1	Tx+
2	Tx-
3	Rx+
4	–
5	–
6	Rx-
7	–
8	–

### 6.2 Software update

Older software installed on constant temperature equipment may have to be updated for the new interface to work.

1. Switch on the constant temperature equipment after installing the new interface.
2. Check whether a software warning appears on the display:
  - Warning *SW too old*: Please contact LAUDA Service, see [Chapter 1.6 “Contact LAUDA”](#) on page 6.
  - No software warning: Operate the constant temperature equipment as normal.

## 7 Operation

You can connect your constant temperature equipment directly to a PC via the Ethernet interface or integrate it into a local network so that the equipment can be controlled using a LAUDA command set.



*The configuration for the Ethernet interface is stored in the constant temperature equipment. If the interface module is installed in a different device, the settings must be reconfigured there.*

### Command performance

The command performance achieved via the Ethernet depends on multiple factors, including the following criteria:

- Ideally, the constant temperature equipment and control station / PC should be located in the same (sub)network, otherwise the number of interconnected routers or switches should be kept to a minimum.
- A cable connection (LAN) to the control station / PC is usually more reliable for data transmission than a wireless connection (WLAN).
- Excessive network utilization can slow down the exchange of commands considerably.

Data is exchanged between the constant temperature equipment and an external application via the Ethernet interface in line with the command/response principle. In other words, a new command is usually only issued once the constant temperature equipment has responded to the previous command.

Under ideal conditions, commands can be sent to the constant temperature equipment every 100 ms. If the network load is high or a WiFi connection is being used, commands may have to be issued at intervals of more than 1 s.

A transmission rate of 500 ms is appropriate for many periodic commands (such as *Actual value of external temperature*). If this value is used as a control variable in the constant temperature equipment, a slower transmission rate will impair the control action.


## 7.1 Menu structure



*The menu only ever shows functions that are available for the current constant temperature equipment.*

The menu for configuring the interface is integrated in the main menu of the relevant constant temperature equipment:

*Menu → Modules → Ethernet*

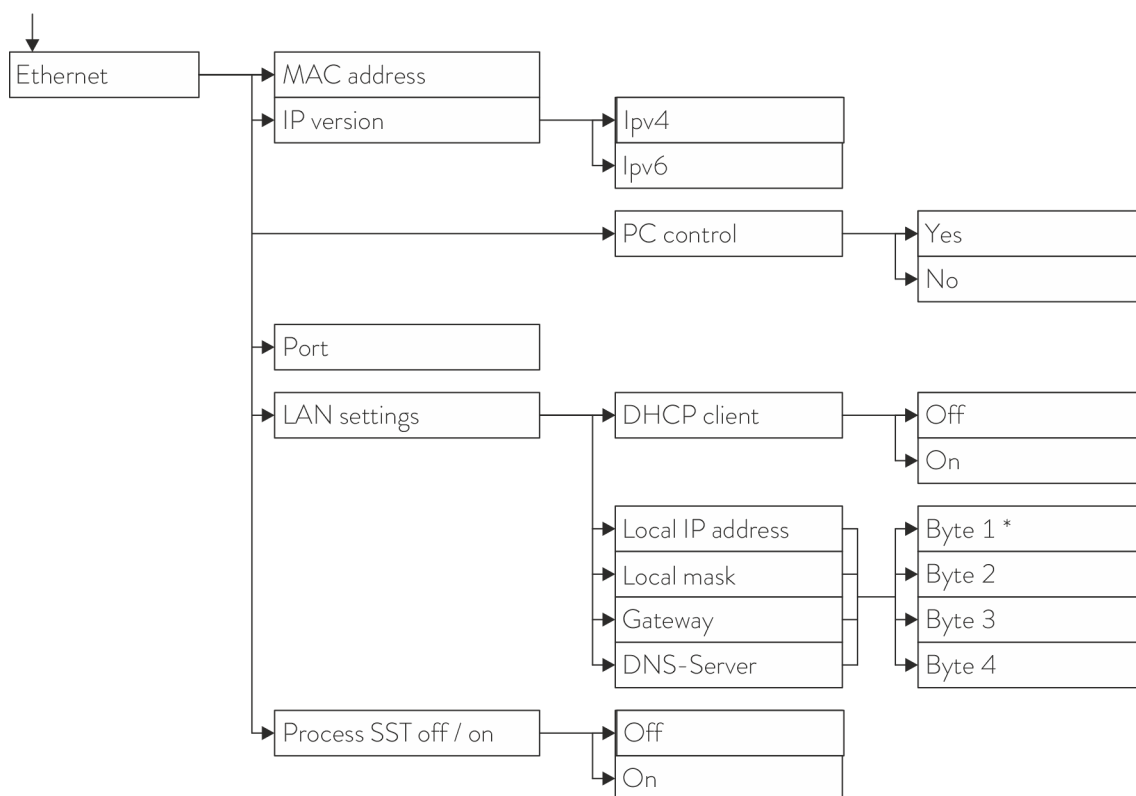

\* IP addresses are entered byte by byte.

Fig. 8: Ethernet interface menu

## 7.2 Interface functions

Interface functions such as read and write commands make it possible to read out the current operating parameters of constant temperature equipment and predefine specific settings and process values.

The interface functions supported by this interface are presented briefly below. They are sorted by topic according to the component affected and assigned a unique ID. Depending on the technical configuration of your constant temperature equipment, the number and scope of the interface functions actually available may vary from the list shown here, see chapter "Availability of the interface functions".



## 7.2.1 General Information

Communication takes place according to the master/slave principle. In order to ensure that a request and response are uniquely assigned to one another, commands can only be sent to the constant temperature equipment once a response to the previous command has been received.

All available read and write commands as well as the meaning of any error messages that may occur are presented below. Note the following information relating to syntax and sequencing when using these commands:

Numerical values are provided in fixed point format; numbers with up to 4 places in front of the decimal point and up to 2 places after the decimal point are permitted:

Table 2: Acceptable data formats

-XXXX.XX	-XXXX.X	-XXXX.	-XXXX	XXXX.XX	XXXX.X	XXXX.	XXXX
-XXX.XX	-XXX.X	-XXX.	-XXX	XXX.XX	XXX.X	XXX.	XXX
-XX.XX	-XX.X	-XX.	-XX	XX.XX	XX.X	XX.	XX
-X.XX	-X.X	-X.	-X	X.XX	X.X	X.	X
-.XX	-.X	.XX	.X				

- Error messages are output with the syntax "ERR\_X":
  - ERR = Identification as an error message
  - X = Error number (whole number without leading zero, maximum of 4 digits)
- Space " " and underscore "\_" can be used synonymously.

## Ethernet protocol

- Commands from an external source must always end with CR, CRLF or LF. The response from the constant temperature equipment always ends with CRLF. Meaning of the abbreviations:
  - CR = Carriage Return (Hex: 0D)
  - LF = Line Feed (Hex: 0A)
- In order to ensure that a request and response are uniquely assigned to one another, commands can only be sent to the constant temperature equipment once a response to the previous command has been received.

## Example

Example with set point transfer of 30.5 °C to the constant temperature equipment.

PC / control station	Constant temperature equipment
"OUT_SP_00_30.5"CRLF	➔
←	"OK"CRLF

### 7.2.2 Read commands

The interface module recognizes the following read commands, which you can use to retrieve operating data of the constant temperature equipment.

Table 3: Temperature

ID	Function	Unit, resolution	Command
2	Temperature set point	[°C]	IN_SP_00
3	Bath temperature (outflow temperature)	[°C], 0.01 °C	IN_PV_00
5	Controlled temperature (internal / external Pt / external analog / external serial)	[°C]	IN_PV_01
7	External temperature $T_E$ (Pt)	[°C]	IN_PV_03
8	External temperature $T_E$ (analog input)	[°C]	IN_PV_04
25	Overtemperature turn off point $T_{Max}$	[°C]	IN_SP_03
27	Limitation of outflow temperature $T_{iH}$ (upper limit)	[°C]	IN_SP_04
29	Limitation of outflow temperature $T_{iH}$ (lower limit)	[°C]	IN_SP_05
33	Set temperature $T_{set}$ in Safe Mode (safe set point in case of communication interruption).	[°C]	IN_SP_07

Table 4: Pump

ID	Function	Unit	Command
6	Outflow pressure / pump pressure, relative to the atmosphere	[bar]	IN_PV_02
12	Flow rate of the pump (MID flow controller must be connected)	[l/min]	IN_PV_07
18	Pump power stage	[–]	IN_SP_01
31	Outflow pressure set point / pump pressure (for pressure control settings)	[bar]	IN_SP_06
37	Flow rate control set point	[L/min]	IN_SP_09
71	Status of flow rate control: 0 = off / 1 = on	[–]	IN_MODE_05

Table 5: Fill level

ID	Function	Unit	Command
9	Bath level (fill level)	[–]	IN_PV_05

Table 6: Cooling

ID	Function	Unit	Command
24	Cooling mode: 0 = off / 1 = on / 2 = automatic	[–]	IN_SP_02

Table 7: Safety

ID	Function	Unit	Command
73	Status of Safe Mode: 0 = off (inactive) / 1 = on (active)	[-]	IN_MODE_06

Table 8: Control parameters

ID	Function	Unit	Command
39	Control parameter Xp	[-]	IN_PAR_00
41	Control parameter Tn (181 = Off)	[s]	IN_PAR_01
43	Control parameter Tv	[s]	IN_PAR_02
45	Control parameter Td	[s]	IN_PAR_03
47	Control parameter KpE	[-]	IN_PAR_04
49	Control parameter TnE	[s]	IN_PAR_05
51	Control parameter TvE	[s]	IN_PAR_06
53	Control parameter TdE	[s]	IN_PAR_07
55	Correction limitation	[K]	IN_PAR_09
57	Control parameter XpF	[-]	IN_PAR_10
61	Control parameter Prop_E	[K]	IN_PAR_15

Table 9: Control

ID	Function	Unit	Command
59	Setpoint offset	[K]	IN_PAR_14
67	Control in control variable X: 0 = internal / 1 = external Pt / 2 = external analog / 3 = external serial / 5 = external Ethernet / 6 = external EtherCAT / 7 = external Pt 2 (only for Integral)	[-]	IN_MODE_01
69	Offset source X for set point: 0 = normal / 1 = external Pt / 2 = external analog / 3 = external serial / 5 = external Ethernet / 6 = external EtherCAT / 7 = external Pt 2 (only for Integral)	[-]	IN_MODE_04

Table 10: Rights

ID	Function	Unit	Command
63	Status of keyboard Master: 0 = free / 1 = blocked	[-]	IN_MODE_00
65	Status of keyboard remote control: 0 = free / 1 = blocked	[-]	IN_MODE_03

Table 11: Status

ID	Function	Unit	Command
107	Device type (e.g.: "ECO", "INT" or "VC")	[-]	TYPE
130	Device status: 0 = OK / -1 = fault	[-]	STATUS
131	<p>Fault diagnosis; a 7-digit answer in the format XXXXXXXX is output, whereby each character X contains fault information (0 = no fault / 1 = fault).</p> <p>The following information is defined for the seven places of the answer format:</p> <ul style="list-style-type: none"> <li>■ 1st character = Error</li> <li>■ 2nd character = Alarm</li> <li>■ 3rd character = Warning</li> <li>■ 4th character = Overtemperature</li> <li>■ 5th character = Low level</li> <li>■ 6th character = 0 (with alarm setting: High level)</li> <li>■ 7th character = External control value missing</li> </ul>	[-]	STAT

Table 12: Programmer

ID	Function	Unit	Command
77	Program used as a basis for further commands	[-]	RMP_IN_04
88	Current segment number	[-]	RMP_IN_01
90	Number of preset program sequences	[-]	RMP_IN_02
92	Current program loop	[-]	RMP_IN_03
94	Currently running program (0 = no program currently running)	[-]	RMP_IN_05

Table 13: Contact input / output

ID	Function	Unit	Command
96	Contact input 1: 0 = open / 1 = closed	[-]	IN_DI_01
98	Contact input 2: 0 = open / 1 = closed	[-]	IN_DI_02
100	Contact input 3: 0 = open / 1 = closed	[-]	IN_DI_03
102	Contact output 1: 0 = open / 1 = closed	[-]	IN_DO_01
104	Contact output 2: 0 = open / 1 = closed	[-]	IN_DO_02
106	Contact output 3: 0 = open / 1 = closed	[-]	IN_DO_03

Table 14: SW version

ID	Function	Unit	Command
108	Control system	[-]	VERSION_R
109	Protection system	[-]	VERSION_S
110	Remote control (Command) (remote control unit must be present)	[-]	VERSION_B
111	Cooling system (only for devices with active cooling)	[-]	VERSION_T
112	Analog interface module (interface module must be present)	[-]	VERSION_A
113	Flow controller (flow controller must be present)	[-]	VERSION_A.1
114	RS 232/485 interface module or Profibus / Profinet (interface module must be present)	[-]	VERSION_V
115	Ethernet interface module (interface module must be present)	[-]	VERSION_Y
116	EtherCAT interface module (interface module must be present)	[-]	VERSION_Z
117	Contact interface module (interface module must be present)	[-]	VERSION_D
118	Solenoid valve for cooling water (solenoid valve must be present)	[-]	VERSION_M.0
119	Solenoid valve for automatic filling device (solenoid valve must be present)	[-]	VERSION_M.1
120	Solenoid valve for level controller (solenoid valve must be present)	[-]	VERSION_M.2
121	Solenoid valve, shut off valve 1 (solenoid valve must be present)	[-]	VERSION_M.3
122	Solenoid valve, shut off valve 2 (solenoid valve must be present)	[-]	VERSION_M.4
124	Pump 0	[-]	VERSION_P.0
125	Pump 1	[-]	VERSION_P.1
126	Heating system 0	[-]	VERSION_H.0
127	Heating system 1	[-]	VERSION_H.1
128	External Pt100 interface 0 (module must be present)	[-]	VERSION_E
129	External Pt100 interface 1 (second module must be present)	[-]	VERSION_E.1

### 7.2.3 Write commands

The interface module recognizes the following write commands, which you can use to transfer values to the constant temperature equipment.



*The constant temperature equipment confirms each write command with OK, e.g. the reply from the device address A015 is "A015\_OK". In the event of an error, an error message is output as a reply, e.g. "A015\_ERR\_6", see ↗ Chapter 7.2.5 "Error messages" on page 27.*

Table 15: Temperature

ID	Function	Unit	Command
1	Temperature set point	[°C]	OUT_SP_00_XXX.XX
15	Actual value of external temperature (via interface)	[°C]	OUT_PV_05_XXX.XX
26	Limitation of outflow temperature TiH (upper limit)	[°C]	OUT_SP_04_XXX
28	Limitation of outflow temperature TiH (lower limit)	[°C]	OUT_SP_05_XXX
32	Temperature set point $T_{\text{set}}$ in Safe Mode	[°C]	OUT_SP_07_XXX.XX

Table 16: Pump

ID	Function	Unit	Command
17	Pump power stage (device-specific, e.g. 1 – 6)	[–]	OUT_SP_01_XXX
30	Set pressure (for pressure control settings)	[bar]	OUT_SP_06_X.XX

ID	Function	Unit	Command
36	Flow rate control set point	[l/min]	OUT_SP_09_X.XX
70	Activate flow rate control: 0 = switch off / 1 = switch on	[-]	OUT_MODE_05_X

Table 17: Cooling

ID	Function	Unit	Command
23	Cooling mode: 0 = off / 1 = on / 2 = automatic	[-]	OUT_SP_02_XXX

Table 18: Safety

ID	Function	Unit	Command
72	Activation of Safe Mode	[-]	OUT_MODE_06_1

Table 19: Control parameters

ID	Function	Unit	Command
38	Control parameter Xp	[-]	OUT_PAR_00_XX.X
40	Control parameter Tn (5 – 180 s; 181 = Off)	[s]	OUT_PAR_01_XXX
42	Control parameter Tv	[s]	OUT_PAR_02_XXX
44	Control parameter Td	[s]	OUT_PAR_03_XX.X
46	Control parameter KpE	[-]	OUT_PAR_04_XX.XX
48	Control parameter TnE (0 – 9000 s; 9001 = Off)	[s]	OUT_PAR_05_XXXX
50	Control parameter TvE (5 = Off)	[s]	OUT_PAR_06_XXXX
52	Control parameter TdE	[s]	OUT_PAR_07_XXXX.X
54	Correction limitation	[K]	OUT_PAR_09_XXX.X
56	Control parameter XpF	[-]	OUT_PAR_10_XX.X
60	Control parameter Prop_E	[K]	OUT_PAR_15_XXX

Table 20: Control

ID	Function	Unit	Command
58	Setpoint offset	[K]	OUT_PAR_14_XXX.X
66	Control in control variable X: 0 = internal / 1 = external Pt / 2 = external analog / 3 = external serial / 5 = external Ethernet / 6 = external EtherCAT / 7 = external Pt 2 (only for Integral)	[-]	OUT_MODE_01_X

ID	Function	Unit	Command
68	Offset source X for set point: 0 = normal / 1 = external Pt / 2 = external analog / 3 = external serial / 5 = external Ethernet / 6 = external EtherCAT / 7 = external Pt 2	[-]	OUT_MODE_04_X

**Note (ID 66 and 68):** If X = 3, the commands ID 66 and ID 68 cannot be executed in some constant temperature control devices until an external temperature specification has been received (via the command ID 15).

Table 21: Rights

ID	Function	Unit	Command
62	Keyboard Master (equivalent to "KEY"): 0 = unlock / 1 = lock	[-]	OUT_MODE_00_X
64	Keyboard remote control unit (command): 0 = unlock / 1 = lock	[-]	OUT_MODE_03_X

Table 22: Status

ID	Function	Unit	Command
74	Switch the device on / off (standby)	[-]	START / STOP

Table 23: Programmer

ID	Function	Unit	Command
76	Select the program for the subsequent commands (X = 1 – 5). The default program is 5 when the constant temperature equipment is switched on.	[-]	RMP_SELECT_X
78	Start programmer	[-]	RMP_START
79	Pause programmer	[-]	RMP_PAUSE
80	Continue programmer (after pause)	[-]	RMP_CONT
81	End programmer	[-]	RMP_STOP



## 7.2.4 Availability of the interface functions

The following table shows the read and write commands that the interface module provides for all compatible product lines of constant temperature equipment.



*Special functions (for example, "[ID 6] outflow pressure / pump pressure") are only available if the constant temperature equipment is equipped accordingly. Optional accessories may have to be connected correctly and ready for operation.*

ID	Variocool	ECO	Proline, Proline Kryomat	Integral XT
1	✓	✓	✓	✓
2	✓	✓	✓	✓
3	✓	✓	✓	✓
5	✓	✓	✓	✓
6	–	–	–	✓
7	✓	✓	✓	✓
8	✓	✓	✓	✓
9	✓	–	✓	✓
15	✓	✓	✓	✓
17	–	✓	✓	✓
18	–	✓	✓	✓
23	✓	✓	✓	✓
24	✓	✓	✓	✓
25	–	✓	✓	✓
26	✓	✓	✓	✓
27	✓	✓	✓	✓
28	✓	✓	✓	✓
29	✓	✓	✓	✓
38	✓	✓	✓	✓
39	✓	✓	✓	✓
40	✓	✓	✓	✓
41	✓	✓	✓	✓
42	✓	✓	✓	✓
43	✓	✓	✓	✓
44	✓	✓	✓	✓
45	✓	✓	✓	✓

ID	Variocool	ECO	Proline, Proline Kryomat	Integral XT
46	✓	✓	✓	✓
47	✓	✓	✓	✓
48	✓	✓	✓	✓
49	✓	✓	✓	✓
50	✓	✓	✓	✓
51	✓	✓	✓	✓
52	✓	✓	✓	✓
53	✓	✓	✓	✓
54	✓	✓	✓	✓
55	✓	✓	✓	✓
56	✓	✓	✓	✓
57	✓	✓	✓	✓
58	✓	✓	✓	✓
59	✓	✓	✓	✓
60	✓	✓	✓	✓
61	✓	✓	✓	✓
62	✓	✓	✓	✓
63	✓	✓	✓	✓
64	✓	✓	✓	✓
65	✓	✓	✓	✓
66	✓	✓	✓	✓
67	✓	✓	✓	✓
68	✓	✓	✓	✓
69	✓	✓	✓	✓
74	✓	✓	✓	✓
76	✓	✓	✓	✓
77	✓	✓	✓	✓
78	✓	✓	✓	✓
79	✓	✓	✓	✓
80	✓	✓	✓	✓
81	✓	✓	✓	✓
88	✓	✓	✓	✓
90	✓	✓	✓	✓
92	✓	✓	✓	✓

ID	Variocool	ECO	Proline, Proline Kryomat	Integral XT
94	✓	✓	✓	✓
96	✓	✓	✓	✓
98	✓	✓	✓	✓
100	✓	✓	✓	✓
102	✓	✓	✓	✓
104	✓	✓	✓	✓
106	✓	✓	✓	✓
107	✓	✓	✓	✓
108	✓	✓	✓	✓
109	✓	✓	✓	✓
110	✓	✓	✓	✓
111	✓	✓	✓	✓
112	✓	✓	✓	✓
114	✓	✓	✓	✓
115	✓	✓	✓	✓
116	✓	✓	✓	✓
117	✓	✓	✓	✓
118	–	✓	–	–
119	–	–	✓	–
121	–	✓	–	–
124	–	–	–	✓
125	–	–	–	✓
127	–	–	–	–
128	✓	✓	–	–
129	–	–	–	–
130	✓	✓	✓	✓
131	✓	✓	✓	✓

### 7.2.5 Error messages

The following is a description of the error messages of the interface modules.  
The string *ERR\_X* or *ERR\_XX* is output after an incorrect command.

Error	Description
ERR_2	Incorrect entry (for example, buffer overflow)
ERR_3	Wrong command
ERR_5	Syntax error in value
ERR_6	Impermissible value
ERR_8	Module or value not available
ERR_30	Programmer, all segments occupied
ERR_31	Not possible to specify set point (analog set point value input is ON)
ERR_32	$T_{iH} \leq T_{iL}$
ERR_33	External sensor missing
ERR_34	Analog value not present
ERR_35	Automatically configured
ERR_36	Not possible to specify set point, programmer is running or has been paused
ERR_37	Not possible to start programmer (analog set point value input is ON)

### 7.3 Establishing a network connection

Before you can address the constant temperature equipment from a PC or in the local network, the following preparations are required:

1. Use an Ethernet cable (Cat. 5e or higher) to connect the Ethernet interface of the constant temperature equipment to the remote station. The following systems can be used as remote stations, for example: PC, switch, router or WLAN access point.
2. Use the constant temperature equipment menu to configure all the settings that the connected system requires for communication.



Contact your system administrator for the relevant information and also note the following:

- The Ethernet interface on the constant temperature equipment is prepared in the factory for operation on a DHCP server: When the setting *DHCP Client = on* is selected, the required configuration is adopted automatically from the network as soon as the cable is connected.
- If automatic configuration is not required because the equipment is operating on a single system or as a process interface, you must deselect the option *DHCP Client*. Then enter the network settings manually, see ➔ Chapter 7.3.1 “Configuring network settings” on page 29.

### 7.3.1 Configuring network settings

The following requirements must be met before the constant temperature equipment can be connected manually to a system or network:

- The Ethernet interface is connected to a single system (PC) or a network component (hub, switch, router, WLAN access point) via an Ethernet cable.
- The local IP address assigned to the constant temperature equipment falls within the same address range as the connected system and is not used by any other system on the network.

1. Open the ... → *Ethernet* → *LAN Settings* menu.
2. Set the *DHCP Client* entry to *off*.
  - ▶ The entries for inputting IP addresses are enabled.
3. Enter the IP addresses for the following entries in succession.



#### Entering IP addresses

*IP addresses are entered byte by byte:*

- Select the *Byte 1* field.
- Enter the first numerical value of the 4-digit IP address and confirm your entry.
- Repeat the process for the *Byte 2*, *Byte 3* and *Byte 4* fields.

- |                         |                                                                                                                                                                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Local IP address</i> | - Enter in the desired IP address, for example 120.0.1.12. Connected systems can access the constant temperature equipment using this IP address, see ➔ “Ping request” on page 30.                                                                                                            |
| <i>Local mask</i>       | - Enter the associated local mask address, for example 255.255.192.0.                                                                                                                                                                                                                         |
| <i>Gateway</i>          | - Enter the IP address of the gateway (for example 120.0.0.13) that is used for communicating with neighboring networks.<br><br>Note: The gateway address must be configured if the constant temperature equipment and control station (e.g. PC) are in different subnetworks (VLANs / LANs). |
| <i>DNS-Server</i>       | - Enter the IP address of the DNS server (for example 120.0.1.40) that is used for the name resolution of connected systems.<br><br>Note: Entering the address of the DNS server is not required.                                                                                             |

#### IP version

Determines which IP version is used (*IPv4* or *IPv6*). The interface only supports IP version *IPv4* at present.

## 7.3.2 Checking the network connection

### Ping request

You can use the `ping` console command from a connected system to easily check whether the interface on the constant temperature equipment is available. Here, a single request (echo request) is sent to the configured local IP address. If the equipment is available, it usually returns four responses together with the respective transmission time.

The constant temperature equipment is switched on and connected to a single system or the network.

1. Open the command line interpreter (console) on a connected system.



#### Starting the console

A command line interpreter can be used on every operating system. On a Windows 10 operating system, for example, it can be accessed as follows:

Start (right-click) → Run → `cmd.exe`

2. Enter the command "ping" and the IP address of the constant temperature equipment:

Syntax: `"ping XXX.XXX.XXX.XXX"`

Example: `ping 120.0.1.12.`

3. Press [Enter] to confirm the entry

- If available, the constant temperature equipment responds to the request immediately.

```
Administrator: C:\Windows\system32\cmd.exe
C:\Users\username>ping 120.0.1.12

Pinging 120.0.1.12 with 32 bytes of data:
Reply from 120.0.1.12: bytes=32 time<1ms TTL=128
Reply from 120.0.1.12: bytes=32 time<1ms TTL=128
Reply from 120.0.1.12: bytes=32 time<1ms TTL=128
Reply from 120.0.1.12: bytes=32 time<1ms TTL=128

Ping statistics for 120.0.1.12:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\Users\username>
```

Fig. 9: Example of a Ping request

If the remote station is unavailable, check whether the following criteria have been met:

- The constant temperature equipment is connected to the same network as the test system.
- The test address corresponds to the address displayed in the menu of the constant temperature equipment.
- The configured network settings are correct.

If necessary, contact your system administrator.

## 7.4 Setting up the process interface

### 7.4.1 Activating the process interface (Process SST on/off)



The process interface option is only available when the DHCP client is deactivated. It ensures that the constant temperature equipment is always controlled via a fixed IP address.

The Ethernet interface can be configured as a process interface for controlling and monitoring the constant temperature equipment via Ethernet. The equipment can be accessed from your own application; the LAUDA command set is used for data transmission.



Still only one control system can be connected to the constant temperature equipment via the Ethernet interface. It is not possible to activate the equipment simultaneously from multiple systems.

As soon as you select the *PC control* option in the menu of the constant temperature equipment, you can establish the connection from the control system.

The constant temperature equipment is connected via the Ethernet interface and can be accessed from the network or single system. The network settings have been configured manually.

1. Enter the number for the *Port* .
  - The value determines which port number is used to establish the connection to the *Process SST* process interface. Port 54321 is the factory default setting, all free port numbers between 49152 – 65535 are permitted.
2. Activate the *Process SST* function:
  - Open the *Modules* → *Ethernet* → *Process SST off / on* menu.
  - Select the option *on* and confirm your selection.

## Terminal

A terminal program can be used to establish the connection to the constant temperature equipment. For example, the freeware *RealTerm*, which can be downloaded from the following address: <https://realterm.sourceforge.io/>

The following settings are required:

1. Start the terminal program on the connected system.
2. Open the *Port* tab.
3. Enter the configured IP address and port number of the Ethernet interface into the *Port* field. The IP address and port number must be separated by a colon.
4. Send a test command such as the read command "TYPE" to the constant temperature equipment.
  - ▶ If the device type designation, for example "ECO", is received in response, the connection has been set up correctly.

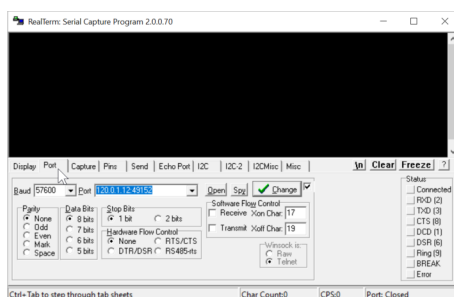


Fig. 10: Example in RealTerm: Entering the IP address and port

## 7.4.2 Setting up the virtual COM port

Set up a virtual COM port on the connected PC for easy communication via the activated process interface.

The software used to control the constant temperature equipment must be capable of transmitting serial commands via Ethernet. If the software cannot do this, install driver software on the control system that emulates the Ethernet interface as a serial port. The "Virtual Serial Port Emulator" is an example of suitable software and is also available as freeware.



"Virtual Serial Port Emulator" software is not a LAUDA product. LAUDA cannot therefore offer any guarantees or support for the software.

### 7.4.3 Checking the connection monitoring function

The Ethernet USB module checks an existing TCP connection automatically every 15 seconds. If the function detects an interruption in the connection, a corresponding error message is sent to the connected system. A connected system must then initiate the establishment of a new connection.



*The connected PC can be configured to attempt to re-establish a lost connection automatically. In this case, the PC must be configured to wait a minimum of 15 seconds before each attempt to re-establish a connection.*



## 8 Maintenance

The interface module is maintenance-free.

Any dust and dirt deposits should be cleaned from the connections on the interface module on a regular basis, especially if the interfaces are not being used.



### WARNING!

Live parts in contact with cleaning agent

Electric shock, material damage

- Disconnect the device from the mains supply before starting any cleaning work.
- Water and other fluids should not be allowed to enter the device.



### NOTICE!


Repairs performed by unauthorized persons

Material damage

- Only specialized personnel are permitted to carry out repairs.

1. Use a damp cloth or brush to remove any dust and dirt deposits.
2. When using compressed air: Always set a low working pressure to prevent mechanical damage to the connections.



*If you have any questions about technical modifications, please contact LAUDA Service, see  Chapter 1.6 "Contact LAUDA" on page 6.*

## 9 Faults

If a fault occurs, the interface distinguishes between different message types, e.g. alarms, errors and warnings. The procedure for rectifying a fault depends on the device. Follow the corresponding instructions in the operating manual accompanying the constant temperature equipment.



*If you are unable to rectify a fault, please contact LAUDA Service, see ↗ Chapter 1.6 “Contact LAUDA” on page 6.*

### 9.1 Error

The Ethernet interface recognizes the following error messages:

Code	Remedy
1809	Restart the constant temperature equipment. If the message persists, contact LAUDA Service, see ↗ Chapter 1.6 “Contact LAUDA” on page 6.
1824	Ethernet USB module and constant temperature equipment are not compatible. Note down the relevant software versions and contact LAUDA Service.

### 9.2 Warning

The Ethernet interface recognizes the following warnings:

Code	Remedy
1803	Restart the constant temperature equipment. If the message persists, contact LAUDA Service, see ↗ Chapter 1.6 “Contact LAUDA” on page 6.
1804	Restart the constant temperature equipment. If the message persists, contact LAUDA Service.
1833	Check if the network cable has been connected correctly. Is the yellow LED on the Ethernet interface flashing?  If the DHCP client settings have been configured manually: Check the DNS server configuration and make sure that the preset IP address is correct.  If it has been connected and configured correctly, yet the warning remains active, contact LAUDA Service.
1838 – 1840, 1846, 1852, 1854	If these messages persist for longer, contact LAUDA Service.
1847	Inform your system administrator and check the availability of the NTP server.
1849	Inform your system administrator and check the availability of the DHCP server.
1850	The manually assigned IP address already exists in the network. Enter a free IP address into the constant temperature equipment.
1853	The Ethernet USB module has detected an interruption in the TCP connection and is restarting with the current valid settings. After approximately 15 seconds, the connected system can attempt to establish the connection again; see ↗ Chapter 7.4.3 “Checking the connection monitoring function” on page 32.

## 10 Decommissioning





**WARNING!**  
Touching live parts

Electric shock

- Disconnect the device from the power supply before starting any installation work.
- Always observe safety measures against electrostatic discharge.

Decommission the interface module by removing it from the constant temperature equipment:

1. Observe the information in  Chapter 5.1 “Installing the interface module” on page 11. Proceed in reverse order to remove.
2. Always attach the LiBus connecting cable to the inside of the module slot cover.
3. Fit the cover to the vacant module slot to protect the constant temperature equipment against the ingress of dirt.
4. Protect the interface module against static charging before placing it in storage. The storage location must meet the ambient conditions specified in the technical data.
5. If you intend to dispose of the module, please read the information in  “Old device” on page 36 first.

## 11 Disposal

### Packaging

The packaging normally consists of environmentally friendly materials that can be easily recycled when properly disposed of.

1. Dispose of packaging materials in accordance with the applicable disposal guidelines in your region.
2. Comply with the requirements of Directive 94/62/EC (packaging and packaging waste) if disposing of the product in a member state of the EU.

### Old device



The device must be properly decommissioned and disposed of at the end of its life cycle.

1. Dispose of the device in accordance with the applicable disposal guidelines in your region.
2. Comply with Directive 2012/19/EU (WEEE Waste of Electrical and Electronic Equipment) if disposing of the product takes place in a member state of the EU.

## 12 Technical data

Feature	Unit	Value / version
<b>Interface module</b>		
Catalog number	[-]	LRZ 921
Size of module slot, W x H	[mm]	51 x 27
External dimensions (excluding connectors), W x H x D	[mm]	56 x 37 x 82
Weight	[kg]	0.1
Operating voltage	[V DC]	24
Maximum current consumption	[A]	0.1
<b>Ethernet connection</b>		
Version	[-]	1x RJ45 socket, 8-pin
<b>USB interface (host)</b>		
Version	[-]	1x USB 2.0 socket, type A (intended for future expansion)
<b>USB interface (device)</b>		
Version	[-]	1x USB 2.0 socket, type B (intended for future expansion)
<b>Ambient conditions</b>		
Air humidity	[%]	Maximum relative air humidity 80 % at 31 °C and up to 40 °C, 50 % with linear decrease.
Ambient temperature range	[°C]	5 – 40
Temperature range for storage	[°C]	5 – 50

## 13 Index

<b>C</b>	
Cleaning . . . . .	33
Contact . . . . .	6
Copyright . . . . .	6
<b>D</b>	
Disposal	
Old device . . . . .	36
Packaging . . . . .	36
<b>E</b>	
Error . . . . .	34
Error messages . . . . .	27
Ethernet	
Error . . . . .	34
Terminal program . . . . .	31
Warning . . . . .	34
Ethernet interface	
Command performance . . . . .	15
Contact assignment . . . . .	14
Menu structure . . . . .	16
Process interface . . . . .	30
TCP monitoring . . . . .	32
Ethernet USB module	
Compatibility . . . . .	5
Purpose . . . . .	10
Structure . . . . .	10
<b>F</b>	
Fault . . . . .	34
<b>I</b>	
Improper use . . . . .	5
Intended use . . . . .	5
Interface	
Ethernet . . . . .	15
Interface functions . . . . .	16
Availability . . . . .	25
Read commands . . . . .	18
Write commands . . . . .	22
Interface module	
Decommissioning . . . . .	35
Installation . . . . .	11
Maintenance . . . . .	33
Module box . . . . .	13
Unpacking . . . . .	9
IP address . . . . .	29
<b>L</b>	
LAN settings	
manual . . . . .	29
<b>M</b>	
Module box . . . . .	13
Module slot . . . . .	11
<b>P</b>	
Personnel qualification (overview) . . . . .	8
Ping request . . . . .	30
Process interface	
Activation . . . . .	30
<b>S</b>	
Safety information	
General . . . . .	7
Interface module . . . . .	8
Service . . . . .	6
Software	
Ping request . . . . .	30
Terminal program . . . . .	31
Virtual COM port . . . . .	31
Software update . . . . .	14
Syntax . . . . .	17
<b>T</b>	
Technical changes . . . . .	6
Terminal program . . . . .	31
<b>U</b>	
Update . . . . .	14

## W

Warning .....	34
Warranty .....	6

Manufacturer:

LAUDA DR. R. WOBSE GMBH & CO. KG • Laudaplatz 1 • 97922 Lauda-Königshofen

Telephone: +49 (0)9343 503-0

E-mail: [info@lauda.de](mailto:info@lauda.de) • Internet: <https://www.lauda.de>