

Operating instructions

Drol]bY9X]h]cb`L

FD', () `C, FD',)) `7 žFD', +\$`7 žFD', - \$`7 ,

FD'%& \$`7 žFD'% (\$`7 žFD'% () `7 žFD') ' \$`7

Ccc`]b[`h Yfa cghUhg`k]h `Ga Urt7 cc``gmghYa

Operating instructions

PROLINE Edition X

Cooling thermostats
with SmartCool system
RP 845 C, RP 855 C, RP 870 C, RP 890 C,
RP 1290 C, RP 1840 C, RP 1845 C, RP 3530 C

Read the instructions prior to performing any task!

YACE0100 Translation of the original operating instructions
English 10/2018 b

To replace issues 05/2016 a3, 11/2015 a2

Valid from:

Software of Operating system (Command) version 3.45

Software of Control system (Master) version 2.13

Software of Safety system version 2.07

Software Chilling system version 2.13

Software Analog IO module version 3.14

Software Serial IO module version 3.22

Software Digital IO module version 3.14

Software Solenoid valve version 3.06

Software Ethernet module version 1.23

Software EtherCAT module version 1.06

LAUDA DR. R. WOBSE GMBH & CO. KG

Pfarrstraße 41/43

97922 Lauda-Königshofen

Germany

Phone: +49 (0)9343 503-0

Fax: +49 (0)9343 503-222

E-Mail info@lauda.de

Internet <http://www.lauda.de>

Prefixed safety notes



Before operating the equipment, please read carefully all the instructions and safety notes in Section 1.

If you have any questions, please phone us!

Follow the instructions on setting up, operation etc. This is the only way to avoid incorrect operation of the equipment and to ensure full warranty protection.

- Transport the equipment with care!
The unit may NEVER be overturned nor put upside down!
- Equipment and its internal parts can be damaged:
 - by dropping,
 - by shock.
- Technically qualified personnel must only operate the equipment!
- Never operate the equipment without the heat transfer liquid!
- Do not start up the equipment if:
 - it is damaged or leaking,
 - cable (not only supply cable) is damaged.
- Switch off the equipment and pull out the mains plug:
 - for servicing or repair,
 - moving the equipment
- Drain the bath before moving the equipment!
- Do not carry out any technical changes on the device!
- Have the equipment serviced or repaired by properly qualified personnel only!

The Operating Instructions include additional safety notes, which are identified by a triangle with an exclamation mark. Carefully read the instructions and follow them accurately! Disregarding the instructions may have serious consequences, such as damage to the equipment, damage to property or injury to personnel!

We reserve the right to make technical alterations!

Contents

1	Safety information	9
1.1	GENERAL SAFETY INFORMATION	9
1.2	OTHER SAFETY INFORMATION	10
1.3	EC CONFORMITY	10
2	Brief operating instructions	11
3	Controls and functional elements	13
4	Unit description	16
4.1	ENVIRONMENTAL CONDITIONS	16
4.2	DEVICE TYPES	16
4.3	VARIOFLEX PUMP	16
4.4	MATERIALS	17
4.5	TEMPERATURE DISPLAY, CONTROL AND SAFETY CIRCUIT	17
4.6	PROGRAMMER AND RAMP FUNCTION	18
4.7	INTERFACES	18
4.8	INTERFACE MODULES (ACCESSORIES)	18
4.9	COOLING UNIT	19
4.10	AVOIDANCE OF DEWING	19
4.11	HEATER RATING AND POWER CONSUMPTION FROM THE MAINS	19
5	Unpacking	20
6	Preparation	21
6.1	ASSEMBLY AND SITING	21
6.2	FILLING AND DRAINING	22
6.3	HEAT TRANSFER LIQUIDS AND HOSES	23
6.4	CONNECTING EXTERNAL LOADS	25
7	Starting up	26
7.1	MAINS CONNECTION	26
7.2	SWITCHING ON	26
7.3	SWITCHING OFF / STANDBY	28
7.4	KEY FUNCTIONS	28
7.4.1	<i>General key functions and pilot lamps</i>	<i>28</i>
7.4.2	<i>Changing window information</i>	<i>32</i>
7.4.3	<i>Locking the keyboard</i>	<i>33</i>
7.5	"MASTER" MENU STRUCTURE	35
7.6	"COMMAND" MENU STRUCTURE	36
7.7	IMPORTANT SETTINGS	37
7.7.1	<i>Temperature setpoint setting</i>	<i>37</i>
7.7.2	<i>Displaying the actual external temperature</i>	<i>39</i>
7.7.3	<i>Setting pump power or standby</i>	<i>40</i>
7.7.4	<i>Activating external control</i>	<i>41</i>
7.7.5	<i>Current consumption from the mains</i>	<i>42</i>
7.7.6	<i>Setting the date and time</i>	<i>44</i>
7.7.7	<i>Display resolution setting</i>	<i>44</i>
7.8	SPECIAL SETTINGS	45
7.8.1	<i>Setpoint resolution</i>	<i>45</i>
7.8.2	<i>Defining the type of start mode</i>	<i>45</i>
7.8.3	<i>Defining temperature limits</i>	<i>47</i>
7.8.4	<i>Setpoint offset operating mode</i>	<i>48</i>
7.8.5	<i>Restoring works settings</i>	<i>50</i>

7.8.6	Setting the volume of the acoustic signals.....	52
7.8.7	Entering the offset of the internal temperature probe	53
7.8.8	Restoring the works setting of the internal temperature-probe offset.....	54
7.8.9	Entering the offset of the external temperature probe	55
7.8.10	Restoring the works setting of the external temperature-probe offset.....	56
7.9	GRAPHICAL DISPLAY OF TEMPERATURE MEASUREMENTS	57
7.10	PROGRAMMER (PGM)	59
7.10.1	Program example.....	59
7.10.2	Selecting and starting the program (Start, Hold, Stop).....	61
7.10.3	Interrupting, continuing or terminating the program (Hold, Continue, Stop).....	62
7.10.4	Creating or modifying a program (Edit).....	63
7.10.5	Defining the number of program loops (Loops)	67
7.10.6	Viewing the program sequence as a graph (Graph).....	67
7.10.7	Obtaining information on a program (Info).....	68
7.11	RAMP FUNCTION	69
7.12	TIMER FUNCTION.....	70
7.13	CONTROL PARAMETERS	71
7.13.1	Internal control variable (integral measurement probe).....	72
7.13.2	External control variable (External measurement probe)	73
7.13.3	Internal and external control parameter sets	77
7.13.4	Self Adaption.....	78
7.14	ALARMS, WARNINGS AND ERRORS	80
7.14.1	Overtemperature protection and checking.....	80
7.14.2	Low-level alarm and low-level checking	82
7.14.3	High-level settings.....	83
7.14.4	High-level warning or alarm	84
7.14.5	Pump-motor supervision: Overload or blockage.....	85
7.14.6	Pump-motor supervision: Dry running	85
7.14.7	Fault list „Alarms and Warnings“	86
8	Interfaces - Modules.....	89
8.1	INSTALLING OF MODULES	89
8.2	MENU STRUCTURE FOR ALL MODULES.....	90
8.3	RS-232/485 SERIAL INTERFACE	91
8.3.1	Connecting cables and interface test RS-232	91
8.3.2	Protocol RS-232.....	92
8.3.3	Connecting cable RS-485.....	92
8.3.4	Protocol RS-485.....	93
8.3.5	Write commands (Data commands to the thermostat)	93
8.3.6	Read commands (Data requested from the thermostat)	94
8.3.7	Error messages.....	96
8.3.8	Driver software for LABVIEW®.....	96
8.4	ANALOGUE MODULE.....	97
8.5	CONTACT MODULE	98
8.5.1	Contact module LRZ 915 with three inputs and three outputs	98
8.5.2	Namur-Contact module LRZ 914 with only one input and one output.....	99
9	Maintenance	100
9.1	CLEANING	100
9.2	DEVICE STATUS	100
9.2.1	Interrogating the device type.....	100
9.2.2	Software version	100
9.2.3	Serial numbers.....	100
9.2.4	Device data	101
9.2.5	Fault memory	101
9.3	SERVICING REPAIR AND DISPOSAL INFORMATION	102
9.3.1	Servicing	102
9.3.2	Servicing intervals.....	103

9.3.3	<i>Cleaning the condenser</i>	103
9.3.4	<i>Testing the heat transfer liquid.....</i>	103
9.3.5	<i>Repair information.....</i>	104
9.3.6	<i>Disposal information.....</i>	104
9.3.7	<i>Disposal of the refrigerant.....</i>	104
9.3.8	<i>Disposal of the packaging.....</i>	104
9.4	SERVICE, ORDERING REPLACEMENT PARTS AND RATING LABEL	105
10	Accessories.....	106
11	Technical data and diagrams.....	108
12	Index	113

CONFIRMATION

Explanation of signs:



Caution: This sign is used where there may be injury to personnel if a recommendation is not followed accurately or is disregarded.



Note: Here special attention is drawn to some aspect. May include reference to danger.



Reference: Refers to other information in different sections.

1 Safety information

1.1 General safety information

A laboratory thermostat heats, cools and circulates liquids according to specified parameters. This involves hazards due to high or low temperatures, fire and general hazards due to the application of electrical energy.

The user is largely protected by the application of relevant standards.

Further hazard sources may arise due to the type of tempering medium, e.g. by exceeding or undercutting certain temperature thresholds or by the breakage of the container and reaction with the heat transfer liquid.

It is not possible to consider all eventualities. They remain largely subject to the judgment and responsibility of the operator.

The equipment may only be used as prescribed and as described in these operating instructions. This includes operation by instructed specialist personnel.

The equipment is not rated for use under medical conditions according to DIN EN 60601-1 or IEC 601-1.

Classification in accordance with EMC requirements of DIN EN 61326-1			
Device	Immunity	Emissions class	Customer power supply
Proline Edition X cooling thermostat	Type 2 in accordance with DIN EN 61326-1	Emissions Class B in accordance with CISPR 11	Only for EU Domestic connection value ≥ 100 A
Proline Edition X cooling thermostat	Type 2 in accordance with DIN EN 61326-1	Emissions Class B in accordance with CISPR 11	the rest of the world (outside EU) Unrestricted

Instructions for Class A digital devices, USA:

"This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to Part 15 of the FCC (Federal Communication Commission) Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense."

"This device complies with Part 15 of the FCC (Federal Communication Commission) Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

Instructions for Class A digital devices, Canada:

"This Class A digital apparatus complies with Canadian ICES-003" (ICES = Interference Causing Equipment Standards).

« Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada ».

1.2 Other safety information

- Only connect equipment to PE grounded mains sockets.
- At higher operating temperatures, parts of the bath cover can reach surface temperatures exceeding 70 °C. Be careful when touching it → Risk of burning!
- Use suitable hoses (⇒ 6.3).
- Secure hose against slippage with the aid of hose clips. Avoid kinks in the hoses.
- Check hoses from time to time for any possible material fatigue.
- Thermal medium hoses and other hot parts must not come into contact with the mains cable.
- With the use of thermostats as circulating thermostats hot liquid can be emitted when the hose breaks, presenting a hazard to persons and material.
- If no external load is connected, the pump outflow must be closed (use screw plugs) and the bypass valve must be set to "internal" (⇒ 4.3).
- Take into account the thermal expansion of the heat carrier oils with increasing bath temperature.
- Irritant vapors may develop, depending on the heat transfer liquid and operating mode used. Always ensure that the vapors are adequately extracted. Use the bath cover.
- When changing the heat transfer liquid from water to a thermal transfer medium for temperatures above 100 °C, carefully remove all water residues, including from the hoses and loads. **When doing this, also open the screw plugs (HKN 065) (⇒ 3) of the pump outputs and inputs and blow compressed air through all the pump outputs and inputs.** → Risk of burning due to delay in boiling!
- Withdraw the mains plug before cleaning, maintenance or moving the thermostat.
- Specialist personnel must only carry out repairs in the control section.
- Figures of temperature constancy and display accuracy apply under normal conditions according to DIN 12876. Electromagnetic high frequency fields may in special cases lead to unfavorable values. Safety is not impaired.
- The following action may start the thermostat unintentionally from the standby mode: Previously activated timer mode (⇒ 7.12), "Start" command via interfaces (⇒ 8).

1.3 EC conformity



The device complies with the basic health and safety requirements outline in the Directives listed below.

- Machinery Directive 2006/42/EC
- EMC Directive 2014/30/EU

LAUDA DR. R. WOBSE GMBH & CO. KG – Pfarrstraße 41/43 –
97922 Lauda-Königshofen – Germany



The device does not fall under Pressure Equipment Directive 2014/68/EU because the device is only classified as high as Category 1 and is covered by the Machinery Directive.

2 Brief operating instructions



These brief instructions shall give you the possibility to operate the unit quickly. For safe operation of the unit, it is necessary to read carefully all the instructions and safety notes!

1. Assemble unit and add items as appropriate (⇒ 6.1).
The unit may NEVER be overturned nor put upside down!
Take care of the hose tubing connections (⇒ 6.3 and 6.4).
2. Fill the unit with corresponding heat transfer liquid (⇒ 6.3). The units are designed for operation with non-flammable and flammable liquids to DIN EN 61010-2-010. → Take care of the level of the heat transfer liquid! (⇒ 6.2).
3. Compare the information on the rating label with the supply details.
4. Connect the unit only to a socket with a protective earth (PE) connection.



5. Check whether the main fuse-switch at the back is in the "On = —" position.




6. Switch the unit on with the switch at the front.




7. With set the overtemperature cut-off point to a value clearly above room temperature (⇒ 7.14.1).

8. Now you see the current bath temperature in the display, for example:


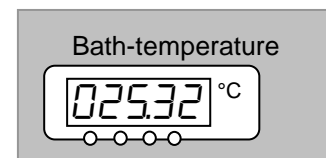



If instead, a warning or error message is displayed, then refer to Section 7.14.

Menu structure: Command remote control

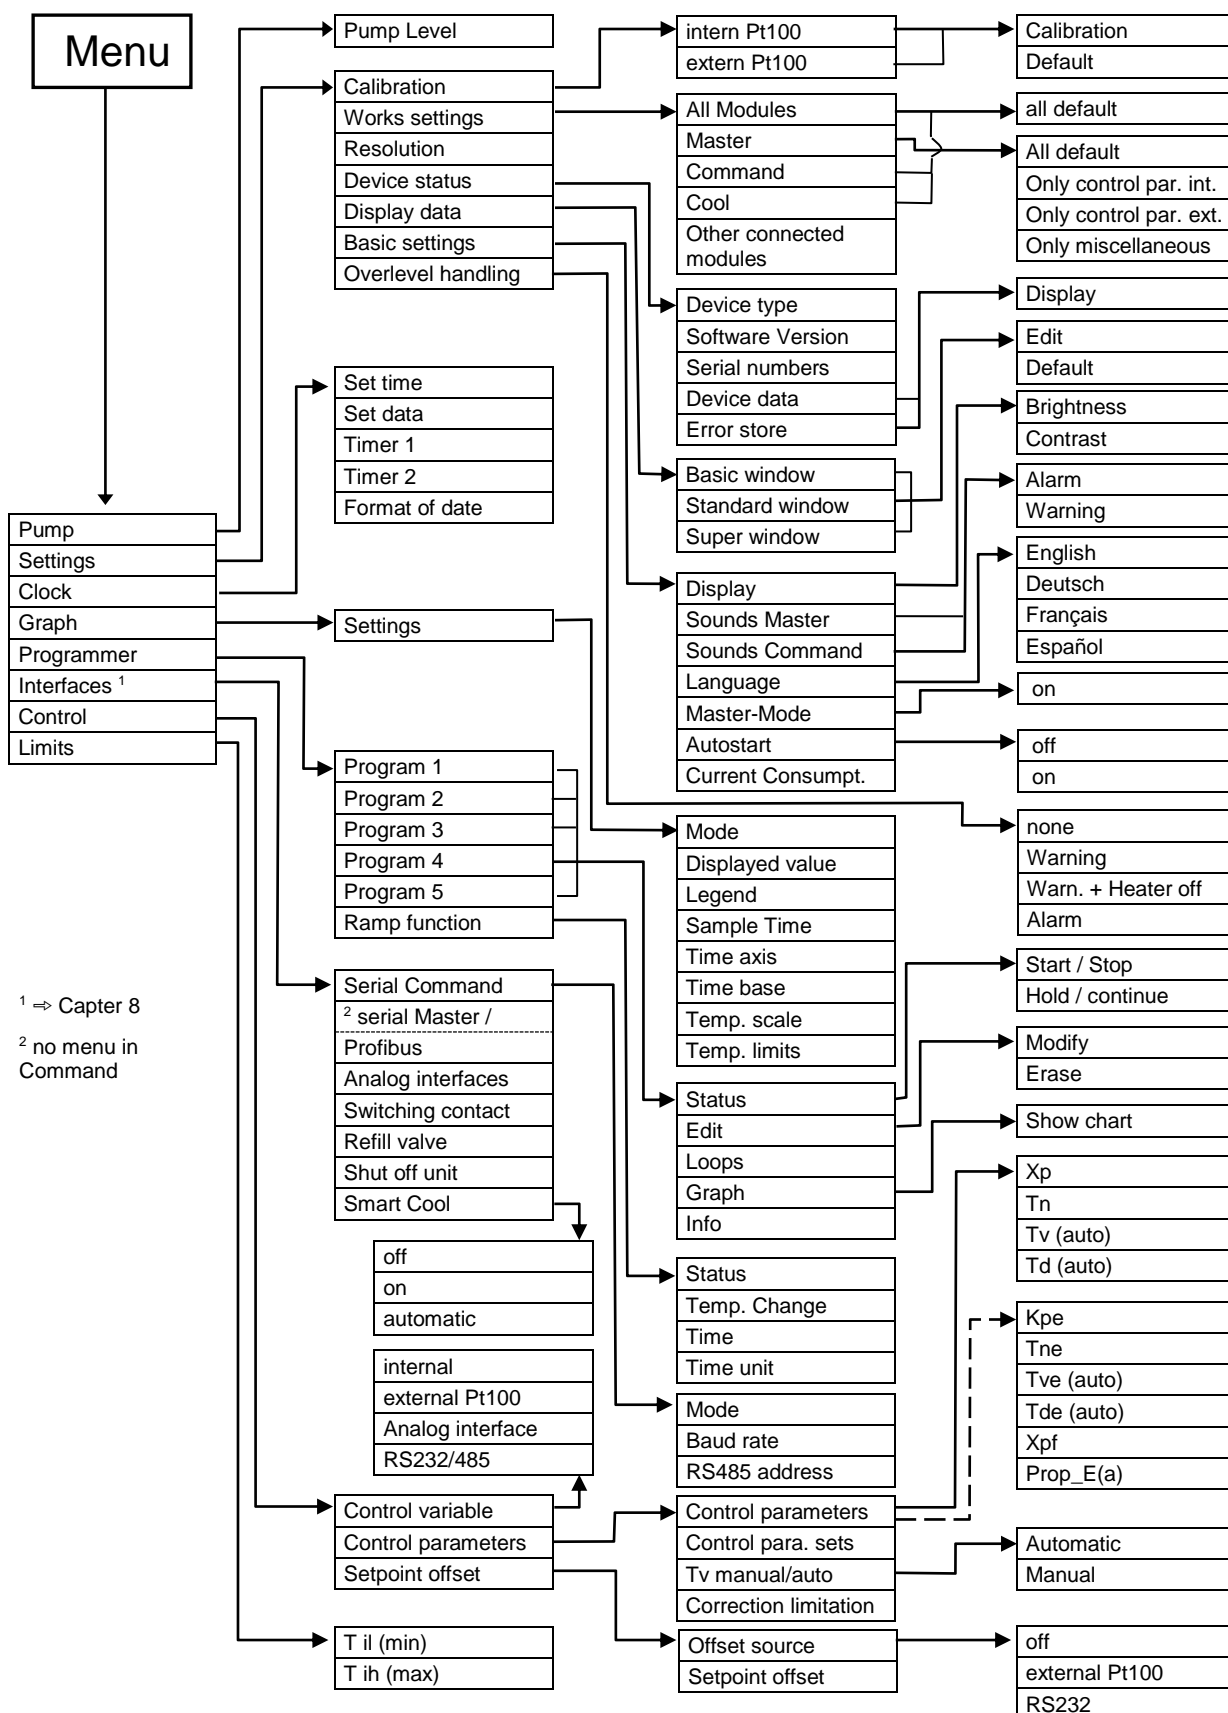

3 Controls and functional elements

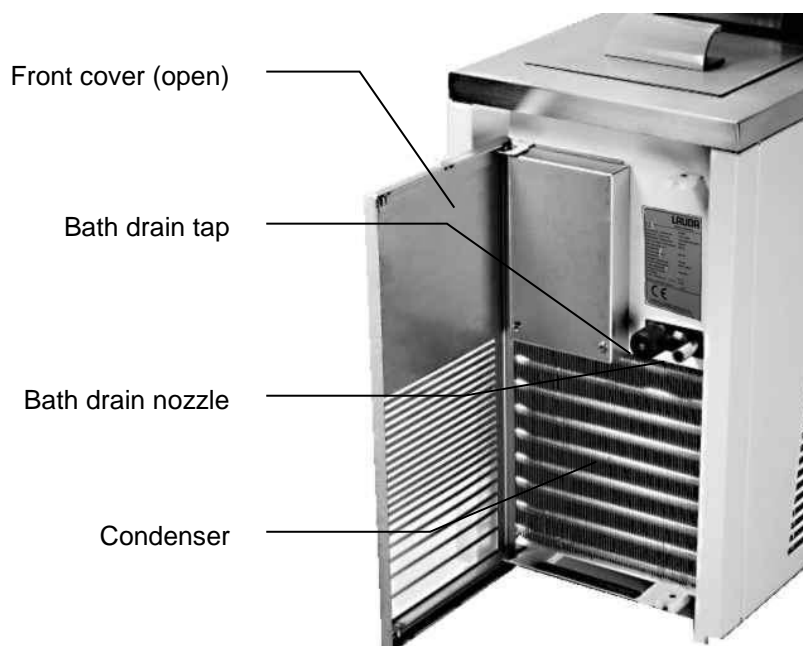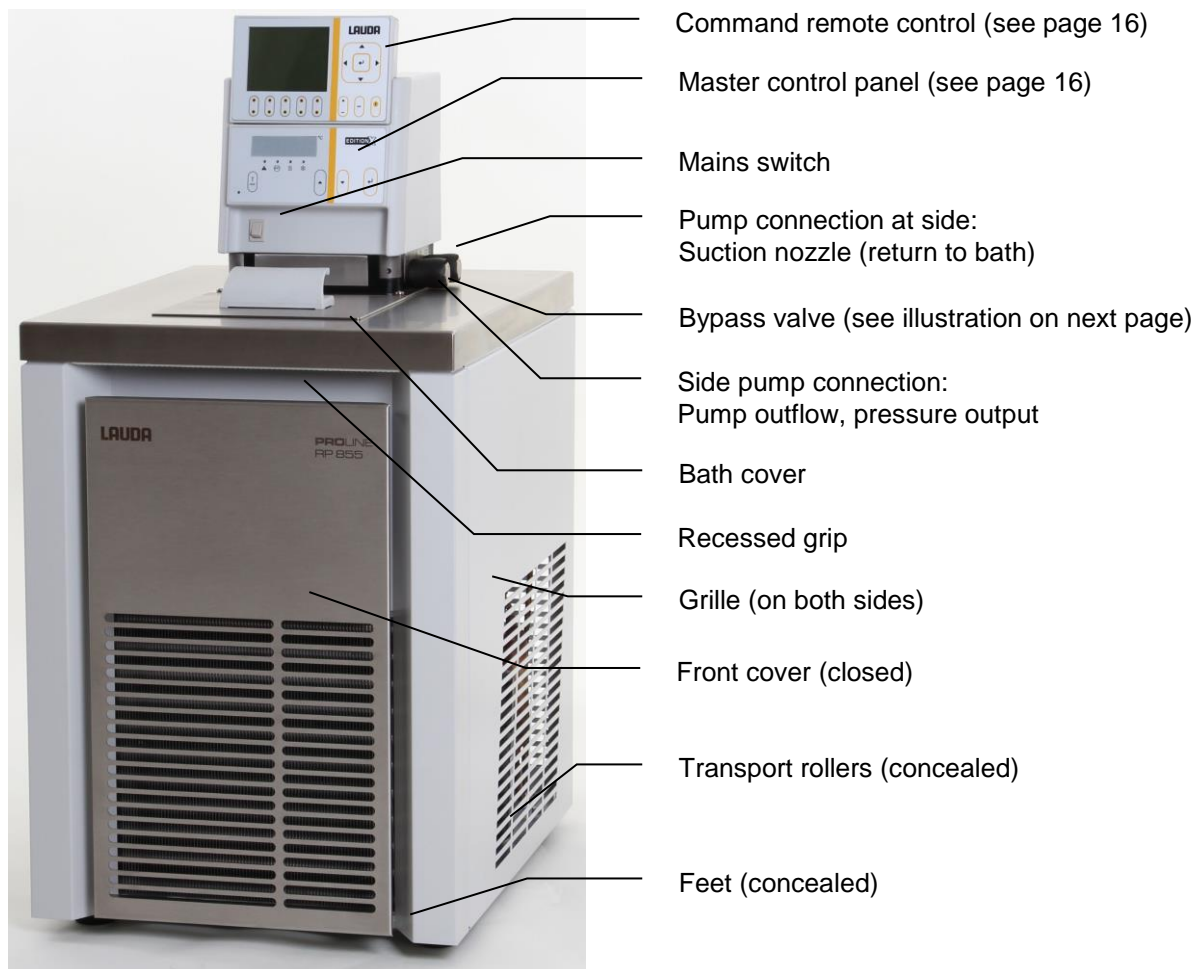


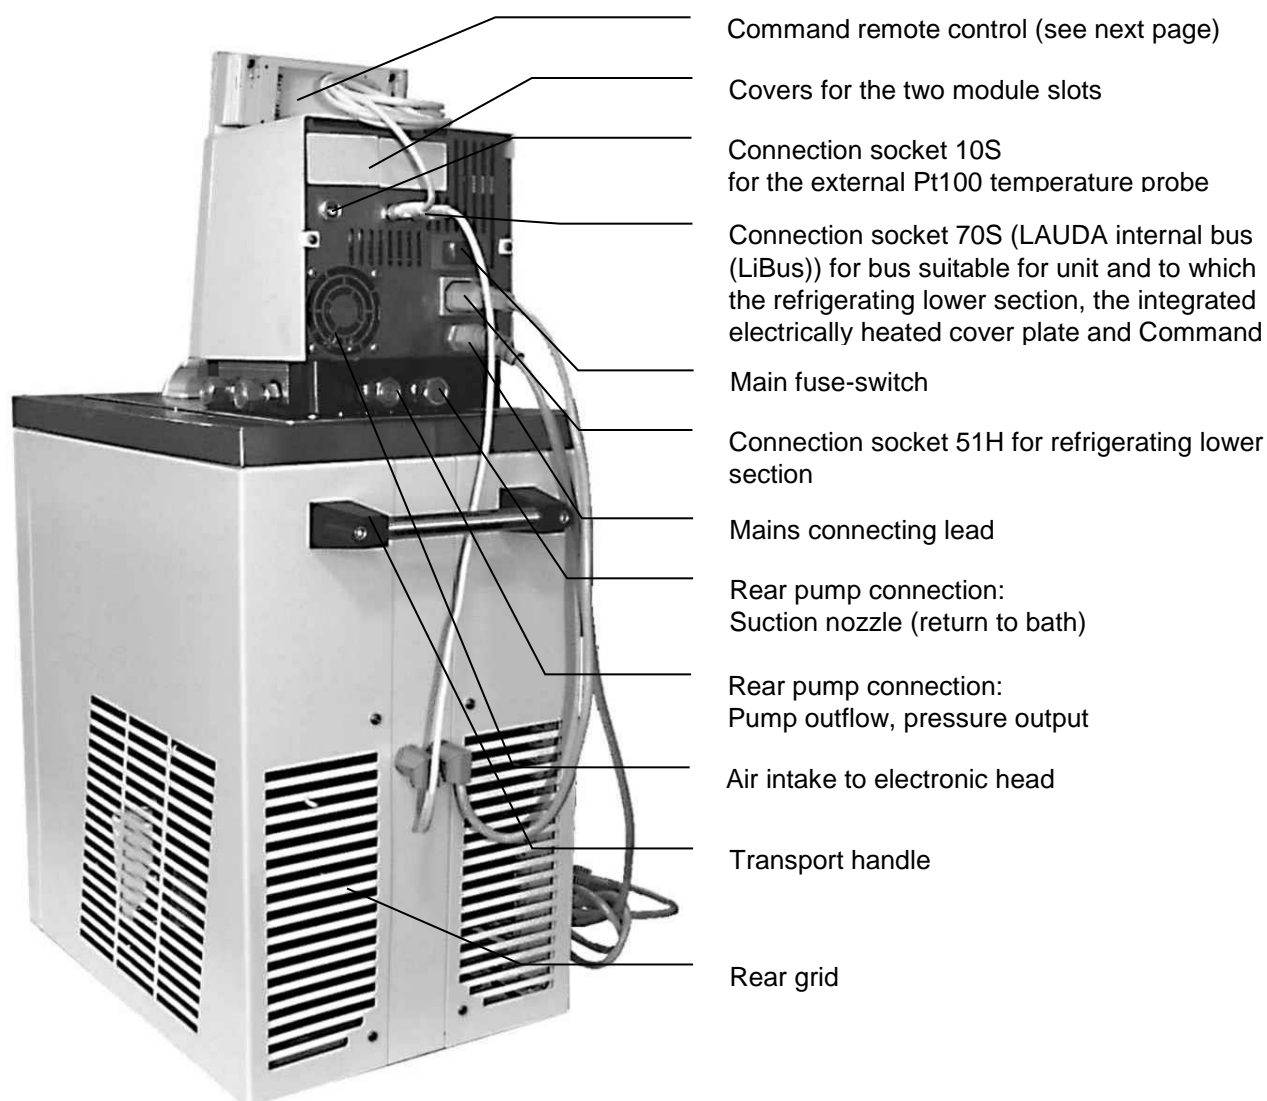


Bypass valve
(in "external" position)

Side pump connection:
Pump outflow, pressure output
(closed off with screw plug)

Side pump connection:
Suction nozzle (return to bath)
(closed off with screw plug)

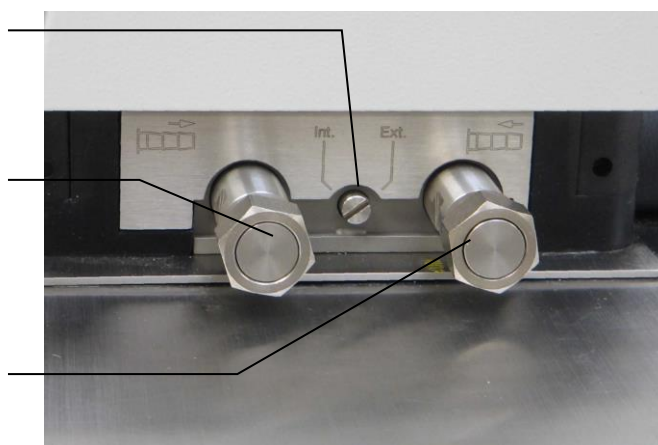

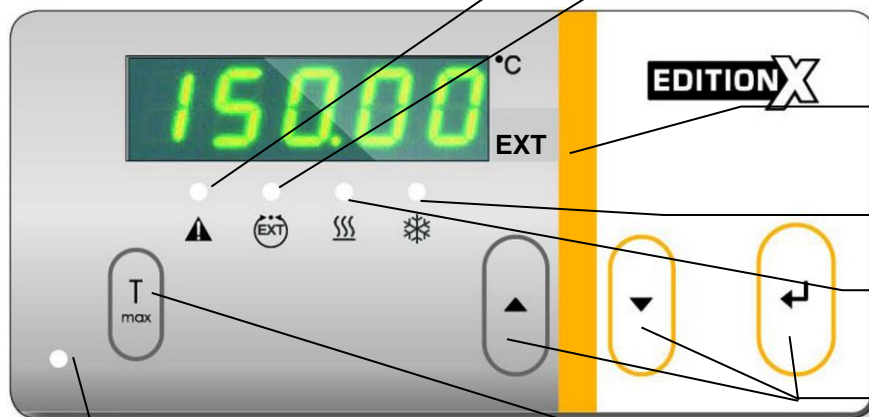Control element: Master

Error signal (red LED blinking)

Bath controlled by external temperature source (green LED lit)

The temperature of an external source is displayed (EXT is lit green)

Cooler active (blue LED is lit)


Heater active (yellow LED is lit)

Select and Enter keys

Overtemperature set point to check or set T_{max} Mains On
(green LED is lit)

Graphical display, here in the standard window displaying the values:

- Actual temperature T_{int} of internal bath temperature probe
- Setpoint temperature T_{set}
- Actual temperature T_{ext} of the external temperature probe
- Bath level
- Pump level

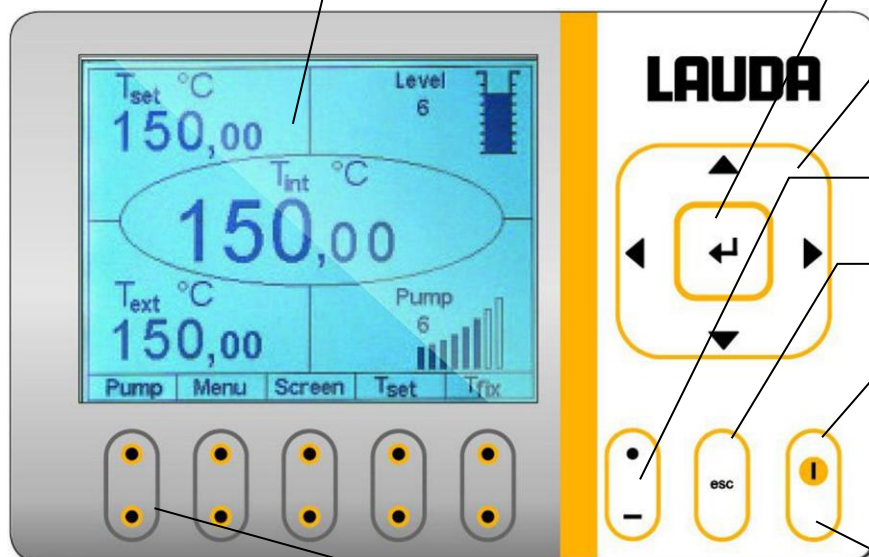Control element: Command remote control

Enter key

Cursor key

Decimal point or "-" symbol

Escape key to quit a window without any changes

Standby key brings the thermostat into the idle mode. Heater, refrigerating machine and pump are switched off

Yellow Stand-By LED

Five soft-key duo-keys – their associated functions are shown in the display.

RS-232/485 socket
(hidden on the back Command)

4 Unit description

4.1 Environmental conditions

The operation of the thermostats is only allowed under the following conditions as specified in DIN EN 61010-2-010:2003 and DIN EN 61010-1:2001:

- Indoor use only.
- Elevation up to 2000 m above sea level.
- Foundation must be dense, even, non-slippery and non-flammable.
- Ambient temperatures range (\Rightarrow 11 Technical data).
Use only within this range for an undisturbed operation.
- Mains supply voltage fluctuations (\Rightarrow 11 Technical data).
- Relative humidity (\Rightarrow 11 Technical data):
- Transient over voltage according to Installation Categories (Over voltage Categories) II.
- Pollution degree: 2.

4.2 Device types

The type designation of the Proline Low-Temperature Thermostats comprises the prefix R (to designate the refrigeration machine), a P for Proline, the bath volume in liters and the lowest bath temperature (guide figure without arithmetic sign).

Examples: RP 855 is a low-temperature thermostat with 8-liter bath and -55 °C minimum temperature.

RP 1845 is a low-temperature thermostat with 18-liter bath and -45 °C minimum temperature.

4.3 Varioflex pump

All units are fitted with a Varioflex pump with an 8-stage variable drive. The pump power can therefore be optimally matched to the relevant task: High pump pressure when, for example, long hoses pass to external loads or circulation is to be provided for a large bath. Low pressure when the heat input into the bath must be low.

As a pressure/suction pump, the Varioflex pump enables the very effective supply of pressure-sensitive glass reactors, which have a minimum permissible pressure rating. Furthermore, open vessels can be operated when a constant level controller (accessory LCZ 0660) is used.

At the right-hand side and at the back of the unit outflow and inflow nozzles are fitted for external loads. This means that up to two external loads can be directly connected without a distributor. Connections, which are not required, must be closed off with the supplied caps and union nuts. A bypass valve can subdivide the total volume flow variably between the bath (internally) and the connected load (externally). Consequently, no "pump short circuit" is needed. If no load is connected to the pump connector, the bypass valve must be set to the "internal" position for the best bath circulation.

In the heating range, the Varioflex pump operates up to viscosity values of 150 mm²/s. In the closed-loop control mode 50 mm²/s should not be exceeded. The temperature control is the best with 30 mm²/s and lower viscosity.

With small bath coolers (e.g. RP 845) power level 1 to 3 is practicable.

For operation as a circulating thermostat with an external load, a higher power level is practicable to maintain the temperature difference low, among other things also with higher temperatures in conjunction with oils as heat transfer liquid.

The pump connections on the unit are fitted with M16 x 1 thread.

Pump characteristics (⇒ Section 11).

The pump outflows of the Varioflex pump can be closed off without any impairment to the pump. Here, the "internal" setting of the bypass controller is recommended.

4.4 Materials

All parts being exposed to the heat transfer liquid are made of high quality material appropriate to the operating temperature. Non-rusting stainless steel and high quality temperature-resistant, primarily solvent-resistant plastics are used.

4.5 Temperature display, control and safety circuit

In the Master Version, the units are equipped with a 5-character green LED display, which is used for the display of the measurements and settings, as well as the operating status. The entry of setpoints and other settings occurs under menu guidance via four keys.

The extra features of the Command Version include a removable console with a backlit graphical display. The entry of the setpoint and other settings occurs under menu guidance via situation-dependent cursor keys and soft keys.

A Pt100 temperature probe acquires the outflow temperature in the bath. A high-resolution A/D converter processes the measurement. Further measurement conditioning occurs using a special control algorithm for controlling the heater actuator, which has a low reactive effect on the mains, and the SmartCool refrigeration equipment together with further transducers.

An external Pt100 can be connected via a socket (10S) for the acquisition of an external temperature. This value can be displayed and, if required, used as the controlled variable with external control (Master) switched on. In this way, the system controls the external measurement and not the outflow temperature (⇒ 7.7.4).

The safety system conforms to DIN EN 61010-2-010. The SelfCheck Assistant monitors about 50 unit parameters. A dual-channel system is used in which two microcontrollers monitor one another. Along with the bath temperature measurement and control probes, there are also two safety temperature probes (Pt100) for the safety circuit for the overtemperature cut-off and for monitoring the bath temperature probe.

The overtemperature cut-off point is displayed on pressing the key  on the Master.

Changing the overtemperature cut-off point: (⇒ 7.2 Switching on) on page 26.

The bath level is acquired by the SelfCheck Assistant in 8 stages. A permanent display is provided only with the Command remote control. If the minimum level is undercut, the pump, heater and the SmartCool System refrigerating machine are switched off. The reaction of the thermostat in case of overfill can be set to simply display a warning, to display a warning and switch off the heater or to switch off the unit completely with pump, heater and SmartCool System refrigerating machine.

When the level is too low, with overtemperature, or with other alarms the SelfCheck Assistant switches the heater off on all poles. The pump and the refrigerating machine are also switched off. This switch-off under fault conditions is retained, i.e. after the fault is rectified, the fault must be reset

(released) on the Master operating panel with the  key.

Other unit functions are described in the appropriate sections and in Section 7. (Starting up).

4.6 Programmer and ramp function

Master Version:

No programmer provided.

Command remote control:

The units are equipped with a programmer function, which enables five temperature/time programs to be saved. Each program consists of a number of temperature/time segments. These also include details of how often the program is to be executed. Up to 150 segments can be distributed amongst the five programs.

With the ramp function, a rate of change can be directly entered in °C/unit time (\Rightarrow 7.10).

4.7 Interfaces

Master Version:

The Master unit is equipped with the following sockets at the back of the control head:

- For the connection of an external Pt100 temperature sensor (10S).
- Two sockets (70S) for the connection of components via the LAUDA equipment bus (cooling section, Command remote control, external solenoid valve, etc.).

Command remote control:

The Command unit is equipped as standard with the following sockets:

- For the connection of an external Pt100 temperature probe (10S).
- Two sockets (70S) for the connection of components via the LAUDA equipment bus (cooling section, Command remote control, external solenoid valve, etc.).
- An RS-232/485 interface (65S) at the back of the Command remote control.

4.8 Interface modules (accessories)

The Master and Command can be supplemented with further interface modules, which are simply inserted into two module slots (see Section 3) at the back of the control head.

The following modules are currently available:

1. **RS-232/485 Interface Module** (Order No. LRZ 913) with 9-pole SUB-D socket. Electrically isolated through optocouplers. Command set largely compatible with the ECO, Ecoline, Integral XT and Integral T Series. The RS-232 interface can be directly connected to the PC with a cable wired 1:1 straight through (Order No. EKS 037). Further details can be found in section 8.3.
2. **Analog Module** (Order No. LRZ 912) with two inputs and two outputs on 6-pole DIN socket. The inputs and outputs can be set independently as 4 – 20 mA, 0 – 20 mA or 0 – 10 V interface. Further details can be found in section 8.4.
3. **Contact Module** (Order No. LRZ 915) on 15-pole SUB-D socket. With three relay contact outputs (changeover, max. 30 V/0.2 A) and three binary inputs for control via external voltage-free contacts. Plug 15-pole, Order No. EQM 030 and plug case Order No. EQG 017. Further details can be found in section 8.5.

4. **Contact Module** (Order No. LRZ 914) with connector to NAMUR NE28. Functionality as LRZ 915, but only one output and one input on each of two DIN sockets. Coupling socket 3-pole, LAUDA Order No. EQD 047 and coupling plug 3-pole, LAUDA Order No. EQS 048. Further details can be found in section 8.5.
5. **Profibus Module** (Order No. LRZ 917).
Further details can be found in the operating instructions of the **Profibus Modules** YAAE0020.
6. **Pt100-/LiBus-Modul** (Order No. LRZ 918).
A Lemo socket (10S) for connecting an external Pt100 temperature probe and a socket (70S) for connecting components via the Lauda internal bus, LiBus (Command remote control unit, shut down unit/reverse flow protection, cooling water valve).
Plug: 4-pin Lemos plug for Pt100 connection, catalog number EQS 022.

4.9 Cooling unit

The refrigerating machine mainly consists of one or two fully hermetically sealed compressors. The heat from the condensation process and the motor is dissipated via a lamellar condenser. Here, fresh air is drawn in at the front of the unit, heated towards the back and output at the side. To ensure proper air circulation the ventilation slots must not be restricted. See Section 6.1.

The coolers of the Proline Series are equipped with the SmartCool technology which makes optimum use of the compressor and only then cools when refrigerating capacity is demanded by the controller. To achieve this, a number of sensors in the cooling circuit monitor the operating conditions.

The compressors are equipped with overtemperature cutouts, which respond to the compressor temperature and the compressor current consumption. In addition, the refrigeration system is backed up by a pressure control device against over pressure. The cooling unit is normally switched in automatically, but can be switched manually via the operating menu. (⇒ Section 7.6 with Command and with Master).

When the fault circuit trips, the cooling unit is also switched off.

Cooling curves (⇒ Section 11).

4.10 Avoidance of dewing

In order to avoid dewing on the edge of the bath when using the low temperature thermostats RP 855, RP 870, RP 890 and RP 1290, these instruments are equipped with a device for heating the edge of the bath, using the waste heat of the cooling unit.

As a standard feature, the minimum temperature thermostats RP 890 and RP 1290 are equipped with an additional electric heating of the bath bridge. This can be ordered as an option for RP 855 and RP 870.

With the bath covers of the minimum temperature thermostats, RP 890 and RP 1290, it is possible, by means of a nipple, to let nitrogen or dry air into the bath with a low volume flow.

4.11 Heater rating and power consumption from the mains


The Proline Low-Temperature Thermostats have an extraordinarily high heater rating of 3.5 kW maximum. If your mains fuse is rated below 16 A, the current consumption can be reduced in steps from 16 A to 10 A (⇒ 7.7.5). The maximum heater rating of 3.5 kW is then, of course, also reduced accordingly.

5 Unpacking

Keep your original packing of your thermostat for later transport.

After unpacking, firstly check the device and accessories for any damage in transit. If, contrary to expectations, there is visible damage to the unit, the shippers or the postal service must be immediately informed, so that an investigation can be made. Please also inform the LAUDA Service Constant Temperature Equipment (Contact ⇒ 9.4).

Standard Accessories:

Catalogue number	Quantity	Article	
YACE0100	1	Operating Instructions	for all cooling thermostats
LRT 914-2	1	Command remote control	for all cooling thermostats
LDSM2002	1	Software LAUDA Wintherm Plus for PC	for all cooling thermostats
HDQ 108	1	Bath cover	at RP 845, RP 855 and RP 870
HDQ 109	1	Bath cover	at RP 1840, RP 1845 and RP 3530
LCZ 9671	1	Bath cover for bath bridge heating	at RP 890 and RP 1290
HKO 026 (UD 413)	2	Hose olive Ø 13 mm	for all cooling thermostats
HKM 032	4	Union nuts for olives (M16 x 1)	for all cooling thermostats
HKN 065	4	Screw plugs (for M16 x 1)	for all cooling thermostats
EKS 073	1	T-piece adaptor cable for the internal LAUDA device bus (LiBus)	for all cooling thermostats
EZB 260	1	Warning label "Hot Surface" 	for all cooling thermostats

6 Preparation

6.1 Assembly and siting



- Site the unit on a flat surface
- The unit must not be put into operation if its temperature during storage or transport has dropped below the dew point.
Wait for about one hour.
- The unit may NEVER be overturned nor put upside down!
- Do not cover the ventilation openings at the back of the control head and on all sides of the lower section of the unit.
- Leave at least 40 cm of free space on all sides.
- For operation as bath thermostat, set the bypass valve to internal (without external loads) (⇒ Section 3).
- Plug the (high resistance) connector into the corresponding socket 51H on the back of the control head, the Bus-cable into the plug 70S and secure both.
- Only RP 890 C and RP 1290 C: In case of disturbing dewing, connect the heating of the bath bridge. Plug the supplied T-piece adaptor cable for the LAUDA device bus into the 70S socket and secure it. Connect it with the connection cable of the bath bridge heating.
- Plug the bus connector of the Command console also into the 70S socket or into the T-piece and secure it.
- Further T-adaptors are available as accessories EKS 073.
- Avoid condensation of air humidity: Connect nitrogen or dry air with a low volume flow for superposition to the nipples of the bath covers of the minimum temperature thermostats RP 890 C and RP 1290 C.



Operation with external loads

(Circulating thermostat) continue at (⇒ 6.4).




- Check whether the pump connectors at the side and back are fitted with sealing caps (⇒ 3) or that hoses are fitted for external loads.
- With bath temperatures, over 70 °C the supplied self-adhesive label should be applied on the bath at an easily visible point.
- Do not carry out technical changes on the device!
In particular, it is not allowed to bore into the edges of the bath!



- The unit can safely operate up to an ambient temperature of 40 °C.
- An increased ambient temperature reduces the cooling capacity.

6.2 Filling and draining

Filling

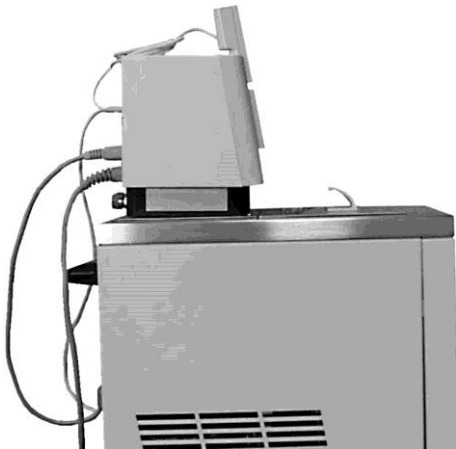

- Close the drain cock.
- Carefully remove all residues of the previous heat transfer liquid (blow dry and remove screw plugs!).
- Maximum filling level is up to 10 mm below the top edge of the bath. Overfilling leads to the display of the warning **WARN 103** (⇒ 7.14.4).
- Best operation is with a level 20 — 80 mm below the top edge of the bath.
- The cooling pipe of the evaporator should be covered. Depending on the operation up to three pipe windings might be uncovered.
- Low-level cut-off occurs at about 95 mm below the top edge of the bath.



- The units are designed for use with non-flammable and flammable liquids to DIN EN 61010-2-010. Flammable heat transfer liquids (⇒ 6.3) may only be used below the flash point.
- When using heat transfer oils note that they expand on heating (approx. 10 %/100 °C).
- With enclosed external loads, the overall expansion takes place in the bath.
- Ensure that with the connection of an external load, the liquid level does not drop impermissibly due to filling the load → top up with liquid if necessary.
- Set the upper and lower temperature limits (⇒ 7.8.3) in accordance with the limits of the heat transfer liquid in use.

Draining



Drain cock

- Switch off the thermostat withdraw the mains plug.
- Let out the heat transfer liquid through the drain cock; fit a hose when doing this.
- On thermostats, the drain cock is located behind the front panel.
- Completely drain the bath, external consumers, accessories and hose connections and flush or clean them (e.g. with new heat transfer liquid).



- Follow the regulations for the disposal of used heat transfer liquid.



Do not drain heat transfer liquid when it is hot or at bath temperatures below 0 °C!

6.3 Heat transfer liquids and hoses**Approved heat transfer liquids**

LAUDA designation	Temperature range	Chemical designation	Viscosity (kin)	Viscosity (kin) at temperature	Flash point	Packing drum Catalogue number		
						5 L	10 L	20 L
	from °C to °C		mm ² /s at 20 °C	mm ² /s				
Aqua 90 ①	5 – 90	Decalcified water	1	--	--	LZB 120	LZB 220	LZB 320
Kryo 95	-95 – 60	Silicone oil	1.6	20 at -80 °C	64	LZB 130	LZB 230	LZB 330
Kryo 60	-60 – 60	Silicone oil	3	25 at -60 °C	62	LZB 102	LZB 202	LZB 302
Kryo 51	-50 – 120	Silicone oil	5	34 at -50 °C	120	LZB 121	LZB 221	LZB 321
Kryo 40	-40 – 60	Hydrous alcalisalt solution	2.36	24 at -40 °C	--	LZB 119	LZB 219	LZB 319
Kryo 30 ②	-30 – 90	Monoethylene glycol/ water	4	50 at -25 °C	119	LZB 109	LZB 209	LZB 309
Kryo 20	-20 – 170	Silicone oil	11	28 at -20 °C	170	LZB 116	LZB 216	LZB 316
Therm 160	60 – 160	Polyalkylene glycol	141	28 at 60 °C	260	LZB 106	LZB 206	LZB 306
Therm 180	0 – 180	Silicone oil	23	36 at 0 °C	250	LZB 114	LZB 214	LZB 314
Therm 250	50 – 250	Silicone oil	125	25 at 70 °C	300	LZB 122	LZB 222	LZB 322



- ① At higher temperatures → Evaporation losses → Use bath covers.
Only use distilled water or fully demineralized high purity water after adding 0.1 g of soda (Na₂CO₃ sodium carbonate) / liter of water, → Risk of corrosion!
- ② Water content falls with longer operation at high temperatures → Mixture becomes flammable (flash point 119 °C). → Check the mixture ratio with a hydrometer.
- At devices with nickel-plated evaporator (RP 845, RP 855, RP 890, RP 1290 and RP 1845) you must not use acid, aqueous heat transfer liquids resp. detergents (ph-value < 7).
 - With the selection of the heat transfer liquid, it should be noted that impairment of the properties is to be expected at the lower limit of the temperature range due to increasing viscosity. Therefore, only make maximum use of temperature ranges when essential.
 - Application ranges of heat transfer liquids and hoses are general figures, which may be restricted by the operating temperature range of the units.




With silicone rubber, silicone oils lead to substantial swelling. Never use silicone oil with silicone hoses.

Safety data sheets can be ordered if required.

Hoses

a) Elastomer hoses

Hose type	Internal width Ø mm	Temperature range °C	Field of application	Catalogue number
EPDM hose uninsulated	9	10 — 90	For all LAUDA heat transfer liquids except Ultra 350 and mineral oils	RKJ 111
EPDM hose uninsulated	12	10 — 90	For all LAUDA heat transfer liquids except Ultra 350 and mineral oils	RKJ 112
EPDM hose insulated	12 External Ø. approx. 30 mm	-35 — 90	For all LAUDA heat transfer liquids except Ultra 350 and mineral oils	LZS 021
Silicone hose uninsulated	11	10 — 100	Water Water/glycol mixture	RKJ 059
Silicone hose insulated	11 External Ø. approx. 30 mm	-60 — 100	Water Water/glycol mixture	LZS 007
<div>  <ul style="list-style-type: none"> – EPDM hose is <u>not</u> suitable for Ultra 350 and <u>not</u> suitable for mineral oils. – With silicone rubber, silicone oils lead to substantial swelling → never use silicone oil with silicone hoses. – Secure hoses against slippage with hose clips. </div>				

b) Metal hoses in non-rusting stainless steel with union nut M16 x 1, internal width 10 mm.

Type	Length (cm)	Temperature range °C	Field of application	Catalogue number
MC 50	50	10 — 400	With simple insulation, for all heat transfer liquids	LZM 040
MC 100	100	10 — 400		LZM 041
MC 150	150	10 — 400		LZM 042
MC 200	200	10 — 400		LZM 043
MK 50	50	-90 — 150	With foam insulation for refrigeration range, for all heat transfer liquids	LZM 052
MK 100	100	-90 — 150		LZM 053
MK 150	150	-90 — 150		LZM 054
MK 200	200	-90 — 150		LZM 055

6.4 Connecting external loads

Operation as circulating thermostat

Bursting of the external consumer due to overpressure

Scalding, frostbite, cutting

- Use a pressure relief device on pressure-sensitive consumers (e.g. glass reactors).



- When used as circulation thermostat, care for shortest hose connections with largest inner diameter as possible. This gives the best flow.
- Push hose with 11 – 12 mm internal width onto hose olive or connect metal hoses (⇒ 6.3) to pump connectors.
- Pump connectors at side:
Inlet and outflow ⇒ see labeling housing.
- Pump connectors at back:
Inlet and outflow ⇒ see labeling housing.
- Set bypass valve to "external".



- If cross-sectional area of tube is too low → temperature gradient between bath and external load due to low flow rate.
- Always ensure the largest possible passages in the external circuit.
- If external control is to be used, provide a Pt100 probe in the external load (⇒ Section 7.7.2 and 7.7.4).
- When tightening the union nuts on the pump nipple AF 19, use a wrench AF 14 to counter the tightening torque (see figure).



- With loads at a higher position and with stationary pump and ingress of air into the thermostatic circuit, the external volume can drain away, even with closed circuits → Risk of thermostat overflowing!
- Secure hoses against slippage with hose clips.
- Unused pump connectors must be closed off.

7 Starting up

7.1 Mains connection

Compare the rating on the nameplate (back of control head and behind the front panel) with the mains voltage.



- Connect unit only to sockets with a protective earth conductor (PE).
- No liability is accepted for incorrect mains connections.
- Ensure that pump connectors without external loads are closed off.
- Ensure that the unit is filled according to Section 6.2.



Note for electric installation on site:

The devices must be protected with a 16 ampere circuit breaker fitted during installation.
Exception: Devices with 13 ampere UK plugs.

7.2 Switching on



Check whether the main fuse switch at the back is in the "On = —" position.



Switch on the mains switch:

- The green LED for "Mains ON" is lit,
- an acoustic signal is emitted for about 1 second,
- it is quite normal if the refrigerating machine makes a rattling sound for a few seconds.
- The unit starts its self-test. All display segments and symbols appear for about 1 second.




1 s


Self-test



Bath temperature




Overtemp. cut-off




- The momentary bath temperature is displayed,
- the pump starts provided "Standby" or "Manual start" (⇒ Section 7.8.2) has not been programmed,
- all values are accepted which were active before switch-off.



Check or set overtemperature cut-off point:



- The switching point is shown in the LED display on pressing the key .
- Change overtemperature cut-off (⇒ 7.14.1) Overtemperature protection and checking on page 80.
- If necessary, top up heat transfer liquid, this has been pumped out by filling the external load.






Level alarm


- Display for *LEVEL* (low level) appears when the bath has too little liquid.
- Red LED  above the fault triangle  flashes.
- Find cause of fault and, where necessary, top up missing heat transfer liquid (⇒ Section 6.3).
- Press the Enter key.
- Also, press the key if unit has been switched off in the fault state.
- No release is possible on Command remote control!


Command

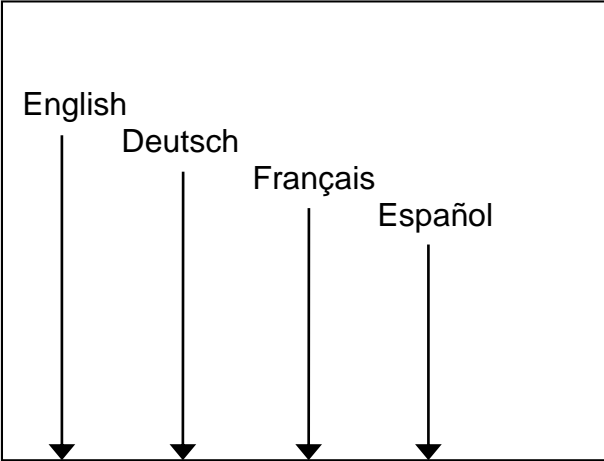

Language

- If the Command remote control is being switched on for the first time, the illustrated window appears automatically, enabling you to select the dialog language with the appropriate soft key.

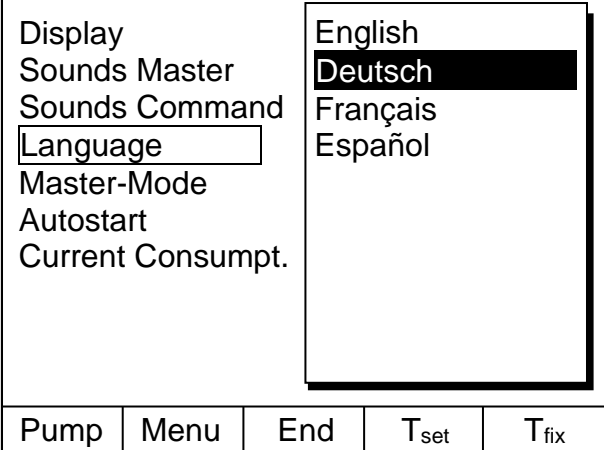

- The dialog language also can be changed later via
→ **Settings** → **Basic settings** → **Language**.
- Mark the required language with ▼ or ▲.
- Confirm the selection with .

7.3 Switching off / standby

Switching off: Set mains switch to position 0. With operation at temperatures below 0 °Celsius only switch off the device via standby, because otherwise severe condensation and dew formation can occur.



Standby operation: Use the key on the command console or by selecting the pump level Zero on the master display. The pump, heating and cooling unit are switched off, but the operating display and the electrical bath bridge heating for RP 890 C and RP 1290 C remain active, so that dew formation and condensation into the bath continue to be suppressed.



However, a started timer (⇒ 7.12) continues to run. Stop as required with Pause.

7.4 Key functions

Your Proline Thermostat is easy to operate.

7.4.1 General key functions and pilot lamps

Master



Enter key:

- From the actual-value display at the main menu level,
- activates input, display flashes,
- saves input, display ceases to flash and menu point is left,
- press for approx. 3 seconds: Exit function and returns to bath temperature display.



or



- Paging with keys is possible within the relevant level, or setting of numerical values

Speeds up entry by moving the counting position to the left:

- a) Keys are pressed and held down **or**
- b) one of the two keys is pressed and held down, followed immediately by brief pressing of the other key.






Moves counting position to the right:





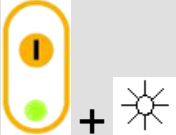

- Switching one **place to the right** occurs by briefly (1 second) releasing the key, followed by another pressing of the key.


Useful additional information:

- Two dots in the Master display indicate that a submenu follows.
- Three dots in the display indicate that a submenu for a module (interface...) or a component (thermostat, Command remote control....) follows. Module/component-specific possible settings are only displayed when the hardware is connected.




	<ul style="list-style-type: none"> – The following always applies: After termination of the relevant settings, they are accepted automatically after approx. 4 s or – the setting is accepted immediately with the Enter key.
	<ul style="list-style-type: none"> – Fault signal: Flashing red Alarm LED and acoustic signal. – An acoustic signal can only sound when it has not been intentionally deactivated! (⇒ 7.8.6).
	<ul style="list-style-type: none"> – The bath control occurs via the external temperature probe when the green LED is lit.
	<ul style="list-style-type: none"> – Heating is active when the yellow LED is lit.
	<ul style="list-style-type: none"> – Cooling is active. When the setpoint temperature is lowered, it may take up to one minute before the blue LED is lit.
EXT	<ul style="list-style-type: none"> – The temperature of the external probe is displayed.

Command	
	<ul style="list-style-type: none"> – Enter key ("Confirm selection") and go back one level.
	<ul style="list-style-type: none"> – Soft key function to confirm a selection or input and to return to the main display window.
	<ul style="list-style-type: none"> – Escape key to quit a window without changes and to go back one level.
	<ul style="list-style-type: none"> – Cursor keys for Up, Down, Left and Right.
	<ul style="list-style-type: none"> – Standby activation (pump, heater and refrigerating machine are deactivated when the yellow LED is lit). However, timer continues to run! Refer to safety information in (⇒ 7.7.3).
	<p>Duo key:</p> <ul style="list-style-type: none"> – Top: Decimal-point key. – Bottom: Key for arithmetical sign.



- Soft keys: 5 duo-keys, which each have the function shown in display above them. Soft-key entries are shown framed in the operating instructions. Example: You would like to change the setpoint temperature then press the duo-key under T_{set}.

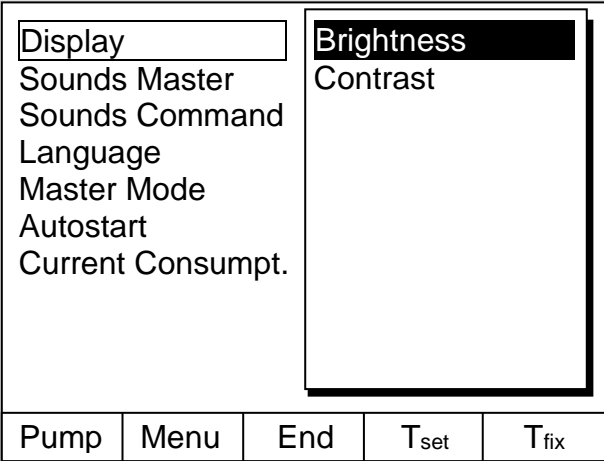


The screenshot shows a menu with options: Display, Sounds Master, Sounds Command, Language, Master Mode, Autostart, and Current Consumpt. To the right, a 'Brightness' submenu is open, showing 'Contrast'. At the bottom are five soft keys: Pump, Menu, End, T_{set}, and T_{fix}.

Brightness Contrast

The brightness and contrast can be set on the Command Console:

- The works setting can be changed via → **Settings** → **Basic settings** → **Display** → **Brightness** or → **Contrast**.
- The brightness of the LCD illumination can be selected from eight steps or switched off completely.
- The contrast can be set in eight steps.

Screen

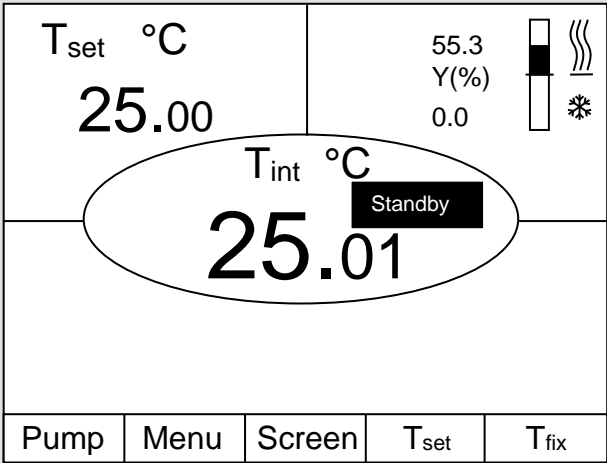


The screenshot shows the 'Basic window' with the following information: T_{set} °C 25.00, 55.3 Y(%) (heating), 0.0 (cooling), and T_{int} °C 25.01. A 'Standby' indicator is shown next to the internal temperature. At the bottom are five soft keys: Pump, Menu, Screen, T_{set}, and T_{fix}.

There are four different screen displays available. The screen is switched over with the soft key Screen:

- Basic window** with the three most important items of information:
 - T_{int}, current bath temperature,
 - T_{set}, setpoint of the bath or external temperature,
 - Information: Heating / cooling. Here, heating is taking place at 55.3 % and 0.0 % cooling.

Soft keys:


- Pump: Set pump level
- Menu: Set unit parameters.
- Screen: Changes between basic, normal, super and graphics recorder windows.
- T_{set}: Changes setpoint temperature.
- T_{fix}: Calling and setting of saved setpoints.

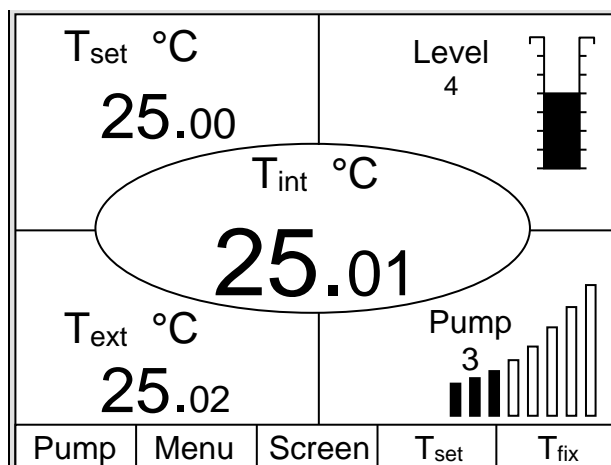

2. Standard window with five important items of information:

- T_{int} , current bath temperature,
- T_{set} , setpoint,
- T_{ext} , current temperature on external probe (if connected),
- Level of heat transfer liquid in cm above the minimum level,
- Pump level of the Varioflex pump.

Soft keys see as above.

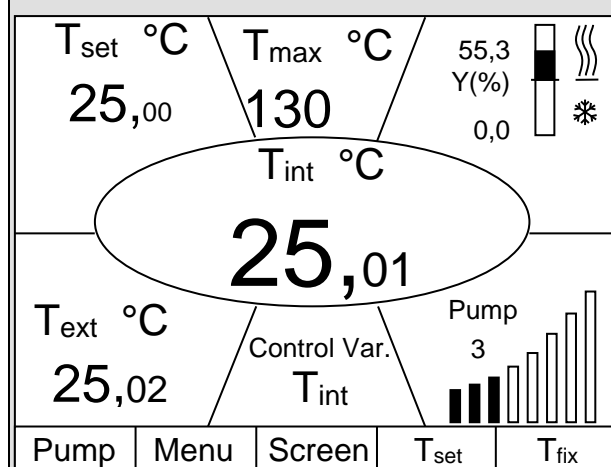

3. Super window with seven items of information:




- T_{int} , current bath temperature.
- T_{set} , setpoint.
- T_{ext} , current temperature on external probe (if connected).
- Overtemperature cut-off point T_{max} .
- Pump level of the Varioflex pump.
- Control variable to T_{int} or T_{ext} .
- Information: Heating / cooling.

Soft keys see as above.

4. Graphical measurement display




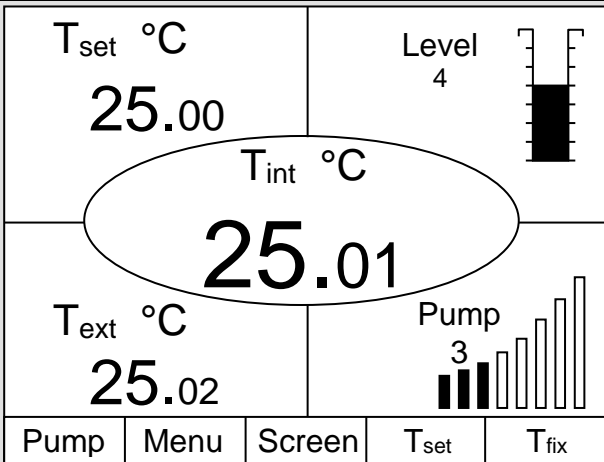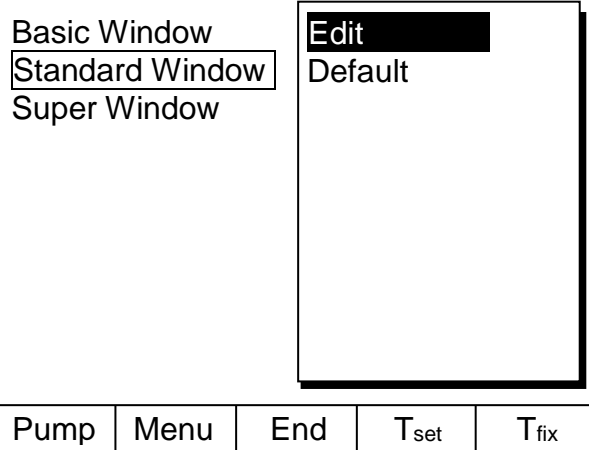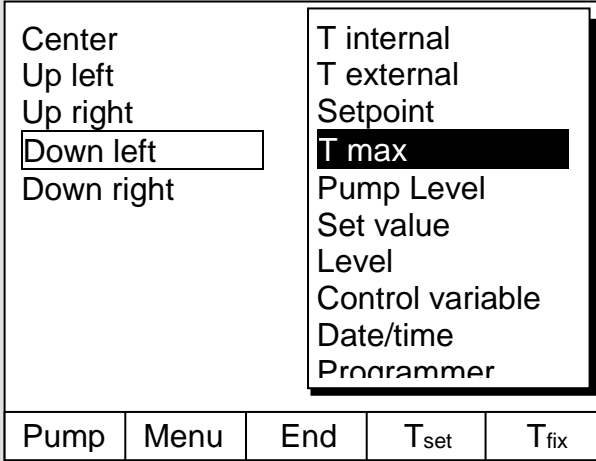



- All temperature values can be shown graphically against time (\Rightarrow 7.9).


7.4.2 Changing window information

Command	Display data								
 <p>The Command window displays: T_{set} °C (25.00), T_{int} °C (25.01), T_{ext} °C (25.02), Level 4, and Pump 3. At the bottom are buttons: Pump, Menu, Screen, T_{set}, and T_{fix}.</p>	<p>You can adapt the information displayed by your Command remote control to your requirements. For example, if you have not connected any temperature probe, you can exchange it in the standard setting of the normal window for the maximum temperature T_{max} (safety cut-off).</p> <p>This is how it is done:</p> <ul style="list-style-type: none"> – Open the unit parameter menu via the soft key Menu. – With ▶ and ▼ change from <table border="1" style="margin-left: 20px; border-collapse: collapse;"> <tr><td>Settings</td><td>→</td></tr> <tr><td>Display Data</td><td>→</td></tr> <tr><td>Standard Window</td><td>→</td></tr> <tr><td>Edit</td><td></td></tr> </table> – ◀ or ▶ takes you to the illustrated window. – ▶ and ▼ marks T_{max} as illustrated. – Confirm selection with ◀ or End, – or quit the window with esc without any changes being made. 	Settings	→	Display Data	→	Standard Window	→	Edit	
Settings	→								
Display Data	→								
Standard Window	→								
Edit									
 <p>The Edit menu shows: Basic Window, Standard Window, Super Window, Edit, and Default. At the bottom are buttons: Pump, Menu, End, T_{set}, and T_{fix}.</p>									
 <p>The T internal menu shows: Center, Up left, Up right, Down left, Down right, T internal, T external, Setpoint, T_{max}, Pump Level, Set value, Level, Control variable, Date/time, and Programmer. At the bottom are buttons: Pump, Menu, End, T_{set}, and T_{fix}.</p>									


7.4.3 Locking the keyboard

The keyboards of the Master and the Command Console can be locked independently of one another. This is especially advantageous when the thermostat is positioned in another room and the Command Console is used as a remote control device. Then the Master keyboard can be locked to prevent unintentional adjustment.

Master	SAFE
 <p>and hold pressed simultaneously for 3 s</p>	Locking: <ul style="list-style-type: none"> – <i>SEt</i> appears for 3 seconds, – then the segments of the first right-hand  are formed, – hold both keys pressed until this display is <u>completely</u> visible.
	<ul style="list-style-type: none"> – <i>SAFE</i> flashes briefly and the display returns to the actual temperature. – The Master keyboard is now locked. – The <i>SAFE</i> display signals the locked state when any Master key is pressed.
 <p>and hold pressed simultaneously for 3 s</p>	Unlocking: <ul style="list-style-type: none"> – For three seconds, then <i>SAFE</i> appears. – Then the segments of the left-hand  are formed. – The actual bath temperature appears again when all the s have been formed.
<p>Bath temperature</p> 	

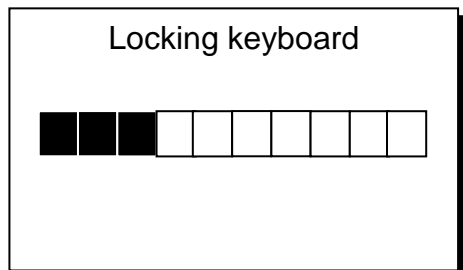

Command

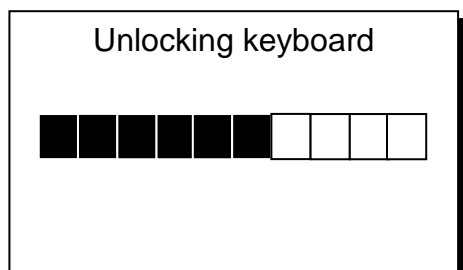Pump	Menu	End	T _{set}	T _{fix}
------	------	-----	------------------	------------------





--	--	--	--	--

Locking:

- Press  and then  and hold pressed simultaneously for three seconds.
- The locking window appears.
- Hold both keys pressed until the progress bar is completely filled.
- Then the display skips back to the previously set Screen mode.
- The soft-key boxes are now blank, indicating that the keyboard is locked.
- On pressing any Master key the display appears:
Keyboard locked

Unlocking:


- Press  and then  and hold pressed simultaneously for three seconds.
- The unlocking window appears.
- Hold both keys pressed until the progress bar is completely filled.

Then the display skips back to the previously set **Screen** mode.


7.5 "Master" menu structure

2 dots in the display, e.g. *PrEnu.*, indicate that a submenu follows.

3 dots in the display, e.g. *PrModu.*, indicate that a module submenu follows.

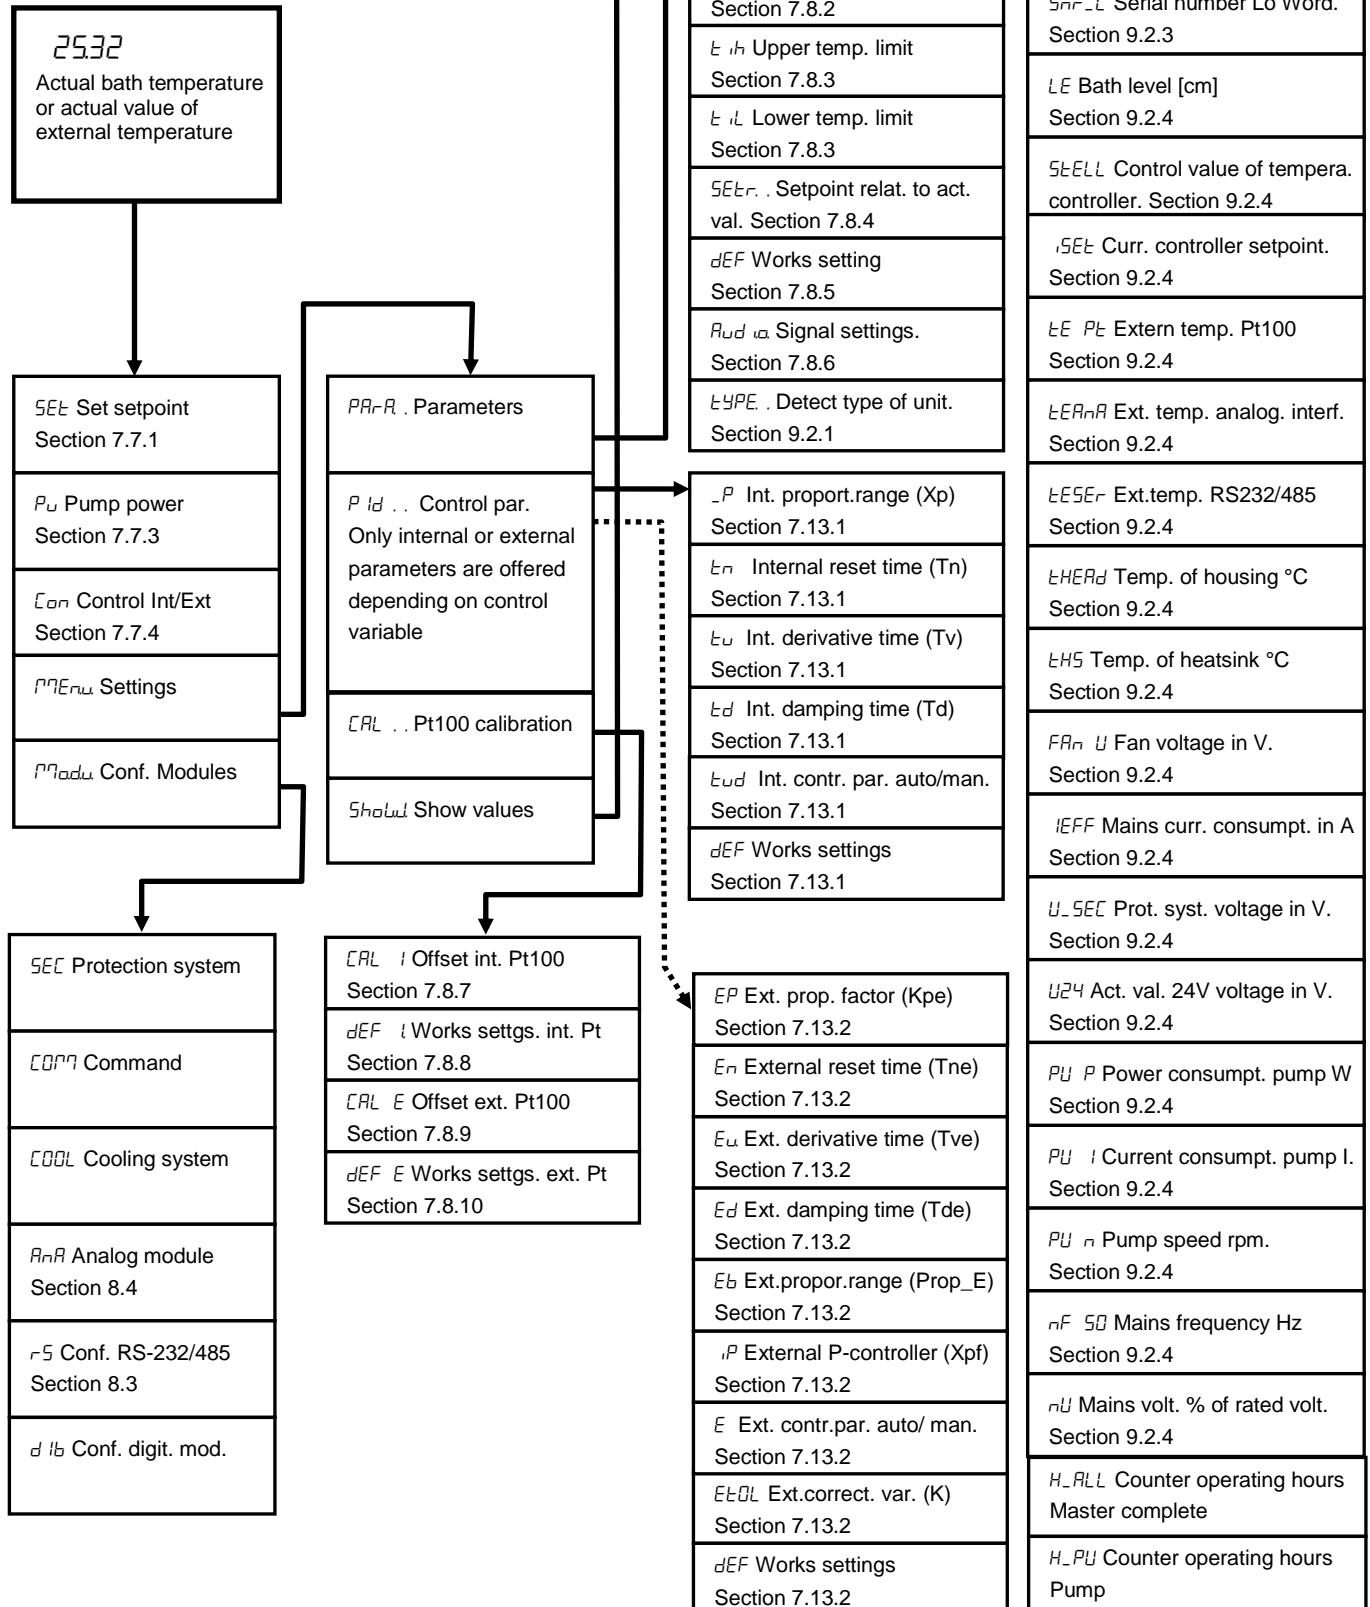



7.6 "Command" menu structure

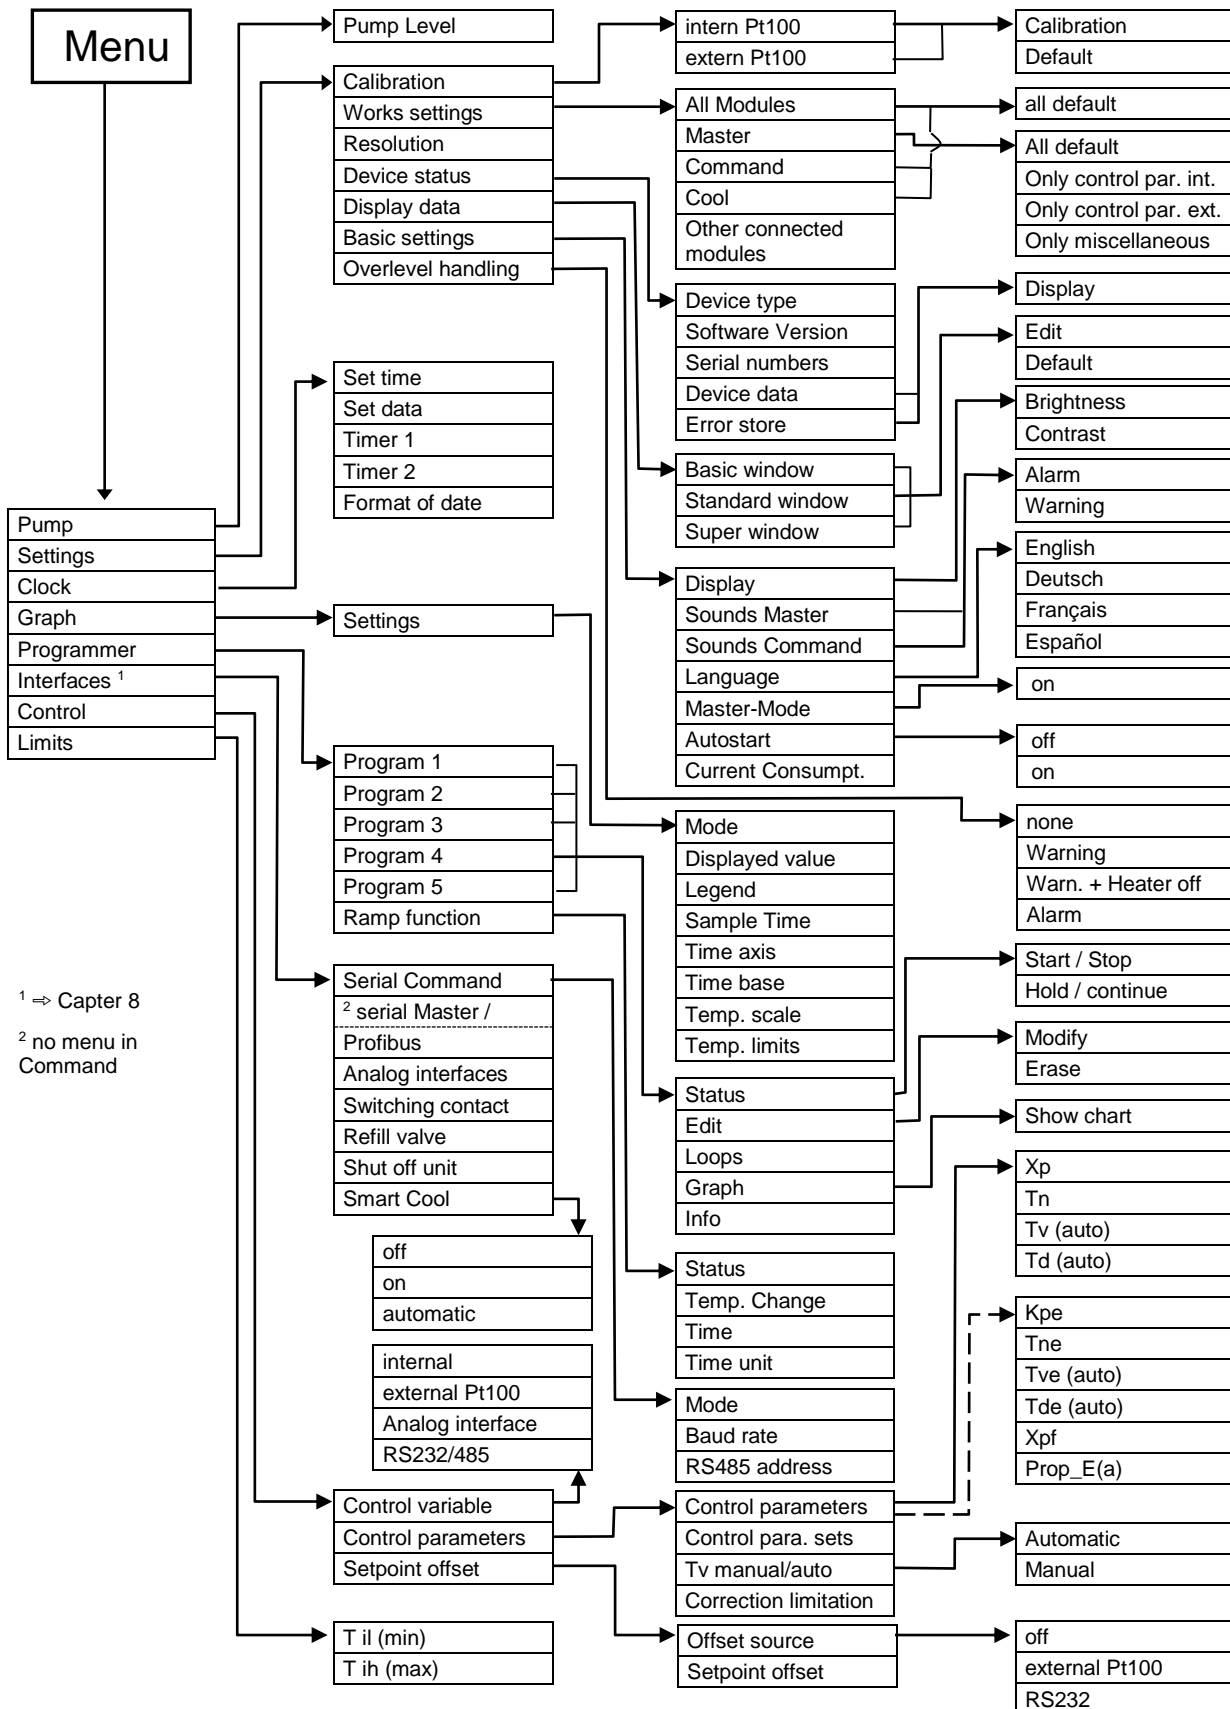

7.7 Important settings

7.7.1 Temperature setpoint setting

The setpoint is the temperature, which the thermostat should reach and maintain constant.

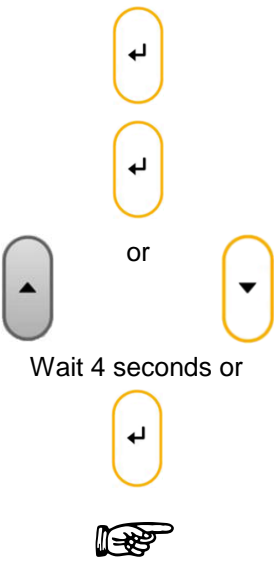Master (main level)	SEt
	<ul style="list-style-type: none"> – Press key until SEt (Setpoint) appears. – Press, display flashes. – Enter the setpoint with the two keys (⇒ Section 7.4.1 General key functions and pilot lamps). – Display flashes 4 seconds → new value is automatically accepted, or value is accepted immediately with Enter key. – For safety reasons the setpoint can only be set up to 2 °C above upper limit of the operating temperature range for the relevant device type. – In the following cases, the manual setpoint entry is blocked: Setpoint is taken from the analog module, from the programmer in the Command remote control or via the serial interface. – When the setpoint temperature is to be lowered, it may take up to one minute before the blue LED  lights.

Command
T_{set} or T_{fix}

Enter new setpoint:

123,45

Min: -40.00°C Max: 202.00°C

1	2	3	4	5
6	7	8	9	0

Fixed settings	
0.00°C	
0.00°C	
0.00°C	
0.00°C	
0.00°C	
0.00°C	
0.00°C	
0.00°C	

Recent setpoints	
80.00°C	
-35.50°C	
20.00°C	
38.00°C	
-35.70°C	
0.00°C	
0.00°C	
0.00°C	

PumpMenuEndT_{set}Edit

- or the soft key opens the setpoint window.
- **123.45** is the setpoint, which is still active. The upper and lower limit temperatures are displayed (device-specific values).

There are three different possible entry methods:

1. Change the value with the or keys. First, you vary the 1/10 °C values. If you hold the key pressed longer, then full degrees change.
2. Enter the complete number with the numerical duo keys and the key for the negative sign and decimal point.
3. Using or , move the flashing cursor line to the decimal place which you would like to change and then change it with or .

- Confirm the value with or quit the window with without having made any changes.

Two other ways of entering the setpoint:




- With the soft key open the window shown on the left.
- The setpoints, which you last entered, are shown in the right-hand column. In the illustrated screen, the last setpoint was 80.0 °C.
- To accept an earlier setpoint, enter the right-hand column with and select the desired value with , then accept it with or cancel with .
- In the left-hand column setpoint temperatures, which are to be used frequently, can be defined as "fixed settings".

Enter new setpoint:

123.45

Min: -40.00°C Max:202.00°C

1	2	3	4	5
6	7	8	9	0

- Select desired position with the cursor keys ▼ (black background).
- With the soft key  Edit open the window shown on the left.
- Enter fixed temperature setpoint as described above and accept into the list with  or cancel with .
- Select and accept values from the list of fixed settings as described above for the "Recent setpoints".


7.7.2 Displaying the actual external temperature

With all Proline Thermostats an external temperature probe can be connected, which for example...

1. ...can be used as an independent temperature measurement channel,
2. ...can be used as the controlled variable for the bath temperature in applications with a noticeable temperature gradient (between the internal bath temperature and an external load). The setup is described in Section 7.7.4. With the function described in the following, you only change over the display.




- External actual temperatures can also be read in by interface modules (⇒ 8).


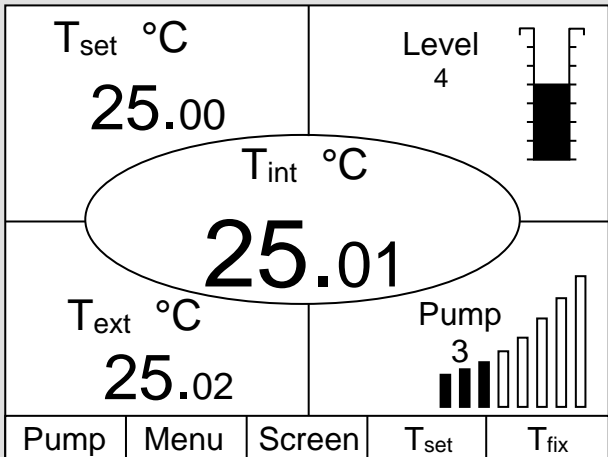
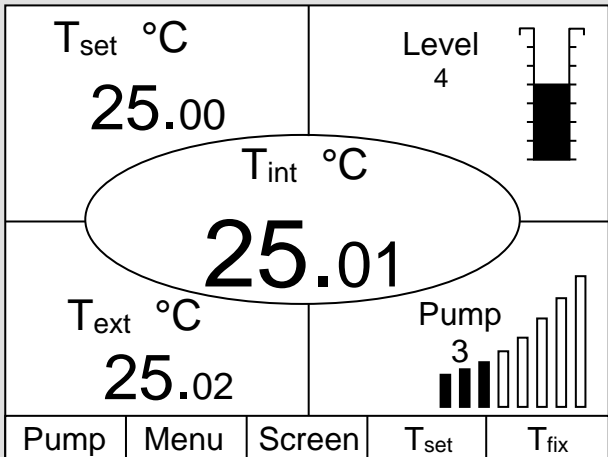
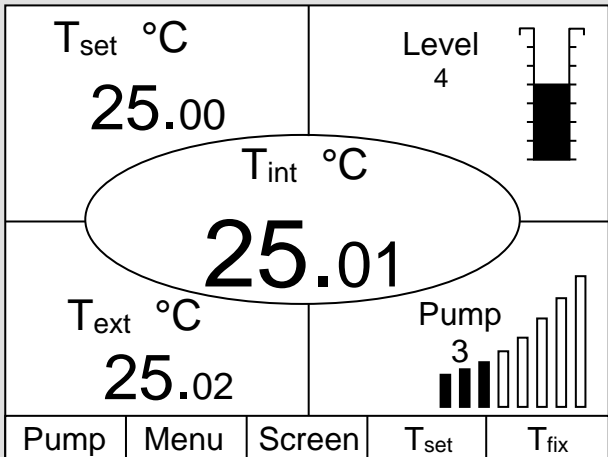


Connection of the external Pt100 to the Lemo socket 10S

Contact on
socket 10S

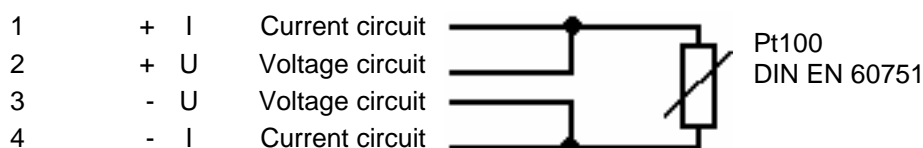



- Plug: 4-pole Lemosa for Pt100 connection (Order No. EQS 022).
- Use screened connecting leads. Connect screen to plug case.









<p>Master</p> <p>▲ or ▼</p> 	<p>EXT</p> <ul style="list-style-type: none"> – Switches to the actual-value display of the external temperature probe (or to the actual value received from an interface module (⇒ 7.7.4)). – EXT is lit in green next to the row of figures. – If no external Pt100 probe is connected, ----- is displayed. 		
<table border="1"> <tr> <td data-bbox="217 647 826 1160"> <p>Command</p>  </td> <td data-bbox="826 647 1444 1160"> <p>T_{ext}</p> <ul style="list-style-type: none"> – Provided an external temperature probe is connected, its value is displayed in the lower left part of the standard and super windows (applies to the works setting for the window partitioning). – External actual temperatures can also be read in via interface modules (⇒ 8). </td> </tr> </table>		<p>Command</p> 	<p>T_{ext}</p> <ul style="list-style-type: none"> – Provided an external temperature probe is connected, its value is displayed in the lower left part of the standard and super windows (applies to the works setting for the window partitioning). – External actual temperatures can also be read in via interface modules (⇒ 8).
<p>Command</p> 	<p>T_{ext}</p> <ul style="list-style-type: none"> – Provided an external temperature probe is connected, its value is displayed in the lower left part of the standard and super windows (applies to the works setting for the window partitioning). – External actual temperatures can also be read in via interface modules (⇒ 8). 		



7.7.3 Setting pump power or standby


With the Proline Varioflex pump, eight pump levels are available, with which the bath circulation, flow rate and pressure, the noise generated and the mechanical heat input can be optimized. This is particularly advantageous with coolers. With smaller coolers (e.g. RP 845) without an external load, Power Level 3 to 4 is practicable and sufficient.

<p>Master</p> <p>↵ and 1 x ↵</p>  <p>↵ or ▼</p>	<p>P_u</p> <ul style="list-style-type: none"> – Call pump power levels display P_u. – The current pump level is displayed (here 5). – The pump levels display flashes. – Select pump level (pump speed = pump power): 1 to 8 for pump operation. Pump responds immediately! – 0 activates the standby function (pump, heater and refrigerating machine are deactivated).
---	---

Wait 4 seconds or  – Display flashes 4 s → new value is automatically accepted, **or**
 – value is immediately accepted with Enter key.

Command	Pump Level
<div> <div>Pump Level</div> <div> Level 8 Level 7 Level 6 Level 5 Level 4 Level 3 Level 2 Level 1 </div> </div> <div> Pump Menu End T_{set} T_{fix} </div>	<ul style="list-style-type: none"> Open the device parameter menu via the soft key  Menu. Change from Pump → Pump Level using . With  or  you enter the illustrated window. Level 5 is active. Select another pump level with  or  and confirm with  or End, or quit the window with  without making any changes. <p>Standby activation</p> <ul style="list-style-type: none"> Standby activation (Pump, heater and refrigerating machine are deactivated when the green LED in the lower part of the key is lit).

 + 




 Please exercise caution when thermostat is in standby mode 7.12. The following settings/ actions may start the thermostat unintentionally from the standby mode:


- A previously activated timer mode (⇒ 7.11), because a started time continues to run.
- "Start" command via interfaces (⇒ 8).

7.7.4 Activating external control

An external temperature probe can be connected to the Proline Thermostats. How this is done is explained in Section 7.7.2. If the bath temperature is to be controlled using this sensor instead of the internal sensor, the setting can be made here.


Furthermore, control can also occur based on the signal from the analog or serial module (⇒ 4.8).

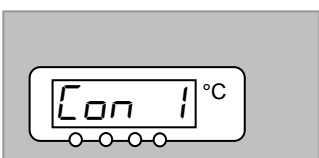

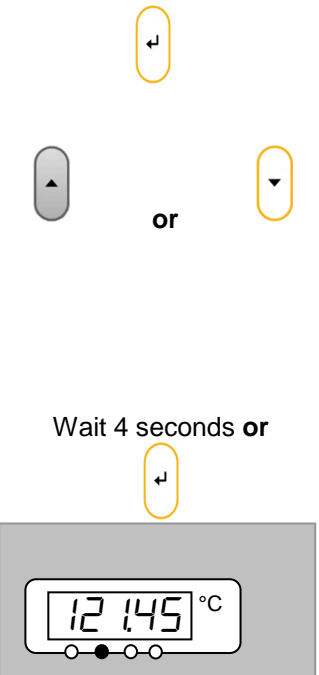


Master	Con
 and 2 x 	Call the source selection for the control Con .
	<ul style="list-style-type: none"> The momentary setting for the source is displayed, here 1 for internal, because control takes place using the temperature signal from the internal temperature probe.



- The source display flashes.





Change temperature probe source:

- **I** for the internal probe,
- **EP** only when an external probe is connected,
- **EA** only when an analog module is connected and configured,
- **ES** only when a serial module is connected and is continuously receiving actual values from a PC.
- Display flashes 4 s → new value is automatically accepted, **or**
- Value is immediately accepted with Enter key.
- If **EP** **EA** or **ES** has been selected, then the green  LED indicates that the control has regulated to the external temperature signal.

Command					Control Variable
<div style="display: flex;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;">Control Variable</div> <div style="border: 1px solid black; padding: 5px;"> Internal External Pt100 Analog module Digital module </div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> Pump Menu End T_{set} T_{fix} </div>					<ul style="list-style-type: none"> – Open the device parameter menu with the soft key  Menu. – With the cursor keys, change further to → Control → Control Variable. – Internal is currently active. – Select other control variables (only displayed when present) with  or  and confirm with  or End, – or quit the window with  without making any changes.

7.7.5 Current consumption from the mains

If your mains fuse is rated below 16 A, the current consumption can be reduced in steps from 16 A to 10 A using this function. Of course, the maximum heating power of 3.5 kW is then also reduced accordingly. Take into account whether other loads are still connected to the fused circuit or whether your Proline Thermostat is the only load.

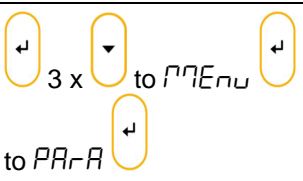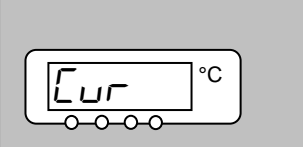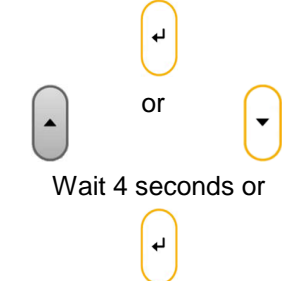Master		<i>Cur</i>										
 <p>3 x to <i>Menu</i> to <i>Cur</i></p>	<ul style="list-style-type: none"> – Call current consumption <i>Cur</i>. 											
	<ul style="list-style-type: none"> – The present setting is displayed. 											
 <p>or</p> <p>Wait 4 seconds or</p>	<ul style="list-style-type: none"> – The current consumption is shown flashing: e.g. 16.0 A. – Set the required maximum current consumption (in A). – Display flashes 4 s → new value is automatically accepted, or – Value is immediately accepted with the Enter key. 											
Command		Current Consumption										
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> Display Sounds Master Sounds Command Language Master Mode Autostart Current consumpt. </div>		<ul style="list-style-type: none"> – Open the device parameter menu via the soft key Menu. – With the cursor keys change further to → Settings → Basic settings → Current Consumpt.. – 16.0 A is presently active. 										
<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr> <td>Pump</td> <td>Menu</td> <td>End</td> <td>T_{set}</td> <td>T_{fix}</td> </tr> </table>		Pump	Menu	End	T _{set}	T _{fix}						
Pump	Menu	End	T _{set}	T _{fix}								
<div style="border: 1px solid black; padding: 10px; margin-bottom: 5px;"> Max. current consumption (in A): <div style="font-size: 2em; text-align: center;">16.0</div> <div style="display: flex; justify-content: space-between; margin-top: 5px;"> Min: 10.0 A Max: 16.0 A </div> </div>		<ul style="list-style-type: none"> – Open the settings window with . – Change the current with cursor or soft keys and accept with or End, – or quit the window with without making changes. 										
<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td></tr> <tr> <td>6</td><td>7</td><td>8</td><td>9</td><td>0</td></tr> </table>		1	2	3	4	5	6	7	8	9	0	
1	2	3	4	5								
6	7	8	9	0								

7.7.6 Setting the date and time

Command
Clock **Time** **Date**

Pump
Settings
Graph
Clock
Programmer
Interfaces
Control
Limits

Set time
Set date
Timer 1
Timer 2
Format of date

Pump

Menu

End

T_{set}

T_{fix}

Enter time:

15:38:12

1	2	3	4	5
6	7	8	9	0

- Open the device parameter menu via the soft key **Menu**.
- With the cursor keys continue to:
→ **Clock** → **Set time**,
- or to **Set date**.

- Open the settings window with .
- Change the time with cursor or soft keys and accept with .
- or quit the window with without making changes.
- The date is set just the same with **Set date**.
- The date format (Day Month Year or Month Day Year) can be set under **Format of date**.

7.7.7 Display resolution setting

The Command version allows for different resolutions of the displayed temperature.

Command
Display resolution

Pump
Settings
Graph
Clock
Programmer
Interfaces
Control
Limits

Calibration
Works settings
Resolution
Device status
Display data
Basic settings
Overlevel handling

Pump

Menu

End

T_{set}


T_{fix}

- Open the device parameter menu via the soft key **Menu**.
- With the cursor keys continue to
→ **Settings** → **Display resolution**.

44

Starting up

YACE0100 / October 4, 2018

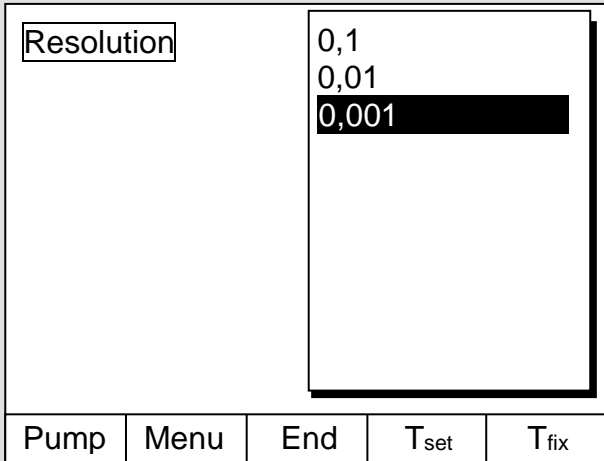


- Select the desired resolution with ▲ or ▼.
- Accept selection with ← or End, or quit the window with sec without making changes.

7.8 Special settings

7.8.1 Setpoint resolution

This function enables the resolution of the setpoint T_{set} to be increased from the standard value of 0.1 °C to 0.01 °C (only Master).

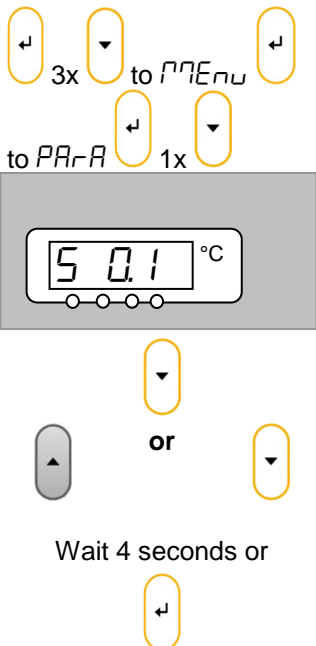


- Call setpoint resolution **5**.
- The current setting is displayed (here **0.1** for the works setting of 0.1 °C).
- The resolution display **0.1** flashes.
- **0.1** for 0.1 °C
- **00.1** for 0.01 °C
- Display flashes 4 s → new value is automatically accepted, or
- the value is immediately accepted with the Enter key.

7.8.2 Defining the type of start mode

Usually it is desirable that the thermostat carries on operating again after an interruption in the voltage supply. However, if for safety reasons you do not wish this, you can insert an intervening manual activation step.

Master
StAr-t

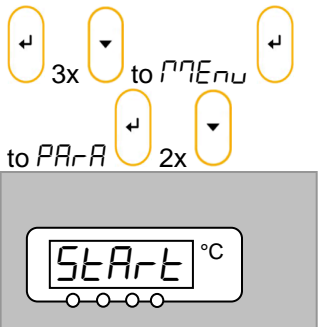


3x to **PAr-A**
2x

Wait 4 seconds or

- Call the start option **StAr-t** .
- The start mode can be changed here.
- The display **Auto** or **PAr-A** flashes.
- **Auto** , when operation is be restored automatically again after an interruption.
- **PAr-A** , when the standby mode is to be activated after a mains interruption.
- Display flashes 4 s → new value is automatically accepted, **or**
- Value is immediately accepted with the Enter key.
- When the mains voltage is restored after an interruption, standby is activated in the **PAr-A** mode and **StAr-t** is displayed. You can quit the standby mode with .

Command
Auto start

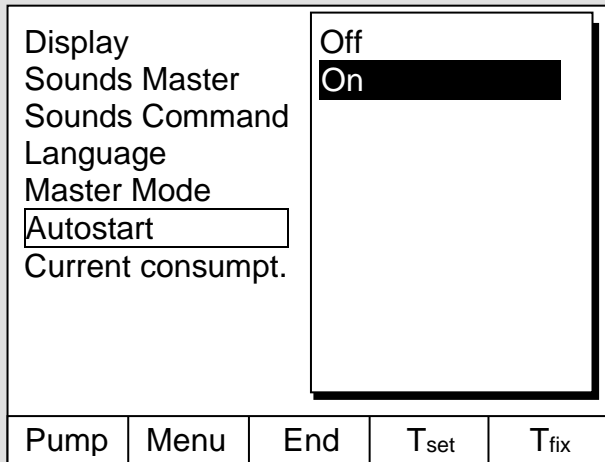

Display
Sounds Master
Sounds Command
Language
Master Mode
Autostart
Current consumpt.

Pump Menu End Tset Tfix

- Open the device parameter menu via the soft key **Menu** .
- With the cursor keys continue to:
→ **Settings** → **Basic settings** → **Auto start** .
- **On** is currently active.
- If the standby mode is to be activated after a mains interruption, select "Off" with or .
- Accept the change with or **End** ,
- or quit the window with without making changes.
- When the mains voltage has been restored after an interruption, you can quit the standby mode with .

7.8.3 Defining temperature limits

With this function, it is possible to define a minimum and a maximum temperature in which the thermostat controls. By reaching the temperature limits, a warning appears. In this way setpoint input can be prevented which may damage the heat transfer liquid or the apparatus. For example, if water were used as the heat transfer liquid, 95 °C would be practicable as the maximum temperature and 5 °C as the minimum temperature.

Master		T_{ih} and T_{il}	
		<ul style="list-style-type: none"> Call the start option T_{ih} (maximum temperature), or with 4x T_{il} (minimum temperature). 	
		<ul style="list-style-type: none"> The maximum temperature can be changed here. 	
		<ul style="list-style-type: none"> The minimum temperature can be changed here. 	
		<ul style="list-style-type: none"> The maximum temperature (minimum temperature) is displayed flashing. 	
Wait 4 seconds or		<ul style="list-style-type: none"> Set the required limit temperature . 	
		<ul style="list-style-type: none"> Display flashes 4 s → new value is automatically accepted, or Value is immediately accepted with the Enter key. 	
Command		Limits	
Pump Settings Graph Clock Programmer Interfaces Control Limits		<ul style="list-style-type: none"> Open the device parameter menu via the soft key Menu . With the cursor keys continue to Limits . The minimum and maximum temperatures are displayed. T il (min) is currently active. Select the limit to be changed with or and confirm with . 	
Pump	Menu	End	<div> <div>T_{set}</div> <div>T_{fix}</div> </div>

Lower limit (T il)

-50.0

Min: -50.0 °C Max: 301.0 °C

1	2	3	4	5
6	7	8	9	0

- Enter the desired limit temperature.
- Accept the change with ,
- or quit the window with without making changes.

7.8.4 Setpoint offset operating mode

With this function it is possible to apply an offset value to the temperature provided by the external temperature probe or a module and then to use it as the setpoint. The bath temperature can, for example, be operated at -25 °C below the temperature of a reactor, which is being measured by the external temperature probe.

Master
SEt.r. .

3x to **SEt.r. .**

5x to **OFF**

Wait 4 seconds or






OFF5

Wait 4 seconds or

- **SEt.r. .** in the following submenu, the relative setpoint (Set) and the source of the actual value can be entered.
- Continue with .
- The offset operating mode is currently deactivated.
- To activate it press and with change to **EP** (external Pt100), **EA** (external via analog module) or **ES** (external via serial module).
- Display flashes 4 s → new value is automatically accepted, **or** value is immediately accepted with the Enter key.
- Continue with . The left-hand window is displayed.
- To activate the relative offset input press and change the value with or .
- Display flashes 4 s → new value is automatically accepted, **or** value is immediately accepted with the Enter key.

Command					Offset source and Setpoint offset										
<div style="display: flex; justify-content: space-between;"> <div style="width: 30%;"> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">Offset source</div> <div style="border: 1px solid black; padding: 5px;">Setpoint offset</div> </div> <div style="width: 60%; border: 1px solid black; padding: 10px;"> <div style="background-color: black; color: white; padding: 2px 10px; display: inline-block;">Off</div> extern Pt100 RS232 </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> Pump Menu End T_{set} T_{fix} </div>					<ul style="list-style-type: none"> – Open the device parameter menu via the soft key Menu. – With the cursor keys continue to → Control → Setpoint offset → Offset source. – Off indicates that the setpoint offset is currently deactivated. – Select the setpoint source with ▼ or ▲ and confirm with . – Interfaces (e.g. RS-232) are only displayed if a valid setpoint has already been transmitted. 										
<div style="display: flex; justify-content: space-between;"> <div style="width: 30%;"> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">Offset source</div> <div style="border: 1px solid black; padding: 5px;">Setpoint offset</div> </div> <div style="width: 60%; border: 1px solid black; padding: 10px;"> <div style="background-color: black; color: white; padding: 2px 10px; display: inline-block;">0.00 °C</div> </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> Pump Menu End T_{set} T_{fix} </div>					<ul style="list-style-type: none"> – With the cursor keys continue to → Setpoint offset. – The standard value is 0.00°C. 										
<div style="border: 1px solid black; padding: 10px; margin-bottom: 10px;"> Input Setpoint offset: <div style="font-size: 2em; text-align: center;">0.00</div> <div style="text-align: center; margin-top: 5px;">Min: -500.00°C Max: 500.00°C</div> </div> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td>1</td><td>2</td><td>3</td><td>4</td><td>5</td></tr> <tr> <td>6</td><td>7</td><td>8</td><td>9</td><td>0</td></tr> </table>					1	2	3	4	5	6	7	8	9	0	<ul style="list-style-type: none"> – Open the left-hand window with . – Enter the desired temperature. – Accept the change with . – quit the window with without making changes.
1	2	3	4	5											
6	7	8	9	0											

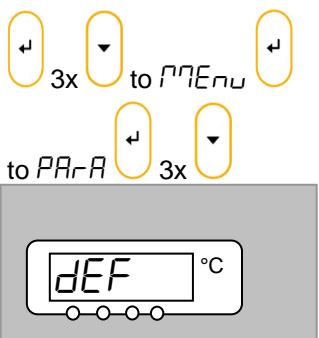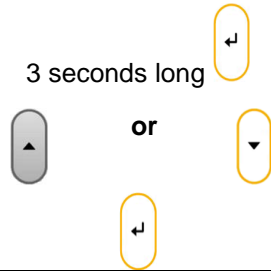7.8.5 Restoring works settings






Master		DEF
<p>If you would like to restore all the works settings except the control parameters P id and the probe calibrations CAL,</p> <ul style="list-style-type: none"> – call the works settings DEF. <p>– DEF is displayed.</p> <p>– Press longer than 3 sec.</p> <p>– The changeover is acknowledged with done.</p> <p>– Proceed to the next menu until End appears.</p> <p>– Press this key.</p>		
<div style="display: flex; align-items: center;">  </div>		
<div style="display: flex; align-items: center;">  </div>		
Command	Works settings	
<div style="display: flex;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px;"> All modules Master Command Cool </div> <div style="border: 1px solid black; padding: 5px;"> all default only control par. int only control par. ext only miscellaneous </div> </div>	<ul style="list-style-type: none"> – Open the device parameter menu via the soft key  Menu. – With the cursor keys continue to → Settings → Works settings. – The window shown opposite appears. – Master and then only control par. int. is shown as a possible choice. There are however various possibilities, which can be selected with  or . – Under All modules Master, Command and all connected modules are reset to the works setting with all default. 	
Pump Menu End T _{set} T _{fix}		

Confirm input!

Enter key: Continue

Escape key: Cancel

Pump	Menu	End	T_{set}	T_{fix}
------	------	-----	------------------	------------------

- Under **Master** you have the choice between:
 - **all default**, then all Master settings are reset,
 - **only control para. int.** for the internal control parameters,
 - **only control para. ext.** similar for external,
 - **only miscellaneous** which resets setpoint, pump level, maximum current consumption, control to internal and auto start to "Auto".
- Under **Command** all command settings are reset with **All default**.
- Confirm selection with .
- Confirm the control dialog shown on the left with  or cancel with .
- Return to measurement window with  or .

7.8.6 Setting the volume of the acoustic signals

The LAUDA Proline Thermostats signal alarms as a dual-tone acoustic signal and warnings as a continuous tone.

Master

3x → to MENU → → to PR-R → Aud io

7x → to PR-R → Aud io

↑ or ↓

Wait 4 seconds or →

Aud io

- Call the volume setting **Aud io** (⇒ 7.5).
- → takes you to the alarm volume, the currently set volume, here **3**, is displayed or ...
- ... → and 1x ↓ takes you to the warning tone volume.
- The currently set volume, here **2**, is displayed.
- The volume display flashes.
- Select volume: **0** = off to **3** = loud.
- You hear the alarm or warning tones at the selected volume.
- Display flashes 4 s → new value is automatically accepted, **or**
- Value is immediately accepted with the Enter key.

Command

Alarm

loud
medium
low
off

Pump Menu End T_{set} T_{fix}

Sounds

- Open the device parameter menu via the soft key **Menu**.
- With the cursor keys continue to → **Settings** → **Basic Settings** → **Sounds**.
- Select either **Alarm** or **Warning**.
- Example on left: **Alarm** is set to loud.
- Select the desired volume with ▲ or ▼.
- Accept selection with → or **End** or quit the window with **esc** without making changes.

7.8.7 Entering the offset of the internal temperature probe

If, during checking with a calibrated reference thermometer probe a deviation is found, then the offset (i.e. the additive part of the characteristic) of the internal measuring chain can be adjusted with the following function. The reference thermometer must be dipped into the bath according to the details on the calibration certificate.

Master		CAL 1	
	– Call the offset adjustment of the internal temperature probe CAL ..		
	– CAL 1 is displayed.		
3 seconds 	– The actual value of the bath temperature is displayed flashing.		
or 	– Set the value which you have read from the calibrated reference measurement device (with glass thermometers consider the correction where applicable).		
	– The entered value is accepted and done is displayed.		
Command		Calibration	
<div> <div>intern Pt100</div> <div>extern Pt100</div> </div>	<div> <div>Calibration</div> <div>Default</div> </div>		– Open the device parameter menu via the soft key Menu .
			– With the cursor keys continue to → Settings → Calibration → intern Pt100 → Calibration .
			– The window shown on the left appears.
			– Confirm selection with .
Pump	Menu	End	T _{set} T _{fix}

Temperature value of the ref.
temp. measurement device:

20.15

Min: -50.0°C Max: 302.00

1	2	3	4	5
6	7	8	9	0

- The temperature measurement device shows the true temperature value (with glass thermometers consider the correction where applicable!).
- Change the display in the adjacent window to the true value with cursor or soft keys and accept with or End ,
- or quit the window with without making changes.

7.8.8 Restoring the works setting of the internal temperature-probe offset

If the offset has been misadjusted unintentionally, the works setting can be restored with this function.

Master
dEF 1

3x to **TEMP**

2x to **CAL**

1x

- Call offset works setting for the internal temperature probe **dEF 1**.

- **dEF 1** is displayed.

3 sec

- The works setting is accepted after pressing for 3 seconds and **done** is displayed.

Command
Default

intern Pt100
extern Pt100

Calibration
Default

Pump
Menu
End
T_{set}
T_{fix}

- Open the device parameter menu via the soft key Menu .
- With the cursor keys continue to → **Settings** → **Calibration** → **intern Pt100** → **Default** .
- The window shown adjacent appears.
- Confirm selection with .

Confirm input!

Enter key: Continue

Escape key: Cancel

- Confirm the control dialog on the right with or cancel with .
- Return to the measurement window with or .

Pump
Menu
End
T_{set}
T_{fix}

7.8.9 Entering the offset of the external temperature probe

If a deviation is found during the check using a calibrated reference thermometer probe, then the offset (the additive part of the characteristic) of the external measurement chain can be adjusted with the following function. The reference thermometer must be dipped nearly by the external temperature probe into the consumer bath according to the details on the calibration certificate.

Master
CAL E

3x to MENU

2x to CAL ..

2x

- Call the offset adjustment for the external temperature probe **CAL E**.
- Continue as described in (⇒ 7.8.7) for the internal temperature probe.

Command
Calibration

intern Pt100

extern Pt100

Calibration

Default

Pump
Menu
End
T_{set}
T_{fix}

- Open the device parameter menu via the soft key **Menu**.
- With the cursor keys continue to **→ Settings → Calibration → extern Pt100 → Calibration**.
- The adjacent window appears.
- Confirm selection with .
- Continue as described in (⇒ 7.8.7) for the internal temperature probe.

7.8.10 Restoring the works setting of the external temperature-probe offset

If the offset has been misadjusted unintentionally, the works setting can be restored with this function.

Master		DEF E	
		<ul style="list-style-type: none"> – Call the offset works setting for the external temperature probe DEF E. – Continue as described in (⇒ 7.8.8) for the internal temperature probe. 	
Command		Default	
<div> <div>intern Pt100</div> <div>extern Pt100</div> </div> <div> <div>Calibration</div> <div>Default</div> </div>		<ul style="list-style-type: none"> – Open the device parameter menu via the soft key Menu. – With the cursor keys continue to → Settings → Calibration → extern Pt100 → Default. – The adjacent window appears. – Confirm selection with . – Continue as described in (⇒ 7.8.8) for the internal temperature probe. 	
Pump	Menu	End	<div>T_{set}</div> <div>T_{fix}</div>

7.9 Graphical display of temperature measurements

Command					Screen	and	Graph
<div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> T_{set}25.00 — T_{int}25.01 — T_{ext}25.02 </div> <div style="display: flex;"> <div style="flex: 1;"> </div> <div style="flex: 1; padding-left: 10px;"> <ul style="list-style-type: none"> – Press the soft key Screen a number of times as required until the graph recorder window appears. – With the soft key Graph you enter the menu for the configuration of the graph recorder. – Mode defines, <ul style="list-style-type: none"> – whether the recording is to run continuously as Online graph, – or whether it is to be started with Start record and later terminated with Stop record. When this start/stop mode is active, Rec flashes at the top left of the display. – Displayed value defines, <ul style="list-style-type: none"> – which of the measurements T_{int}, T_{set} and/or T_{ext} is to be graphically displayed. In the menu all combinations are offered. – Legend defines, <ul style="list-style-type: none"> – whether the axis label is to be invisible or visible. – Sample time defines with which time interval the measurements are recorded. 5 possibilities are offered: <ul style="list-style-type: none"> – From 2s (max. 1h45min) up to 2min (max. 105h). – Time axis defines over which time range the measurements are to be displayed. <ul style="list-style-type: none"> – With Automatic the program finds the optimum display. – From 9min up to 144h. – Time base defines whether scaling is to be carried out. <ul style="list-style-type: none"> – With Relative the start occurs at 00:00:00. – With Absolute the current time is displayed. </div> </div> <div style="display: flex; justify-content: space-between; border-top: 1px solid black; margin-top: 5px;"> Pump Menu Screen T_{set} Graph </div>							
<div style="display: flex;"> <div style="flex: 1; border-right: 1px solid black; padding-right: 5px;"> Mode Displayed value Legend Sample Time Time axis Time base Temp. scale Temp. limits </div> <div style="flex: 1; padding-left: 5px;"> Online graph Start Record </div> </div> <div style="display: flex; justify-content: space-between; border-top: 1px solid black; margin-top: 5px;"> Pump Menu End T_{set} T_{fix} </div>							
<div style="display: flex;"> <div style="flex: 1; border-right: 1px solid black; padding-right: 5px;"> Mode Displayed value Legend Sample time Time axis Time base Temp. scale Temp. limits </div> <div style="flex: 1; padding-left: 5px;"> Tset Tint Text Tset Tint Tset Text Tint Text Tint Text Tset </div> </div> <div style="display: flex; justify-content: space-between; border-top: 1px solid black; margin-top: 5px;"> Pump Menu End T_{set} T_{fix} </div>							

Mode

Displayed value

Legend

Sample Time

Time axis

Time base

Temp. scale

Temp. limits

Temp. min 22.00

Temp. max 27.00

Pump
Menu
End
T_{set}
T_{fix}

y-axis Limit:

22.00

Min: -150.00°C Max: 26.90 °C

1	2	3	4	5
6	7	8	9	0

Temp. scale defines how the scaling is to be carried out:

- **automatic**, by the program, **or**
- **manual** in that you yourself define the limits with the next menu point.

The min. and max. values for the graphical display are manually entered with **Temp. limits**.

- **Temp. min 22.00°C** is the momentary minimum value.
- **Temp. max 27.00°C** is the momentary maximum value.
- The highlighted value can in each case be changed with . Enter the desired new value in the changes window in the usual way.
- When setting the minimum value, the largest permissible value (here 26.90 °C, since the maximum value is 27 °C) is stated.
- When setting the maximum value, it is conversely the minimum value, which is entered.
- However, if a value is entered which exceeds the other corresponding limit, then this warning is issued:

Warning: Value not in input range

 .

7.10 Programmer (PGM)

Almost any temperature/time profile can be created with the programmer. A desired bath temperature can be approached as quickly as possible or via a defined ramp. Furthermore, the pump level and the behavior of the switching outputs can be defined. Five temperature/time programs are provided for free programming. Each program consists of a number of temperature/time segments. Also included are details of how often the program is to be executed (loops). The sum of all segments of all programs may be up to a maximum of 150. Typical segments are:

Ramp: If a time is specified, then the segment is a ramp, which is described by the target temperature, i.e. the temperature at the end of the segment, and the duration from the start to the end of the segment.


Step: Without any specified time the final temperature is approached as quickly as possible.

Temperature hold phase: No temperature change (i.e. the temperatures at the start and end of a segment are the same).



The programmer can be controlled or changed via the RS-232 interface, the timer or switching contacts.

7.10.1 Program example

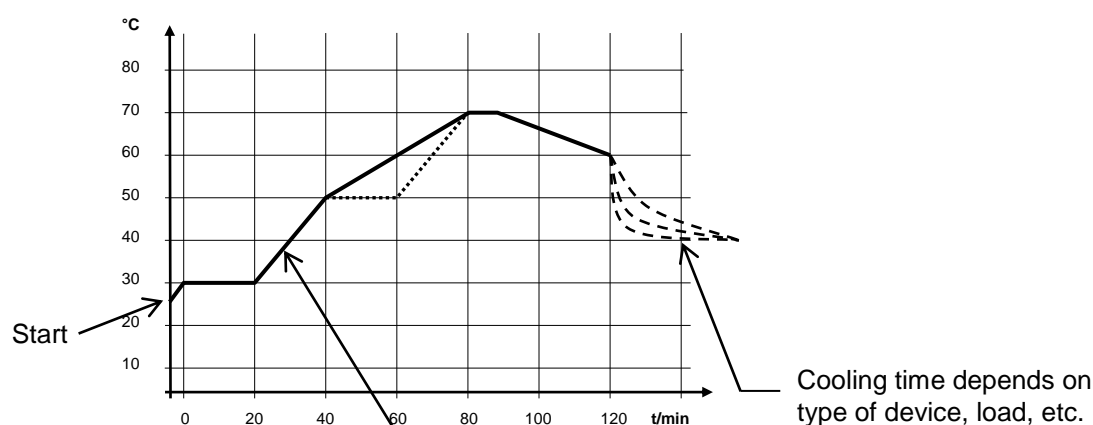

Real program example with 6 segments

This is Segment No. 2

No	T end °C	Time [h:m]	Tolerance	No	Pump	Out 1	Out 2	Out 3	
Start	30.00°C	-----	0.00°C	Start	-----	-----	-----	-----	
1	30.00°C	00:20	0.10°C	1	2	-----	-----	-----	
2	50.00°C	00:20	0.00°C	2	3	-----	-----	-----	
3	70.00°C	00:40	0.00°C	3	4	-----	-----	-----	
4	70.00°C	00:10	0.10°C	4	2	-----	-----	-----	
5	60.00°C	00:30	0.00°C	5	2	-----	-----	-----	
6	30.00°C	00:00	0.00°C	6	2	-----	-----	-----	
Pump	Menu	End	Insert	Delete	Pump	Menu	End	Insert	Delete



Each program begins with the segment "Start". It defines at which temperature Segment 1 is to continue the program. It is not possible to specify a time for the Start segment. For thermostats without cooling ability, the start temperature must be selected higher than the bath temperature, which prevails before the program start. Without the Start segment, Segment 1 would be different depending on the bath temperature at the start of the program.

Edited program example (see dashed curve in the graph on previous page).

No	T end °C	Time [h:m]	Tolerance
Start	30.00°C	-----	0.00°C
1	30.00°C	00:20	0.10°C
2	50.00°C	00:20	0.00°C ③
3 ①	50.00°C ①	00:20 ②	0.10°C ③
4	70.00°C	00:20 ②	0.00°C
5	70.00°C	00:10	0.80°C ③
6	60.00°C	00:30	0.00°C
7	30.00°C	00:00	0.00°C
<div> <div>Pump</div> <div>Menu</div> <div>End</div> <div>Insert</div> <div>Delete</div> </div>			

No	Pump	Out 1	Out 2	Out 3
Start	-----	-----	-----	-----
1	2	-----	-----	-----
2	2	-----	-----	-----
3	2	-----	-----	-----
4	2	-----	-----	-----
5	2	-----	-----	-----
6	2	-----	-----	-----
7	2	-----	-----	-----
<div> <div>Pump</div> <div>Menu</div> <div>End</div> <div>Insert</div> <div>Delete</div> </div>				


① Insert new segment (⇒ Section 7.10.4)

② ③ Change segment time or tolerance (⇒ Section 7.10.4)



The field tolerance (refer to the above program table and the graph below):

- It facilitates exact conformance to the dwell time at a specified temperature. Segment 1 is not processed until the bath temperature is within the tolerance range ①, so that the ramp (Segment 2) starts delayed at ②.
- A tolerance range which is too tight can however also cause undesired delays. **In particular with external control** the range should not be chosen too tightly. In Segment 5 a larger tolerance has been entered, so that the desired time of ten minutes is maintained even with settling action ③.
- Only flat (slow) ramps should be programmed where necessary with a tolerance range. Steep ramps which lie close to the maximum possible heating or cooling rates of the thermostat may be severely delayed by a tolerance range that is too tight (here in Segment 2) ④.

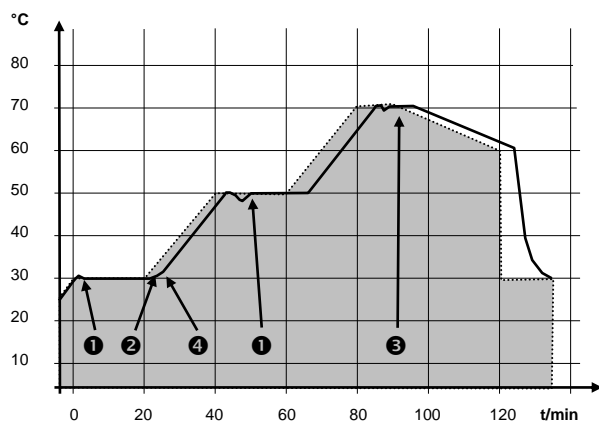

Example for the influence of the tolerance field input in case of external bath temperature control:

The setpoint temperature of the programmer is shown in grey.








The actual temperature in the external bath container is represented as a continuous line.

7.10.2 Selecting and starting the program (Start, Hold, Stop)

Here you will learn how to select and start a program that has already been created. If no program has been created see (⇒ 7.10.4) Creating or modifying a program (Edit).

Command		Programmer	Program 1
Pump Settings Graph Clock Programmer Interfaces Control Limits	<div style="border: 1px solid black; padding: 5px;"> Program 1 Program 2 Program 3 Program 4 Program 5 Ramp function </div>	<ul style="list-style-type: none"> – Open the device parameter menu via the soft key Menu . – With the cursor keys continue to: → Programmer → Program 1 . – Confirm with the key . 	
<div style="display: flex; justify-content: space-between;"> Pump Menu End T_{set} T_{fix} </div>			
Status Edit Loops Graph Info	<div style="border: 1px solid black; padding: 5px;"> Start </div>	<ul style="list-style-type: none"> – The submenu Status appears. – Using the Status menu, the selected program can be: <ol style="list-style-type: none"> 1. started Start , 2. paused Hold , 3. continued Continue or 4. terminated Stop . 	
<div style="display: flex; justify-content: space-between;"> Pump Menu End T_{set} T_{fix} </div>			
Status Edit Loops Graph Info	<div style="border: 1px solid black; padding: 5px;"> Hold Stop </div>	<p>In addition, the standby key stops the programmer! (Pause operation). After standby is deactivated, the programmer goes on!</p> <p>Commands, which, depending on the situation, cannot be executed, are not displayed. Continue therefore only appears when Hold has been activated.</p> <ul style="list-style-type: none"> – Once the start has been confirmed with , Prog. 1 running appears at the bottom. 	
<div style="display: flex; justify-content: space-between;"> Pump Menu End Prog.1 running </div>			

7.10.3 Interrupting, continuing or terminating the program (Hold, Continue, Stop)

Command				Programmer	Program 1	Status
<div style="border: 1px solid black; padding: 2px;">Status</div> <div style="border: 1px solid black; padding: 2px;">Edit</div> <div style="border: 1px solid black; padding: 2px;">Loops</div> <div style="border: 1px solid black; padding: 2px;">Graph</div> <div style="border: 1px solid black; padding: 2px;">Info</div>	<div style="border: 1px solid black; padding: 2px; background-color: black; color: white;">Hold</div> <div style="border: 1px solid black; padding: 2px;">Stop</div>		<ul style="list-style-type: none"> After a program has been started by pressing the  key, the command options Hold or Stop are shown. Here, with the aid of the keys  or  and  the running program can be paused with Hold or terminated with Stop. Once the program has been terminated, the device runs with the last setpoint setting. 			
Pump	Menu	End	Prog.1running			
<div style="border: 1px solid black; padding: 2px;">Status</div> <div style="border: 1px solid black; padding: 2px;">Edit</div> <div style="border: 1px solid black; padding: 2px;">Loops</div> <div style="border: 1px solid black; padding: 2px;">Graph</div> <div style="border: 1px solid black; padding: 2px;">Info</div>	<div style="border: 1px solid black; padding: 2px; background-color: black; color: white;">Continue</div> <div style="border: 1px solid black; padding: 2px;">Stop</div>		<ul style="list-style-type: none"> Continuation of a program paused with Hold occurs using Continue which is obtained with . 			
Pump	Menu	End	Prog.1Standby			
<div style="border: 1px solid black; padding: 2px;">Status</div> <div style="border: 1px solid black; padding: 2px;">Edit</div> <div style="border: 1px solid black; padding: 2px;">Loops</div> <div style="border: 1px solid black; padding: 2px;">Graph</div> <div style="border: 1px solid black; padding: 2px;">Info</div>	<div style="border: 1px solid black; padding: 2px; background-color: black; color: white;">Continue</div> <div style="border: 1px solid black; padding: 2px;">Stop</div>		<ul style="list-style-type: none"> In addition, the standby key  stops the programmer. The pump, heater and cooling unit are switched off. Follow the safety information (⇒ 7.7.3). After pressing the standby key  again, the programmer returns to the previously selected operating mode: Pause or active operation depending on what was previously selected. 			
Pump	Menu	End	Pr. 1 Standby			

7.10.4 Creating or modifying a program (Edit)

Here, there are the following functions:

- Entry of a program.
- Display of the program data of a saved program and modification of the segment data.
- Insertion or appending of a new segment.
- Deletion of a segment.



- In addition, when a program has just been executed, new segments can be inserted and existing ones modified, even the currently active segment. Furthermore, all segments, except the currently active one, can be deleted at any time.
- Modifications to the currently running segment are possible. The segment then continues as though the modification had been applicable since the start of the segment.

However: If the new segment time is shorter than the segment time that has already run, then the program skips to the next segment.

- If a segment time >999 h: 59 min is required, then this time must be shared over a number of consecutive segments.


Entering a program:



Program example (⇒ 7.10.1)

Command					Programmer	Program1	Edit	Modify
<div style="display: flex;"> <div style="flex: 1;"> <p>Status</p> <p>Edit</p> <p>Loops</p> <p>Graph</p> <p>Info</p> </div> <div style="flex: 1; border: 1px solid black; padding: 5px;"> <p>Modify</p> <p>Delete</p> </div> </div>					<ul style="list-style-type: none"> – In the Edit menu one can Modify or Delete a program. – Press the key. – Continue to Modify with the key – There is the possibility of modifying single segments, i.e. segments can be entered as new, changed and also deleted. 			
Pump	Menu	End	T _{set}	T _{fix}				
No.	T end °C	Time [h:m]			Tolerance			
Start	30.00°C	-----			3.00°C			
1	30.00°C	00:30			3.00°C			
Pump	Menu	End	Insert	Delete				

- In the "Start" line enter in the field "T end °C" the temperature at which the sequence is to start (default value is 30 °C). A time entry is not possible in the "Start" segment, because the thermostat immediately executes Segment 1 on reaching the start temperature.
- Delete single segments (rows) with **Delete**.
- For thermostats without cooling ability, the setpoint temperature must be obtainable, i.e. above the bath temperature displayed at the time of the program start.

- Using the cursor keys move the black background to the field, which you would like to change.

It can be edited by pressing the key  (see following pages).


- The soft key  **Insert** inserts in the marked line a new segment that has a default value taken from the previous segment with the exception of the Tolerance field. The Tolerance is always specified as 0.00. All following segment lines will be moved one line downwards.
- In the above window Segment 1 was created in this way.
- Continue with  to the fields → "Time → "Tolerance". See program example in (⇒ 7.10.1)
- If there is no entry in the "Time" field, the bath temperature is approached as quickly as possible. With a time entry the final temperature is obtained exactly after the time expires (ramp).
- The entry in the field "Tolerance" field defines how accurately the final temperature is to be obtained before the next segment is processed.



If the tolerance range has been selected too small, it may be that the program does not continue, because the required tolerance is never achieved.

External temperature control: Especially with ramps, a too close tolerance range can cause undesired delays in the start phase of the ramp.

No.	Pump	Out 1	Out 2	Out 3
Start	-----	-----	-----	-----
1	4	-----	-----	-----
Pump	Menu	End	Insert	Delete

- Then continue with  to the pump and signal output setting.
- The right-hand part of the entry table appears as shown on the left.
- Here, in the "Pump" field, the pump level and, in the fields "Out 1" to "Out 3", the contact outputs of the contact mode (accessory) can be programmed. With the setting "-----" the starting value is retained which was either set before the program start or was defined by a previous segment in the running program. Further details are given on the following pages.

End of segment temperature:

25.00

Min: -150.00°C Max:450.00°C

1	2	3	4	5
6	7	8	9	0

Input segment time:

003:00

Hours(max.999):Minutes











1	2	3	4	5
6	7	8	9	0

Temp. tolerance (0=off):

10.00

Min: 0.00°C Max:450.00°C

6	7	8	9	0

- A new segment is produced by moving the cell with the black background to a blank line with the cursor keys and then pressing the soft key  **Insert**. The values of the cell located above it are automatically copied.
- If the field in the column **T end °C** has a black background, the entry mode "End of segment temperature" is obtained by pressing the  key. Depending on the setting, that is the temperature, which the thermostat is to achieve on the internal or external temperature probe.
- Enter the value, confirm with the  key and continue to the "Time" entry field with .
- If the field in the column **Time** has a black background, the entry mode for the "Segment time" time setting is obtained by pressing the  key.
- If 0 is entered into the field "Time", ----- appears. Then the final temperature is approached as quickly as possible. With a time entry the final temperature is obtained exactly after the time expires (ramp).
- Enter the segment time and confirm with the  key.
- Continue to the "Tolerance" entry field with .
- If the field in the column "Tolerance" has a black background, the entry mode for the "Temperature tolerance" is obtained by pressing the  key. It defines how accurately the end of segment temperature is to be obtained before the next segment is processed. A tolerance which is selected too small can stop the next segment from being started according to plan.
- Set the temperature tolerance and confirm with .
- Continue with  to the entry field "Pump".

Pump level












Level 8
Level 7
Level 6
Level 5
Level 4
Level 3
Level 2
Level 1

PumpMenuEndT_{set}T_{fix}

Contact out

open
closed

PumpMenuEndT_{set}T_{fix}


- If the field in the column "Pump" has a black background, the entry mode for the **Pump level** is obtained by pressing the .
- With  or  select Pump Level 1 – 8 or ----- and confirm with . ----- stands for "no change to previous segment", i.e. when "-----" is present in all fields, the pump level always retains the start setting or the setting before the program start.
- Continue with  to the field "Out 1", "Out 2" or "Out 3".
- The contact outputs of the contact module (if present, special accessory) are programmed here.
- If the field in the column "Out 1" has a black background, the entry mode for the **Contact output** is obtained by pressing the  key.
- With  or  select -----, **Open** or **Closed** and confirm with . ----- stands for no change with respect to the previous segment, i.e. if ----- is present in all fields, the contact setting of the start setting or that from the program start is retained.
- If applicable, continue with  to "Out 2" and "Out 3".
- Programming is terminated with  or **End**.

7.10.5 Defining the number of program loops (Loops)

Command					Programmer	Program1	Loops
Status Edit Loops Graph Info	<div style="border: 1px solid black; padding: 5px; min-height: 150px;"> <div style="display: flex; justify-content: space-between; align-items: center;"> Status 1 </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Edit </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Loops </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Graph </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Info </div> </div>				<div style="display: flex; justify-content: space-between; border-top: 1px solid black; border-bottom: 1px solid black;"> Pump Menu End T_{set} T_{fix} </div>	<div style="border: 1px solid black; padding: 5px; min-height: 150px;"> <div style="text-align: center; padding: 10px;"> Loops (0=infinite) 1 </div> <div style="display: flex; justify-content: space-between; padding: 5px 0;"> Min: 0 Max: 255 </div> </div> <div style="display: flex; justify-content: space-around; border-top: 1px solid black; border-bottom: 1px solid black; padding: 5px 0;"> 12345 </div> <div style="display: flex; justify-content: space-around; padding: 5px 0;"> 67890 </div>	<ul style="list-style-type: none"> – If required, programs can be looped many times. – With ▼ and ▶ access the menu Loops. – Select the number of desired program loops. <ul style="list-style-type: none"> – Press the ↵ key, set the required number. Entering 0 causes the program to repeat continuously. – Confirm the entry with the ↵ key and return to the display. – You can quit the Edit mode with esc or End.

7.10.6 Viewing the program sequence as a graph (Graph)

Command					Programmer	Program1	Graph
Status Edit Loops Graph Info	<div style="border: 1px solid black; padding: 5px; min-height: 150px;"> <div style="display: flex; justify-content: space-between; align-items: center;"> Status Show chart </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Edit </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Loops </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Graph </div> <div style="display: flex; justify-content: space-between; align-items: center;"> Info </div> </div>				<div style="display: flex; justify-content: space-between; border-top: 1px solid black; border-bottom: 1px solid black;"> Pump Menu End T_{set} T_{fix} </div>	<ul style="list-style-type: none"> – ▼ takes you to the submenu Graph. – Press the ▶ key → Show chart and ↵. – The program sequence is shown. 	

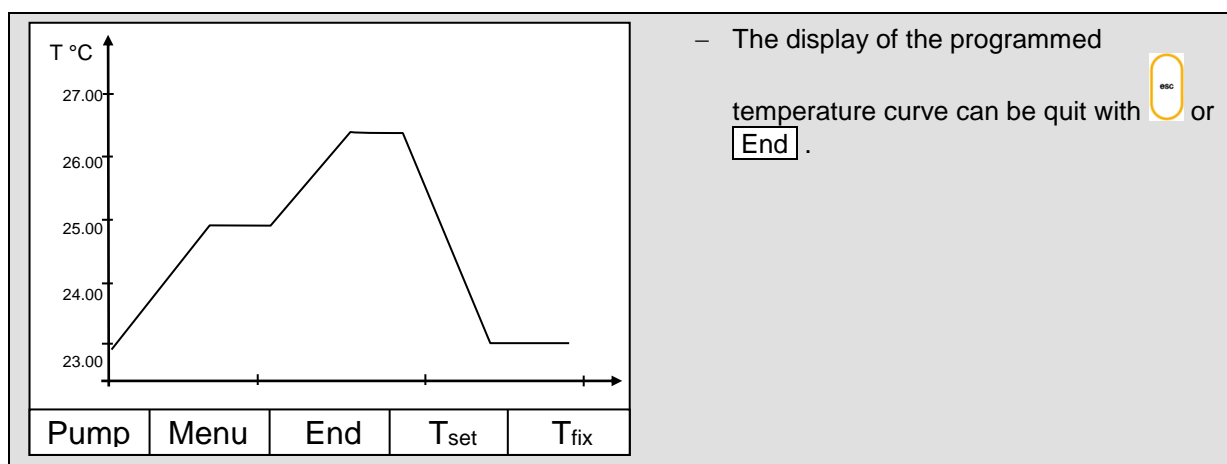

7.10.7 Obtaining information on a program (Info)

Command

Programmer
Program1
Info

Status

Edit

Loops

Graph

Info

Segments 2

Temp.min 20.00°C

Temp.max 40.00°C

Duration 01:00

Seg. free 145

Actual Seg. 5

Seg. Remain 00:05

Loop actual 3

Pump
Menu
End
Prog.1
Standby

– Continue with to **Info** .

Here, all information is displayed about the entered program sequence.

- Number of segments.
- Minimum temperature in °C.
- Maximum temperature in °C.
- Program duration in hh:mm (without the time, which is necessary to process step changes in temperature).
- Number of free segments.
- Segment, which is at present (currently) being processed.
- Residual time of the current segment in hours and minutes.
- Current pass; in the example the third of all passes is running.

The last three points are only displayed when a program runs.

– Quit the window with or **End** .



7.11 Ramp function

With the ramp function, temperature changes over any time period can be conveniently entered. This is especially advantageous with very low temperature changes (e.g. 0.1 °C/day).

Example: From the current outflow temperature (e.g. 242.4 °C), 200 °C of cooling is to occur over 5 days. Then the temperature change is entered as 200 °C and the time as 5 days.




The ramp function is executed until it is manually terminated or until the temperature limits T_{il} (min) or T_{ih} (max) described in Section 7.8.3 are attained.

Command		Programmer	Ramp function
Pump Settings Graph Clock Programmer Interfaces Control Limits	Program 1 Program 2 Program 3 Program 4 Program 5 Ramp function	<ul style="list-style-type: none"> Open the list of device parameters using the soft key  Menu. With the cursor keys continue to → Programmer → Ramp function. Confirm with the key . 	
Pump Menu End T_{set} T_{fix}			
Status Temp. change Time Time unit	Second(s) Minute(s) Hour(s) Day(s)	<ul style="list-style-type: none"> Enter a positive or negative temperature value with Temp. change. With Time enter a figure (without time unit). With Time unit choose between Second(s) up to Day(s). Under Status the ramp is started → Start or stopped → Stop. When the ramp function is being executed, Ramp active appears in the window bar. Without manual switch-off the ramp terminates at the latest at T_{il} (min) or T_{ih} (max). 	
Pump Menu End T_{set} T_{fix}			

7.12 Timer function

Using the timer function, the thermostat can carry out an action at a certain time or after a certain waiting period. The actions are: switching on the thermostat, entering the standby mode or one of the five programs in the programmer.

Command		Clock	Timer 1	Timer 2
Pump Settings Graph <input type="text" value="Clock"/> Programmer Interfaces Control Limits	Set time Set date <input type="text" value="Timer 1"/> Timer 2 Format of date	<ul style="list-style-type: none"> Open the device parameter menu via the soft key  <input type="text" value="Menu"/>. With the cursor keys continue to: → Clock → Timer 1; or to Timer 2; with the menu Status the selected timer is switched off or on. The standby key does not stop the timer! 		
Pump	Menu	End	T _{set}	T _{fix}



Please exercise caution when thermostat is in standby mode. The thermostat is not switched off safely.
A previously activated timer mode could unintentionally start the thermostat again from the standby mode.




Status <input type="text" value="Function"/> Action Set Time Set Date	Weekplan <input type="text" value="Time absolute"/> Time relative	<p>The menu Function is used to define when an action is executed:</p> <ul style="list-style-type: none"> Similar to an electronic mains timer, Weekplan enables two switching events to be carried out each day. The cycle is repeated after 7 days. Time absolute defines a time and a date on which a once-only action (switching event) occurs. The time point is set with Set time and with Set date. Time relative defines a waiting period after which a once-only action occurs. With Set time up to 99h: 59min can be entered. ("Set date" is masked out with this function selection.) If the Weekplan is activated, in this window only Status, Function and Weekplan are displayed. 		
Pump	Menu	End	T _{set}	T _{fix}



Weekplan				
	Time	Action	Time	Action
Monday	07:30	Start	17:00	-----
Tuesday	10:00	Prog.4	17:00	-----
Wednesday	08:00	-----	17:00	-----
Thursday	08:00	-----	17:00	-----
Friday	08:00	-----	16:00	Standby
Saturday	08:00	-----	17:00	-----
Sunday	08:00	-----	17:00	-----

Pump	Menu	End	T _{set}	T _{fix}
------	------	-----	------------------	------------------

Status	Start Standby Program 1 Program 2 Program 3 Program 4 Program 5
Function	
Action	
Set time	
Set date	

Pump	Menu	End	T _{set}	T _{fix}
------	------	-----	------------------	------------------

- **Weekplan** → **Arrange** takes you to the window shown on the left.
- Using the cursor keys ,  select the field, which is to be filled in.
- Open the input dialog of the field with : Select a time in the time fields and an action in the action field.
- In the example on the right, the thermostat is started on Monday at 7:30h, Program 4 is executed at 10:00h on Tuesday and the standby mode is switched in on Friday at 16:00h. Fields displaying ----- are passive.

Confirm each field selection with  or quit with  without making changes.

The menu **Action** is used to define **what** is to be carried out:

- **Start** activates the thermostat from the standby mode.
- **Standby** activates the standby mode (refrigerating unit, heater and pump are switched off).
- **Program X** all actions of this program defined in the programmer are processed.

7.13 Control parameters

The control parameters are optimized ex-works for operation as a bath thermostat (with water as the heat transfer liquid) with internal control. The parameters are also preset for the operation of external containers with external control. Sometimes however, the operation of external containers requires adaptation. In addition, the thermal capacity and viscosity of the heat transfer liquid sometimes require adaptation.



- The intelligent menu guidance with the Master and Command detects whether you have set the device (as described in Section 7.7.4), to internal or external control and only displays the relevant dialog boxes in each case.
- Your Proline Thermostat automatically optimizes some control parameters. This automatic mechanism should only be deactivated and manually optimized in exceptional cases.

7.13.1 Internal control variable (integral measurement probe)



Only read further here if you have no external temperature probe connected (and activated according to Section 7.7.4 as control variable).

Master

P Id ..

3x to *nnEnu*

1x to *P Id ..*

- As shown in the menu structure (\Rightarrow 7.6), the parameters for the internal control variable can be set.
- Select the parameter with or and confirm with . The set value is displayed. Adapt it with or and confirm with .
- Example: Proportional range is 8.0 K.
- Proportional range: $_P = Xp$ in Kelvin.
- Reset time $t_n = Tn$ in seconds.
- Derivative time (Auto/ Man) $t_u = Tv$ in seconds. The thermostat logic system only permits values with $Tn > Tv$!
- Damping time (Auto/ Man) $t_d = Td$ in seconds.
- Tv, Td changeover to auto/ man $t_{ud} A = \text{Auto}$ or $nn = \text{Man}$. The works setting is Automatic. Only experienced control technicians should change these two parameters!

Command

Control Parameters

Control para. sets

Tv manual/auto

Xp	6,0
Tn	30
Tv (auto)	21
Td (auto)	3,5

Pump
Menu
End
T_{set}
T_{fix}

Control | Control Parameters | Control Parameters

- Open the device parameter menu via the soft key **Menu**.
- With the cursor keys continue to \rightarrow **Control** \rightarrow **Control Parameters** \rightarrow **Control Parameters**.
- The adjacent window appears.
- Change parameters marked with (auto) where necessary to manual input with **Tv manual/auto**.
- Select the parameters to be changed with and confirm with .
- Then in the following settings window, change the value and confirm with .

7.13.1.1 Proven settings for control parameters and pump (integral measurement probe)

Instrument Type	Heat transfer liquid	Xp _P	Tn t _n	Tv t _v	Td t _d	Pump Level
RP 845	Water	4.0	50	35	6	4
RP 845	Ethanol	7.0	50	35	6	4
RP 845	Ethanol	5.5	30	21	3.6	4
RP 855	Ethanol	7.0	50	35	6	4
RP 855	Ethanol	7.0	30	---	---	4
RP 855	Water	4.0	30	---	---	4
RP 855	Water-Glycol	4.0	30	---	---	4
RP 1845	Ethanol	5.5	50	40	6	5

Technical changes reserved!

7.13.2 External control variable (External measurement probe)


You only need to read further here if you have connected an external temperature probe or the actual temperature is read in from a module (and you have activated it as control variable according to Section 7.7.4).

Only modify the control parameters if you have knowledge of control techniques.

The control system for external actual values is implemented for improvement of the control behavior as a two-stage cascade controller. A "master controller" determines the "internal setpoint", from the temperature setpoint and the external temperature, passed to the slave controller. The control value of the slave controller controls the heating and cooling.


When a setpoint step change is specified, it may be that the optimum control would set a bath temperature, which might significantly exceed the temperature desired on the external vessel. There is a correction limitation, which specifies the maximum permissible deviation between the temperature on the external load and the bath temperature.


Master	P Id . .
	<ul style="list-style-type: none"> As shown in the menu structure (\Rightarrow 7.6), the parameters for the external control variable can now be set. Select the parameter with or and confirm with . The set value is displayed. Adapt it with or confirm with . Example: Proportional factor of the master controller $K_{pe} = 1.5$. <p>Parameters Master controller (PIDT₁-controller):</p> <ul style="list-style-type: none"> Ma proportional factor: $EP = K_{pe}$ as factor. Ma proportional range: $Eb = Prop_E$ in kelvin. Ma reset time: $En = Tne$ in seconds. Ma derivative time (auto/man) $Eu = Tve$ in seconds. The thermostat logic system only permits values with $Tne > Tve$! Ma damping time (auto/man) $Ed = Tde$ in seconds.

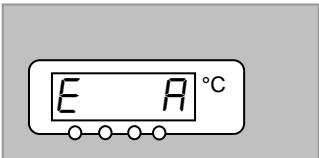

Parameter **Slave controller (P-controller)**:

- **SI** proportional range: $\Delta P = X_{pf}$ in Kelvin.
- Tve, Tde, Prop_E changeover to Auto/ Man
 $E A$ = automatic or $E P$ = manual.
 Works setting is automatic. These three parameters should only be modified by experienced control technicians!

Hold  pressed for 3 seconds, then make changes.

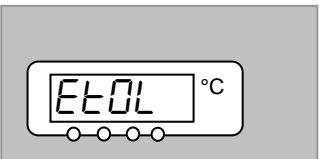





- Correction limitation $E \Delta OL$ See introduction (\Rightarrow 7.13.2).

Command

Control Parameters	
Control para. sets	Kpe 0,50
Tv manual/auto	Tne 100
Correction limitation	Tve (auto) 83
	Tde (auto) 8,3
	Xpf 4,0
	Prop_E(a) 30

Pump	Menu	End	T _{set}	T _{fix}
------	------	-----	------------------	------------------

Control | Control Parameters | Control Parameters

- Open the device parameter menu via the soft key  **Menu**.
- With the cursor keys continue to **→ Control → Control Parameters → Control Parameters**.
- The adjacent window appears.
 Parameter endings:
 e = Master controller, f = Slave controller.
- Where applicable change parameters marked with (auto) to manual input with **Tv manual/auto**.
- Select the parameters to be changed with  and confirm with .
- Then change the value in the following settings window and confirm with .
- **Correction limitation** see introduction (\Rightarrow 7.13.2).

7.13.2.1 Proven settings for control parameters (external control):

External vessel					Master controller (External controller)					Slave controller (Internal controller)	
Instru- ment Type	Heat transfer liquid	Description	Volu- me [L]	Hose- length [m]	Kpe E^P	Tne E_n	Tve E_u	Tde E_d	Prop_E E_b	Xpf i^P	Pump Level
RP 845	Water	double wall glass vessel	2,5	2x1	2.0	80	60	5.0	30	4.0	5
RP 855	Water	double wall glass vessel	2,5	2x1	2.0	150	130	5.0	30	3.0	5
RP 855	Water	double wall stainless steel vessel with water	0,7	2x1	0.5	70	50	5.0	30	3.0	5
RP 855	Ethanol	double wall glass vessel	2,5	2x1	2.0	150	122	15.0	30	3.0	5
RP 855	Ethanol	double wall glass vessel	2,5	2x1	2.0	150	120	15.0	30	3.0	5
RP 855	Ethanol	double wall glass vessel	2,5	2x1	2.0	125	107	15.0	30	3.0	5

Technical alterations reserved!

7.13.2.2 Steps for setting the control parameters for external control

1. Activate external control (\Rightarrow 7.7.4).
2. Setting the slave controller:
 - 2.1. Set parameters to **auto**; Xpf see table (\Rightarrow 7.13.2.1) (experienced data) depending on:
 - Check for thermostat type and change when necessary (RP....) (\Rightarrow 9.2.1),
 - Choose heat transfer liquid with low viscosity and high thermal capacity.
Ranking: water, ethanol, water-glycol, oil, Fluorinert®.
 - Set pump level as high as possible,
 - make bath circulation strong and fast,
 - choose hose length as short as possible, i.e. 2 x 1 m,
 - choose hose cross section as large as possible, i.e. ½ inch,
 - throughput through the external load as large as possible.
 - 2.2. Xpf setting:
 - when oscillating with short period occur (i.e. 30 seconds) \rightarrow Xpf lower, otherwise higher,
 - in case of bad thermal coupling and large thermal mass \rightarrow high (i.e. 2 — 5, or even higher),
 - in case of good thermal coupling and small thermal mass \rightarrow low (i.e. 0.2 — 0.7),
 - when rapid temperature response is required simple internal control should be preferred.
Otherwise select small Xpf (0.05 — 0.1).

3. Setting the master controller (PIDT₁-controller):

- Start with setting Auto and proceed with Manual only when necessary.

3.1. Kpe setting:

- Start with the data from table 7.13.2.1.
- In case of oscillations with large period, i.e. 10 min) → Kpe higher, otherwise lower.

3.2. – Tne/ Tve/ Tde setting:

- Start with the data from table 7.13.2.1; and with high numbers (Tne = 70 s — 200 s; Tve = 50 s — 150 s).
- With lower numbers → faster approach, otherwise slower approach with lower oscillations.
- Tve: to reduce overshoot → Tve higher, otherwise lower.
- Tde (damping for Tve): in general approximately 10 % of Tve.

4. Correction limitation (or outflow temperature limitation) (⇒ 7.13.2.1) und temperature limits (Til/Tih) (⇒ 7.8.3):

- Make settings in accordance with the boundary conditions. Examples:

Heat transfer liquid	Correction limitation	Til	Tih
Water	depending on the external vessel size and the thermostatic liquid	2 °C	95 °C
Ethanol		Minimum	40 °C

Tools to watch the time behavior:

- Graph mode of the Command remote control,
- LAUDA Wintherm PC-program.

7.13.3 Internal and external control parameter sets


If a thermostat is used for a number of applications, which always leads to a change of the control parameters, these control parameters (up to 9 sets) can be saved in the thermostat and activated again as required.

Also saving is useful for finding the best control parameters; in this way external management of the control parameters can be avoided.

There are 9 sets (each for internal and external sets of control parameters) saved at the factory. In this menu the control parameters cannot be edited, they are only displayed.



- With **Activate** the currently valid control parameters are used.
- With **Upload actual** the actual ones are read in and saved (for later reuse).
- With **Default** the set of control parameters saved at the works is loaded again (in this case the control parameters set by the customer are lost).



Command					Control parameter sets	
<div> <div>Control Parameters</div> <div>Control para. sets</div> <div>Tv manual/auto</div> <div>Self Adaption</div> </div>					<div> <div>Set 1</div> <div>Set 2</div> <div>Set 3</div> <div>Set 4</div> <div>Set 5</div> <div>Set 6</div> <div>Set 7</div> <div>Set 8</div> <div>Set 9</div> </div>	
Pump	Menu	End	T _{set}	T _{fix}		
<div> <div>Status</div> <div>intern</div> <div>extern</div> </div>					<div> <div>Activate</div> <div>Upload actual</div> <div>Default</div> </div>	
Pump	Menu	End	T _{set}	T _{fix}		

– Open the device parameter menu via the soft key  **Menu**.

– With the cursor keys continue to: → **Control** → **Control Parameters** → **Control para. sets**.

– The adjacent window appears. Set 1 to Set 9.

– Select the desired set with  and confirm with .

– Select the desired set to be changed with  and confirm with .

– In the setting window (see left) the selected set is listed under **internal** or **external** in the display.

– Under **Status** the previously selected set: is activated, is read in and the set, who was saved at the factory, is restored.

Editing the control parameter sets

The change in the control parameters is explained in Section 7.13.1/7.13.2 (internal / external). Once the value has been changed and confirmed, the set number, e.g. **Set 3** and **Upload actual**, the new value is accepted into the control parameter set to be changed (Set 3) via the command **Control parameter sets**.

7.13.4 Self Adaption

The function Self Adaption can be used to detect automatically the optimal control parameters for internal or external control.

The Self Adaption can be performed only on a device with active cooling.




This function is available from software version 2.18 of Command. For thermostats with an older software version a software update is necessary.


The Self Adaption determines the parameters by a test run of the thermostat. In this case the thermostat and, if applicable, the external application must be ready for operation (\Rightarrow 6.1).

The Self Adaption will be performed with the actually set pump step. Best results can be achieved with high pump steps.

The test run must be performed at a passive system, this means that during the test run a exo- or endthermic reaction mustn't take place.

The test run takes depending on the external application about 30 minutes to 3 hours. The bath temperature will oscillate in this time less than about ± 15 Kelvin around the set temperature. After the test run the detected control parameters will be taken over as control parameters automatically.

Command		Self Adaption
<div> Control Parameters Control para. sets Tv manual/auto Self Adaption Correction limitation </div> <div> Settings </div> <div> Pump Menu End T_{set} T_{fix} </div>	<ul style="list-style-type: none"> Open the device parameter menu via the soft key  Menu. With the cursor keys continue to: → Control → Control Parameters → Self Adaption → Settings. Confirm selection with . 	
<div> Status Setpoint Identification Actual Parameters </div> <div> Start </div> <div> Pump Menu End T_{set} T_{fix} </div>	<ul style="list-style-type: none"> The window shown adjacent appears. With the menu Status the test run of the Self Adaption can be started. When the Self Adaption is finished, the test run will be terminated automatically. As soon as start  is pressed, in the sofkey area the information Adaption on will be displayed followed by the actual status of the test run. 	

Status Setpoint Identification Actual Parameters	<div>30,00°C</div>	<ul style="list-style-type: none"> With the menu Setpoint the set temperature for the test run can be set. The bath temperature will oscillate less than about ± 15 Kelvin around the set temperature. Change the display in the adjacent window and accept with .
<div>Pump</div> <div>Menu</div> <div>End</div> <div>T_{set}</div> <div>T_{fix}</div>		
Status Setpoint Identification Actual Parameters	<div>intern</div> <div>intern + extern</div>	<ul style="list-style-type: none"> With the menu Identification the optimal control parameters for internal control or for the internal control and the external control can be detected automatically. To detect the control parameters for the external application, a temperature probe must be connected to the thermostat.
<div>Pump</div> <div>Menu</div> <div>End</div> <div>T_{set}</div> <div>T_{fix}</div>		
Status Setpoint Identification Actual Parameters	<div>Store in Set 9</div>	<ul style="list-style-type: none"> With the menu Actual Parameters the actual set control parameters can be stored in parameter set 9. After the test run the detected control parameters will be taken over as control parameters automatically. If the parameters found do not fulfil your expectations, the before set parameters can be restored (\Rightarrow 7.13.3).
<div>Pump</div> <div>Menu</div> <div>End</div> <div>T_{set}</div> <div>T_{fix}</div>		

7.14 Alarms, Warnings and Errors


The SelfCheck Assistant of your Proline Thermostat monitors more than 50 device parameters and triggers alarms, warnings or errors as appropriate.

All warnings and alarms are shown on the Command remote control in plain text. Errors are shown in plain text on the Command remote control in an error list.



Alarms: Alarms are safety relevant. Pump, heater and refrigerating unit will be shut off.

Warnings: Warnings normally are not safety relevant. The thermostat continues to operate.

Errors: When an error occurs switch off the device. If the error is always present after switching on the device, please inform the LAUDA Service Constant Temperature Equipment (⇒ 9.4).

Find cause of alarm or warning and rectify where necessary. Then press  on the Master keyboard in order to remove the alarm message. Warning messages can be removed either on the Master keyboard

with  or on the Command remote control with .

Warnings may be ignored by pressing  or  on the Master keyboard or by activating the **Screen** Softkey on the Command remote control. Otherwise, warnings will be repeated periodically.

7.14.1 Overtemperature protection and checking




The units are designed for operation with non-flammable and flammable liquids to DIN EN 61010-2-010.




Setting the overtemperature cut-off: Recommended setting: 5 °C above desired bath temperature.


Caution!! The overheat switch-off point T_{max} is controlled by a system functioning independently of the bath control. Setting of the nominal temperature, however, can be limited via the functions T_{ih} and T_{il} (⇒ 7.8.3) independently of T_{max} .




- The cut-off point is displayed in the LED display on pressing the  key.







Overtemp. cut-off





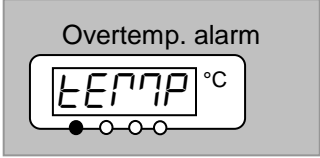


Changing the overtemperature cut-off point:


- For safety, and to guard against unintentional adjustment, the key  must be held pressed during all the following entries. Now,

briefly press . The display flashes and the overtemperature cut-off can be set with the keys  or .









- Quit the change mode by pressing  for a few seconds or automatically after 5 seconds, while you keep  pressed.
- This somewhat complicated procedure is intended to prevent unintentional adjustment.
- Set the overtemperature switch-off point T_{max} below the flash point of the heat transfer liquid (\Rightarrow 6.3).
- The setting range is restricted to 5 °C above the upper limit of the working temperature range T_{ih} (\Rightarrow 7.8.3).
- If the bath temperature rises above the overtemperature cut-off:
 1. Alarm sounds as dual-tone signal.
 2. **EEP7P** for overtemperature appears in the display.
 3. The red LED  above the fault triangle  flashes.
 - \rightarrow Heater switches off on both poles,
 - \rightarrow Pump and refrigerating unit are switched off electronically.
- Rectify cause of fault.
- Wait until the bath temperature has cooled below the cut-off point or set the cut-off point higher than the bath temperature. When **EEP7P** is shown in the display:
- Unlock with the  key.


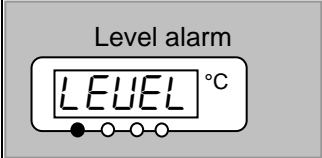







Unlocking is not possible on the Command remote control!

- Before longer periods of unsupervised operation, the **overtemperature protection should be checked. To do this**
 - slowly lower T_{max} , as described above.
 - \rightarrow Cut-off at the bath temperature should occur.
 - Step 1 – 2 (see above) must follow.
 - Set the overtemperature cut-off higher than the bath temperature again and wait until **EEP7P** appears in the display.
 - Unlock with the  key.

Unlocking is not possible on the Command remote control!


Command	Overtemperature alarm!
	<ul style="list-style-type: none"> – Overtemperature alarm! is shown in the display and signifies that <u>unlocking is only possible on the Master control panel.</u>


7.14.2 Low-level alarm and low-level checking

    	<p>If the liquid level falls so far that the heating element is no longer completely covered with liquid, an alarm is initiated:</p> <ol style="list-style-type: none"> 1. The alarm sounds as a dual-tone signal. 2. Display for <i>LEVEL</i> (low level) is shown when the bath contains too little liquid. 3. The red LED  above the fault triangle  flashes. <ul style="list-style-type: none"> → Heater switches off on both poles; → Varioflex pump and refrigerating unit are switched off. <ul style="list-style-type: none"> – Find the cause of the fault and, where necessary, top up for missing liquid (⇒ 6.2 and 6.3). – Press the Enter key. – Also, press this key if the unit has been switched off in the fault state. <ul style="list-style-type: none"> – Checking the safety system at regular intervals by lowering the bath level. To do this, push hose onto pump connector and pump heat transfer liquid into a suitable vessel. – Step 1 – 2 must follow.
	<ul style="list-style-type: none"> – With this test, the bath temperature must not be below 0 °C or above max. 50 °C, otherwise there is a risk of burning! – If irregularities arise during the checking of the safety devices, switch off the unit immediately and pull out the mains plug. – Have the equipment checked by LAUDA Service Constant Temperature Equipment.
Command	<div>Low-level alarm!</div>
	<ul style="list-style-type: none"> – <div>Low-level alarm</div> is shown in the display and signifies that <u>unlocking is only possible on the Master control panel.</u>

7.14.3 High-level settings


Different reactions can be chosen when the level sensor detects the height of the heat transfer liquid level. Depending on the setup, heat transfer liquid or operation conditions, one of the following settings may be suitable:


Setting	Master settings	Command settings	Reaction and application recommendation
No warning	nHnoH	none	Select only when no safety sensitive application. I.e. water as heat transfer liquid.
Warning	nHLLJ	Warning	Acoustic and optical warning as long as the level goes down. This is the factory setting.
Warning and heater off	nHLLJH	Warning + heater off	<i>Warning</i> and additional <i>heater off</i> as long as the level goes down. Recommended for flammable heat transfer liquids with much higher flash point and temperatures above 100 °C.
Alarm	nHALLA	Alarm	<i>Alarm</i> switches off the pump and the heater until the alarm is removed by pressing  on the Master keyboard. Recommended for external loads and flammable liquids.

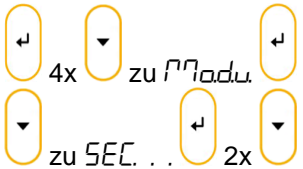Master


nHLLJ

- Choose the menu for the high-level reaction.
- The factory setting is nHLLJ. That is a warning.

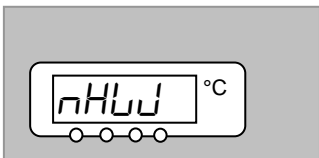

- Press  to enter the setup mode. The current setting flashes.
- Choose a setting from the above list.



Command

Over level handling







none
Warning
Warn.+ Heater off
Alarm

Pump | Menu | End | T_{set} | T_{fix}





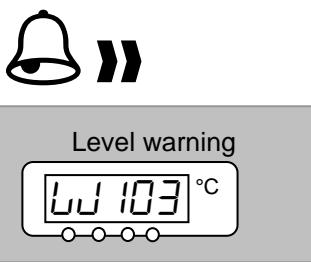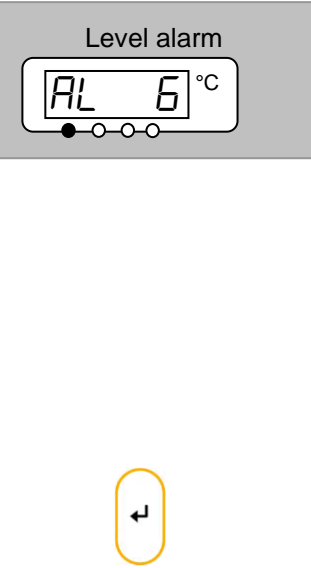


Over level handling

- Open the device parameter menu via the soft key  **Menu**.
- With the cursor keys continue to → **Settings** → **Over level handling**.
- The shown window appears
- Select the preferred parameter with ▼ or ▲ and confirm with .
- See introduction for details.









7.14.4 High-level warning or alarm

	<ul style="list-style-type: none"> – Acoustic warning signal sounds for 3 seconds when the liquid level rises so far that the uppermost switching point of the level sensor has been reached.
	<p>Or in case the warning function as described in 7.14.3 was chosen:</p> <ul style="list-style-type: none"> – The acoustic signal with dual-tone sounds. – Warning LJArn 103 (high level) appears when the bath contains too much liquid. – The LJArn flashes by turns with the numeral.
	<p>In case the alarm function as described in 7.14.3 was chosen:</p> <ul style="list-style-type: none"> – The acoustic signal with dual-tone sounds. – The red LED  above the fault triangle  flashes. → Heater switches off on both poles, → Varioflex pump and refrigerating unit are switched off electronically. – Find the cause of the fault. Possible causes may be: <ol style="list-style-type: none"> 1. Volume expansion on heating. 2. Feed to an external vessel may be interrupted so that only return suction is possible. 3. Heat transfer liquid taking up moisture. – If Alarm: Press Enter key. Warnings disappear automatically when the cause is gone. – Also, press this key if the unit has been switched off in the fault state. Warnings disappear automatically when the cause is gone.
Command	<div>High-level warning/alarm</div>
	<ul style="list-style-type: none"> – The display shows <div>Warning. To release press Enter key</div> <div>Security 3 Level too high</div> or <div>Alarm AL 6: Level too high</div> is shown in the display and signifies that <u>unlocking is only possible on the Master control panel.</u>

7.14.5 Pump-motor supervision: Overload or blockage

 <div data-bbox="242 430 566 586" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> Pump alarm  </div> <div data-bbox="338 593 491 645">  </div> <div data-bbox="368 689 422 790">  </div>	<p>The SelfCheck Assistant monitors the Varioflex pump:</p> <ol style="list-style-type: none"> 1. Alarm sounds as dual-tone signal for pump-motor overload or blockage. 2. Display of <i>bLOC</i> signals blockage. 3. The red LED  above the fault triangle  flashes. → Heater switches off on both poles, → Pump and refrigerating unit are switched off electronically. <ul style="list-style-type: none"> – Find the cause of the fault. Perhaps the viscosity of the heat transfer liquid is too high or the pump is blocked. – Press the Enter key. – Also press this key if the unit has been switched off in the fault state.
Command	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Pump-motor alarm!</div>
	<ul style="list-style-type: none"> – <div style="border: 1px solid black; padding: 2px; display: inline-block;">Pump-motor alarm</div> is shown in the display and signifies that <u>unlocking is only possible on the Master control panel.</u>

7.14.6 Pump-motor supervision: Dry running

 <div data-bbox="242 1232 566 1388" style="border: 1px solid black; padding: 5px; margin: 10px 0;"> Pump alarm  </div> <div data-bbox="338 1395 491 1447">  </div> <div data-bbox="272 1480 352 1523">  </div> <div data-bbox="368 1563 422 1664">  </div>	<p>The SelfCheck Assistant monitors the Varioflex pump:</p> <ol style="list-style-type: none"> 1. Alarm sounds as dual-tone signal when the pump runs without liquid. This can only occur when the float level measurement has failed. 2. The display of <i>PULEU</i> signals that the SelfCheck Assistant has detected a pump low level. 3. The red LED  above the fault triangle  flashes. → Heater switches off on both poles, → Pump and refrigerating unit are switched off electronically. <p>The cause of the failure of the level measurement with the floatation sensor must be found and rectified. Perhaps it is blocked by foreign bodies in the bath.</p> <ul style="list-style-type: none"> – Press the Enter key. – Also press this key if the unit has been switched off in the fault state.
Command	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Alarm! Low level (pump)</div>
	<ul style="list-style-type: none"> – <div style="border: 1px solid black; padding: 2px; display: inline-block;">Alarm! Low level (pump)</div> is shown in the display and signifies that <u>unlocking is only possible on the Master control panel.</u>

7.14.7 Fault list „Alarms and Warnings“

Alarms

Message	Meaning
PJLEU	Pump too fast (low level)
LEUEL	Low level alarm in the level sensor
TEPPP	Overtemperature ($t > t_{max}$)
BLDC	Pump blocked (no rotation)
CFR IL	Command connection interrupt
AL 1	Temperature signal of external Pt100 missing
AL 2	Temperature signal of analogue input missing
AL 3	Temperature signal of serial port missing
AL 4	Analogue module: Current input 1 interrupted
AL 5	Analogue module: Current input 2 interrupted
AL 6	Protection system: High bath level
AL 7	Error digital input (from V 1.30 on)
AL 8	Refill fail

Warnings “Master-Display”

Message	Meaning
LJ 1	Overflow of CAN receipt
LJ 2	Watchdog-Reset
LJ 3	til-limitation active
LJ 4	tih-limitation active
LJ 5	Heatsink temperature
LJ 11	Software version of protection system too old
LJ 12	Software version of operating system too old
LJ 13	Software version of heating system too old
LJ 14	Software version of analogue Interface too old
LJ 15	Software version of RS-232 too old
LJ 16	Software version of contact I/O module too old
LJ 17	Software version of valve 0 too old
LJ 18	Software version of valve 1 too old
LJ 19	Software version of valve 2 too old
LJ 20	Software version of valve 3 too old
LJ 21	Software version of pump 0 too old
LJ 22	Software version of pump 1 too old
LJ 23	Software version of pump 2 too old
LJ 24	Software version of pump 3 too old

Warnings “Safety system”

Message	Meaning
LJ 101	Overflow of CAN receipt
LJ 102	Watchdog-Reset
LJ 103	Close to bath overflow
LJ 104	Bath level is approaching switch off level or is out of optional range
LJ 105	Heater 1 break
LJ 106	Heater 2 break
LJ 107	Heater 3 break
LJ 110	Software version of control system too old
LJ 112	Software version of operating system too old
LJ 113	Software version of heating system too old
LJ 114	Software version of analogue interface too old
LJ 115	Software version of RS-232 too old
LJ 116	Software version of contact I/O module too old
LJ 117	Software version of valve 0 too old
LJ 118	Software version of valve 1 too old
LJ 119	Software version of valve 2 too old
LJ 120	Software version of valve 3 too old
LJ 121	Software version of pump 0 too old
LJ 122	Software version of pump 1 too old
LJ 123	Software version of pump 2 too old
LJ 124	Software version of pump 3 too old

Warnings in the “Command-Display”

Message	Meaning
LJ20 1	Overflow of CAN receipt
LJ20 2	Watchdog-Reset
LJ20 3	RTC Voltage drop recognized: Battery failure
LJ2 10	Software version of control system too old
LJ2 11	Software version of protection system too old
LJ2 13	Software version of heating system too old
LJ2 14	Software version of analogue interface too old
LJ2 15	Software version of RS-232 too old
LJ2 16	Software version of contact I/O too old
LJ2 17	Software version of valve 0 too old
LJ2 18	Software version of valve 1 too old
LJ2 19	Software version of valve 2 too old
LJ22 0	Software version of valve 3 too old
LJ22 1	Software version of pump 0 too old
LJ22 2	Software version of pump 1 too old
LJ22 3	Software version of pump 2 too old
LJ22 4	Software version of pump 3 too old

Warnings from “Cooling system”

Message	Meaning
LJ30 1	Overflow of CAN receipt
LJ30 2	Watchdog-Reset
LJ30 3	sm.stell_min still not determined → Adaption run necessary
LJ30 4	Pressure switch 1 operated
LJ30 5	Condenser dirty (→ cleaning)
LJ3 10	Software version of control system too old
LJ3 11	Software version of protection system too old
LJ3 12	Software version of operation system
LJ3 14	Software version of analogue interface too old
LJ3 15	Software version of RS-232 too old
LJ3 16	Software version of contact I/O too old

Warnings from “Analogue-Module”

Message	Meaning
LJ40 1	Overflow of CAN receipt
LJ40 2	Watchdog-Reset
LJ4 10	Software version of control system too old
LJ4 11	Software version of protection system too old
LJ4 12	Software version of operation system
LJ4 13	Software version of heating system too old
LJ4 15	Software version of RS-232 too old
LJ4 16	Software version of contact I/O too old
LJ4 17	Software version of valve 0 too old
LJ4 18	Software version of valve 1 too old
LJ4 19	Software version of valve 2 too old
LJ42 0	Software version of valve 3 too old
LJ42 1	Software version of pump 0 too old
LJ42 2	Software version of pump 1 too old
LJ42 3	Software version of pump 2 too old
LJ42 4	Software version of pump 3 too old

Warnings from “RS-232/485-Module”

Message	Meaning
LJ50 1	Overflow of CAN receipt
LJ50 2	Watchdog-Reset
LJ5 10	Software version of control system too old
LJ5 11	Software version of protection system too old
LJ5 12	Software version of operation system
LJ5 13	Software version of heating system too old
LJ5 14	Software version of analogue interface too old
LJ5 16	Software version of contact I/O too old
LJ5 17	Software version of valve 0 too old
LJ5 18	Software version of valve 1 too old
LJ5 19	Software version of valve 2 too old
LJ52 0	Software version of valve 3 too old
LJ52 1	Software version of pump 0 too old
LJ52 2	Software version of pump 1 too old
LJ52 3	Software version of pump 2 too old
LJ52 4	Software version of pump 3 too old

Warnings from "Contact I/O-Module"

Message	Meaning
LL601	Overflow of CAN receipt
LL602	Watchdog-Reset
LL610	Software version of control system too old
LL611	Software version of protection system too old
LL612	Software version of operation system
LL613	Software version of heating system too old
LL614	Software version of analogue interface too old
LL615	Software version of RS-232 too old
LL617	Software version of valve 0 too old
LL618	Software version of valve 1 too old
LL619	Software version of valve 2 too old
LL620	Software version of valve 3 too old
LL621	Software version of pump 0 too old
LL622	Software version of pump 1 too old
LL623	Software version of pump 2 too old
LL624	Software version of pump 3 too old


Warnings from "Solenoid valve" Code 7, 8, 9XX)

Message	Meaning
LL701	Overflow of CAN receipt
LL702	Watchdog-Reset
LL710	Software version of control system too old
LL711	Software version of protection system too old
LL712	Software version of operation system
LL713	Software version of heating system too old
LL714	Software version of analogue interface too old
LL715	Software version of RS-232 too old
LL716	Software version of contact I/O too old
LL721	Software version of pump 0 too old
LL722	Software version of pump 1 too old
LL723	Software version of pump 2 too old
LL724	Software version of pump 3 too old

8 Interfaces - Modules

8.1 Installing of modules

The master and command can be supplemented with further interface modules, which are simply inserted at the back of the control head into two module slots.

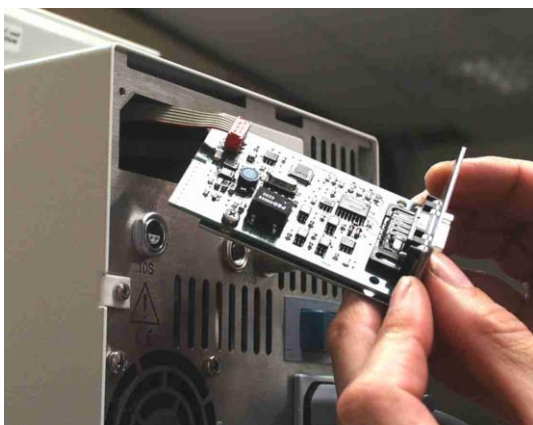

- Touch the earthed bath cover of the Proline thermostat to discharge any electrostatic charge.
- Remove the module from its packaging.
- Switch off the thermostat and pull out the mains plug.
- Insert a screwdriver into the lower recess of the module cavity and prise up the plastic cover. The cover can then be pulled off downwards.

- Pull out the plug of the bus connecting cable from the plastic cover.


- Plug on the bus connecting cable (red plug onto red socket).
- Insert the module and secure with the two crosshead screws.
- Connect the mains plug again and switch on the thermostat.



The plugs are protected against reverse polarity. The plugs have a ridge, which slides into a groove in the socket.

8.2 Menu structure for all modules

All existing menu points are illustrated. However, the Command remote control masks out menu points, which cannot be executed. Further information can be found in the following sections.

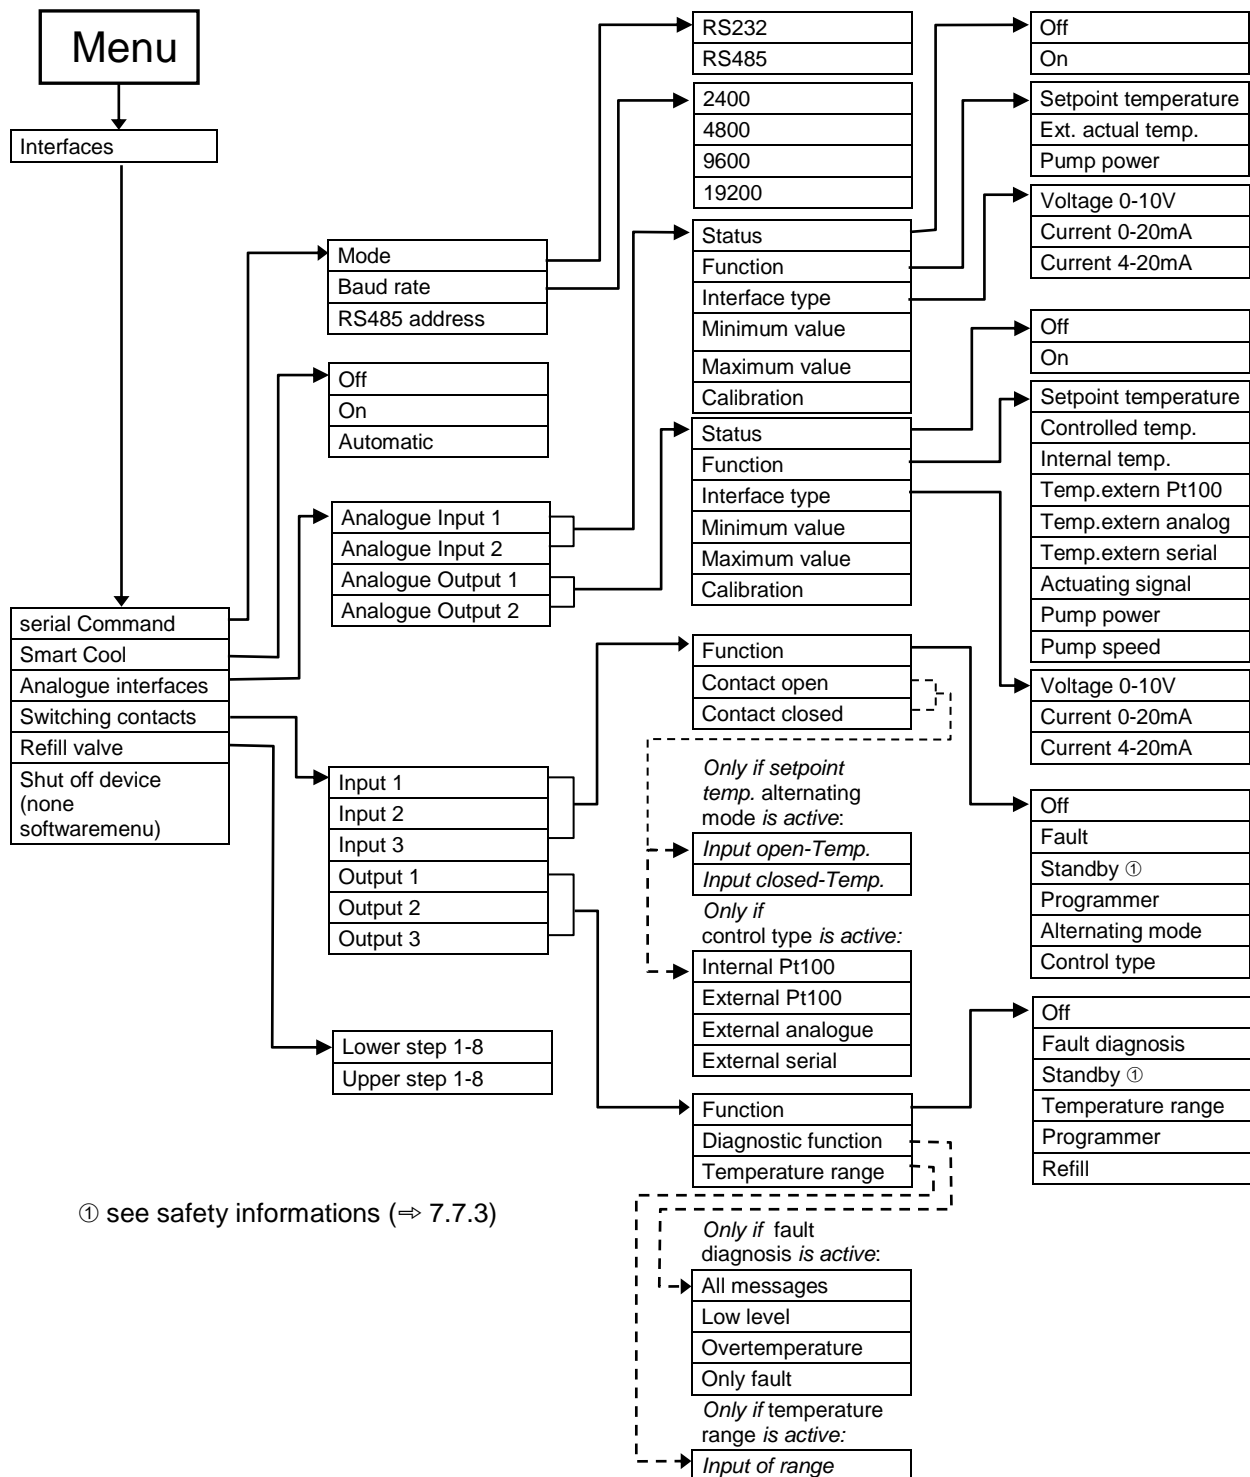

8.3 RS-232/485 Serial Interface

RS-232/485 Interface Module (catalogue no. LRZ 913) with 9-pole SUB-D socket. Electrically isolated by optocoupler. With the LAUDA instruction set essentially compatible to the ECO, Ecoline and Integral XT and Integral T Series. The RS-232 interface can be connected directly to the PC with a 1:1 through-contact cable (catalogue no. EKS 037).

8.3.1 Connecting cables and interface test RS-232

Computer					Thermostat		
Signal	9-pin sub-D-socket		25-pin sub-D-socket		9-pin sub-D-socket		Signal
	①	②	①	②	①	②	
R x D	2	2	3	3	2	2	T x D
T x D	3	3	2	2	3	3	R x D
DTR	4		20		4		DSR
Signal Ground	5	5	7	7	5	5	Signal Ground
DSR	6		6		6		DTR
RTS	7		4		7		CTS
CTS	8		5		8		RTS

- ① with hardware handshake: For connecting a thermostat to the PC use 1:1 cable and not a null-modem cable!
- ② without hardware handshake: the computer / PC must be set to the operating mode "without hardware handshake".



- Use screened connecting cable.
- Connect screen to connector case.
- The connections are isolated from the remainder of the electronics.
- Any pins not in use must not be connected!

When a PC is connected up the RS-232 interface can easily be **tested** using the Microsoft Windows operating system. On Windows® 3.11 with the "Terminal" program, on Windows® 95/ 98/ NT/ XP with the "Hyper Terminal" program.

"HyperTerminal" is no longer included in the operating system in Windows Vista, Windows 7 and Windows 8.

- It is possible to communicate with the RS 232-interface using the LAUDA control and application software, Wintherm Plus (catalog number LDSM2002).
- Terminal programs are available on the Internet as freeware. These programs offer features similar to "HyperTerminal" (for example PuTTY). Search query "serial port terminal program".

8.3.2 Protocol RS-232



- The interface operates with one stop bit, no parity bit and 8 data bits.
- Transfer rate either 2400, 4800, 9600 (factory setting) or 19200 baud as selected.
- The RS-232 interface can be operated with or without hardware handshake, (RTS/CTS).
- The command from the computer must be terminated with CR, CRLF, or LFCR.
- The response of the thermostat is always terminated with CRLF.
- After each command sent to the thermostat, it is necessary to wait for the reply before sending another command. This ensures that the sequencing of inquiries and answers is clear.

CR = Carriage Return (Hex: 0D)

LF = Line Feed (Hex: 0A)

Example: Transfer of setpoint 30,5 °C to the thermostat


Computer	Thermostat
"OUT_SP_00_30.5"CRLF	⇒
⇐	"OK"CRLF

8.3.3 Connecting cable RS-485

Thermostat	
9-pin sub-D-socket	
Pin	Data
1	Data A (-)
5	SG (Signal Ground) optional
6	Data B (+)



- Use screened connecting cables.
- Connect screen to connector case.
- The connections are isolated from the remainder of the electronics.
- Any pins not in use must not be connected!

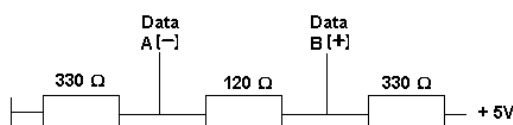

An **RS-485** bus always requires bus termination in the form of a termination network which ensures a defined rest status in the high-resistance phases of bus operation. The bus termination is as follows:

This termination network is usually incorporated on the PC plug-in card (RS-485).

8.3.4 Protocol RS-485



- The interface operates with one stop bit, no parity bit and 8 data bits.
- Transfer rate either 2400, 4800, 9600 (Factory setting) or 19200 baud as selected.
- The RS-485 commands are always preceded by the device address. There is provision for 127 addresses. The address must always have three digits. (A000_...to A127_...)
- The command from the computer must be terminated with CR.
- The response of the thermostat is always terminated with CR.

CR = Carriage Return (Hex: 0D)

Example: Transfer of setpoint 30.5 °C to the thermostat with address 15.

Computer	Thermostat
"A015_OUT_SP_00_30.5"CR	⇒
⇐	"A015_OK"CR

8.3.5 Write commands (Data commands to the thermostat)

Command	Explanation
OUT_PV_05_XXX.XX	External temperature given via interface.
OUT_SP_00_XXX.XX	Setpoint transfer with up to 3 places before the decimal point and max. 2 places after it.
OUT_SP_01_XXX	Pump power level 1 to 8.
OUT_SP_02_XXX	Operation mode cooling (0 = OFF / 1 = ON / 2 = AUTOMATIC).
OUT_SP_04_XXX	TiH outflow temperature limit, high limit.
OUT_SP_05_XXX	TiL outflow temperature limit, low limit.
OUT_PAR_00_XX.X	Setting of control parameter Xp.
OUT_PAR_01_XXX	Setting of control parameter Tn (5 — 180 s; 181 = Off).
OUT_PAR_02_XXX	Setting of control parameter Tv.
OUT_PAR_03_XX.X	Setting of control parameter Td.
OUT_PAR_04_X.XX	Setting of control parameter KpE.
OUT_PAR_05_XXX	Setting of control parameter TnE (5 — 979 s; 980 = Off).
OUT_PAR_06_XXX	Setting of control parameter TvE (0 = Off).
OUT_PAR_07_XX.X	Setting of control parameter TdE.
OUT_PAR_09_XXX.X	Setting of the correction limitation.
OUT_PAR_10_XX.X	Setting of control parameter XpF.
OUT_PAR_14_XXX.X	Setting of the setpoint offset.
OUT_PAR_15_XXX	Setting of control parameter PropE
OUT_MODE_00_X	Keyboard Master: 0 = free / 1 = locked (corresponds to "KEY").
OUT_MODE_01_X	Control: 0 = internal / 1 = external Pt100 / 2 = external Analogue / 3 = external Serial.
OUT_MODE_03_X	Keyboard Command: 0 = free / 1 = locked.
OUT_MODE_04_X	Setpoint offset source: 0 = normal / 1 = external Pt / 2 = external analogue / 3 = external serial.

Command	Explanation
START	Switches the unit on (after Standby). See safety information (⇒ 7.7.3).
STOP	Switches the unit into Standby (pump, heater, cooling unit OFF).
RMP_SELECT_X	Selection of the program (1 — 5) to which the further instructions apply. When the unit is switched on, program 5 is selected automatically.
RMP_START	Start the programmer.
RMP_PAUSE	Hold (pause) the programmer.
RMP_CONT	Restart the programmer after pause.
RMP_STOP	Terminate the program.
RMP_RESET	Delete the program (all Segments).
RMP_OUT_00_XXX.XX_XXXXX_XXX.XX_X	Set a programmer segment (temperature, time, tolerance and pump level). A segment is added and appropriate values are applied to it.
RMP_OUT_02_XXX	Number of times the program runs: 0 = unlimited / 1 — 250.



- For ”_“ use also ” ” (blank character).
- Response from thermostat ”OK“ or in case of error ”ERR_X“ (RS-485 interface e.g. ”A015_OK“ or in case of error ”A015_ERR_X“).

Permitted data formats:

-XXX.XX	-XXX.X	-XXX.	-XXX	XXX.XX	XXX.X	XXX.	XXX
-XX.XX	-XX.X	-XX.	-XX	XX.XX	XX.X	XX.	XX
-X.XX	-X.X	-X.	-X	X.XX	X.X	X.	X
-.XX	-.X	.XX	.X				

8.3.6 Read commands (Data requested from the thermostat)

Command	Explanation
IN_PV_00	Read bath temperature (outflow temperature).
IN_PV_01	Indication of the controlled temperature (internal/ external Pt / external analogue / external serial).
IN_PV_03	Read external temperature TE (Pt100).
IN_PV_04	Read external temperature TE (analogue input).
IN_PV_05	Read current bath level.
IN_PV_10	Read bath temperature (outflow temperature) in 0.001 °C.
IN_PV_13	Read external temperature TE (Pt100) in 0.001 °C.
IN_SP_00	Read temperature setpoint.
IN_SP_01	Read current pump power level
IN_SP_02	Read cooling operation mode (0 = OFF / 1 = ON / 2 = AUTOMATIC).
IN_SP_03	Read current overtemperature switch-off point.
IN_SP_04	Read current outflow temperature limit TiH.
IN_SP_05	Read current outflow temperature limit TiL.
IN_PAR_00	Read current value of Xp.
IN_PAR_01	Read current value of Tn (181 = OFF).
IN_PAR_02	Read current value of Tv.
IN_PAR_03	Read current value of Td.
IN_PAR_04	Read current value of KpE.
IN_PAR_05	Read current value of TnE (980 = OFF).

Command	Explanation
IN_PAR_06	Read current value of TvE (0 = OFF).
IN_PAR_07	Read current value of TdE.
IN_PAR_09	Read current value of correction limitation
IN_PAR_10	Read current value of XpF.
IN_PAR_14	Read setpoint offset.
IN_PAR_15	Read current value of PropE.
IN_DI_01	State of contact input 1: 0 = open / 1 = closed.
IN_DI_02	State of contact input 2: 0 = open / 1 = closed.
IN_DI_03	State of contact input 3: 0 = open / 1 = closed.
IN_DO_01	State of Contact output 1: 0 = make-contact open / 1 = make-contact closed.
IN_DO_02	State of Contact output 2: 0 = make-contact open / 1 = make-contact closed.
IN_DO_03	State of Contact output 3: 0 = make-contact open / 1 = make-contact closed.
IN_MODE_00	Keyboard Master: 0 = free / 1 = inhibited.
IN_MODE_01	Control: 0 = internal / 1 = external Pt100 / 2 = external analogue / 3 = external serial
IN_MODE_02	Standby: 0 = Unit ON / 1 = Unit OFF.
IN_MODE_03	Keyboard Command: 0 = free / 1 = inhibited.
IN_MODE_04	Setpoint offset source: 0 = normal / 1 = external Pt / 2 = external analogue / 3 = external serial
TYPE	Read the device type (for example "RP 845").
VERSION_R	Read software version number of control system.
VERSION_S	Read software version number of protection system.
VERSION_B	Read software version number of Command.
VERSION_T	Read software version number of cooling system.
VERSION_A	Read software version number of analogue module.
VERSION_V	Read software version number of RS-232/485 module.
VERSION_D	Read software version number of digital module.
VERSION_M_0	Read software version number of solenoid valve (Cooling water).
VERSION_M_1	Read software version number of solenoid valve (Automatic refill).
VERSION_M_3	Read software version number of solenoid valve (shut-off valve 1).
VERSION_M_4	Read software version number of solenoid valve (shut-off valve 2).
VERSION_M_5	Read software version number of high-temperature cooler.
STATUS	Read equipment status 0 = OK, -1 = error.
STAT	Read error diagnosis Response: XXXXXXXX → X = 0 no error, X = 1 error. 1. char = error 2. char = Alarm 3. char = Warning 4. char = over temperature 5. char = low-level error 6. char = high-level error (at adjustment alarm) 7. char = no external control variable

Command	Explanation
RMP_IN_00_XXX	Read a program segment XXX (response: e. g. "030.00_010_005.00_001.00" => set point temperature 30.00 °C, time = 10 min, tolerance = 5.00 K, pump level = 1).
RMP_IN_01	Read current segment number.
RMP_IN_02	Read set number of program runs.
RMP_IN_03	Read current program run.
RMP_IN_04	Read the program to which further instructions apply.
RMP_IN_05	Read which program is running now (0 = none).
LOG_IN_00_XXXX	Read measuring point XXXX from data logger (Reply: e. g. 020.00_021.23_030.50 → set point temperature = 20.00 °C, bath temperature = 21.23 °C, external temperature = 30.5 °C).
LOG_IN_01	Read all measuring points from data logger. As a difference to the command "LOG_IN_00", a tabulator is used here as separator instead of ','. The measuring points are separated by CR and LF. The end is marked by CR LF CR LF.
LOG_IN_02	Read starting time of the data logger (Reply: e.g. 20_14_12_20 → day 20, 14:12:20 o'clock).
LOG_IN_03	Read acquisition interval from the data logger (Reply in seconds).



- For " _ " use also " " (blank character).
- The equipment response is always in the fixed decimal format "XXX.XX" or for negative values "-XXX.XX" or "ERR_X". (RS-485 interface e.g.. "A015_XXX.XX" or "A015_-XXX.XX" or "A015_ERR_X").

8.3.7 Error messages

Message	Explanation
ERR_2	Wrong input (e.g. buffer overflow)
ERR_3	Wrong command
ERR_5	Syntax error in value
ERR_6	Illegal value
ERR_8	Module (ext. temperature) not available
ERR_30	Programmer, all segments occupied.
ERR_31	Set point not possible, analogue set point input ON.
ERR_32	TiH ≤ TiL.
ERR_33	external sensor missing
ERR_34	Analogue value not available
ERR_35	Automatic is selected
ERR_36	No set point input possible. Programmer is running or paused.
ERR_37	No start from programmer possible, analogue setpoint input is switched on.

8.3.8 Driver software for LABVIEW®

An individual, easy-to-use control and automation software for operating the PROLINE device can be programmed with the aid of the National Instruments program development tool LABVIEW® (<http://sine.ni.com/apps/we/nioc.vp?cid=1381&lang=US>).

In order to make program operation possible on the RS-232/485 interface, LAUDA provides drivers specially designed for LABVIEW® which can be downloaded free of charge under www.lauda.de/spec-e.htm.

8.4 Analogue module

The analogue module (catalogue no. LRZ 912) has 2 inputs and 2 outputs, which are brought out on a 6-pole DIN socket to Namur Recommendation (NE28). The inputs and outputs can be set independently as 4 – 20 mA, 0 – 20 mA or 0 – 10V interface. Various functions can be selected for the inputs and outputs. Accordingly, the signal on the input is interpreted differently and different information is output via the output connection.

In addition the interfaces can be scaled freely according to the set function.

For measuring transducer are 20 V DC available.

The following values can be specified via the inputs:

- Setpoint temperature with function: $\overline{P7} \text{ E5}$ or **Set temperature**.
- External actual temperature with function: $\overline{P7} \text{ EE}$ or **ext. actual temperature**.
- Pump power with function: $\overline{P7} \text{ PP}$ or **Pump power**.

The following values can be specified via the outputs:

- Setpoint temperature with function: Master: $\overline{P7} \text{ E5}$ or Command: **Set temperature**.
- The temperature source with which active control occurs: $\overline{P7} \text{ EC}$ **Controlled temp.**
- Actual temperature (bath temperature): $\overline{P7} \text{ EI}$ or **Internal Temp.**
- External actual temperature from Pt100: $\overline{P7} \text{ EP}$ or **Temp.external Pt100**.
- External actual temperature from analogue input: $\overline{P7} \text{ EA}$ or **Temp.external analogue**.
- External actual temperature from the serial interface: $\overline{P7} \text{ ES}$ or **Temp.external serial**.
- Actuating signal: $\overline{P7} \text{ Y}$ or **Actuating signal**.
- Pump power: $\overline{P7} \text{ PP}$ or **Pump power**.
- Pump speed: $\overline{P7} \text{ EN}$ or **Pump speed**.

In addition the interfaces can be scaled freely with $\overline{L} \text{ 00 / H 1000}$ in % or **minimal value / maximal value** according to the set function.

For example: 4 mA corresponds to 0 °C and 20 mA corresponds to 100 °C.

- Accuracy of the inputs and outputs after calibration better than 0.1 % F.S.




- | | |
|--------------------|----------------------------|
| - Inputs, current | Input resistance < 100 Ohm |
| - Inputs, voltage | Input resistance > 50 kOhm |
| - Outputs, current | Burden < 400 Ohm |
| - Outputs, voltage | Load > 10 kOhm |

Connection of the analogue inputs and outputs

A 6-pole round connector with screw locking and contact arrangement according to DIN EN 60130-9 or IEC 130-9 is needed.

A suitable coupling plug can be obtained under catalogue no. EQS 057.

View of the socket (front) or solder side of plug:

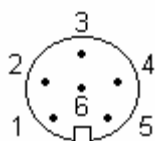

Socket 74S (from May 2010 on)

- | | |
|--------------|---------------------------|
| Pin 1 | Output 1 |
| Pin 2 | Output 2 |
| Pin 3 | 0 V reference potential |
| Pin 4 | Input 1 |
| Pin 5 | +20 V (max. 0.1 A) |
| Pin 6 | Input 2 |



Use shielded lines. Connect shielding with connector housing!

8.5 Contact module

8.5.1 Contact module LRZ 915 with three inputs and three outputs


Contact module Cat. no. LRZ 915) on 15 pole SUB-D socket. With three relay contact outputs (changeover, maximum 30 V/ 0.2 A) and three binary inputs for control via external voltage-free contacts.

The following functions are made available by the inputs:


- Set fault with function: Master: *F ALA* or Command: **Fault**.
- Set Stand by with function: *F Stb* or **Standby**, see safety instruction (⇒ 7.7.3).
- Control programmer (Input 1 activates programmer 1, input 2 activates programmer 2 etc. At the first “close” the programmer gets starting, “open” removes it in “pause”. The next “close” initiate “continue”) with function: *F PrG* or **Programmer**.
- Control alternating mode (the switching state contact “open” or “closed” allot to two different setpoint temperatures): *F tZC* or **alternating mode**.
- Controller mode (the switching state input “open” or “closed” can allotted to two different control temperature sources. E. g. internal ↔ external control): *F Con* or **type of control**.

The following functions are made available by the outputs:

- Signal various fault states: *F d iA* or **fault diagnosis**.
- Signalling standby: *F Stb* or **Standby**.
- Providing status of the window discriminators (inside ↔ outside): *F Ld i* or **temperature range**.
- Providing the programmer status: *F PrG* or **Programmer**.
- Signaling refill of heat transfer liquid: *F F iL* or **Refill**.

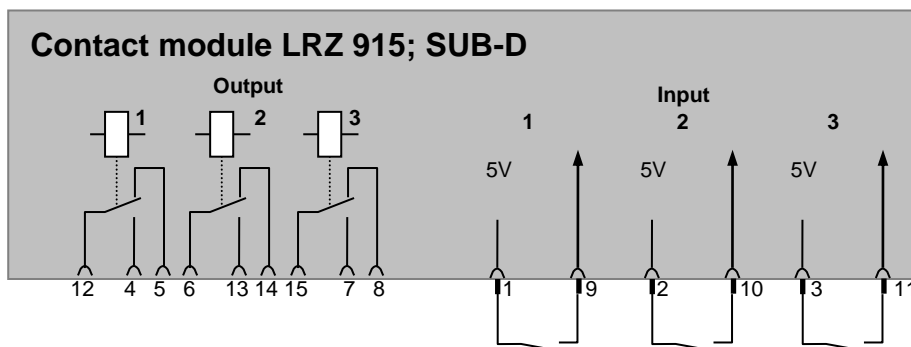


Contact inputs and outputs



- View of the socket from the plug side or of the plug on the solder side.
- A suitable 15-pole Sub-D plug can be obtained together with a suitable housing:
Catalogue no. EQM 030 and plug housing catalogue no. EQG 017.

8.5.2 Namur-Contact module LRZ 914 with only one input and one output

Contact module (catalogue no. LRZ 914) with connector to NAMUR NE28. Functionality as LRZ 915, but only one output and one input on each of two DIN sockets.

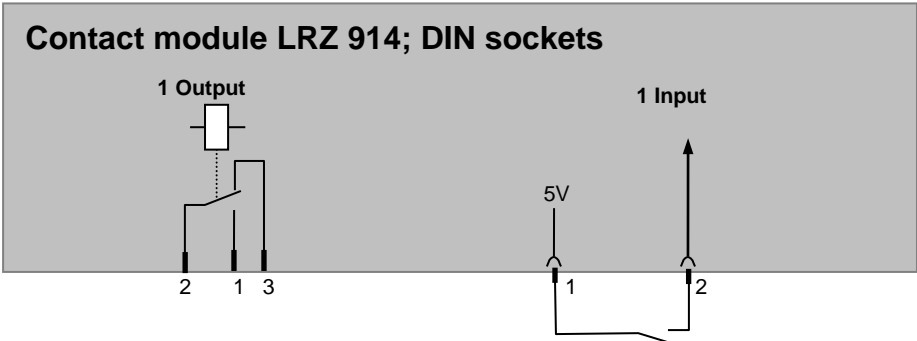

Contact inputs and outputs:

Output		Input	
<ul style="list-style-type: none"> – View on flange plug (Front) or solder side coupler socket. – Max. 30 V; 0.2 A. Coupler socket Catalogue number EQD 047.		<ul style="list-style-type: none"> – View on flange plug (Front) or solder side coupler socket. – Signal approx. 5 V, 10 mA. Do not use pin 3! Coupling plug Catalogue number EQS 048.	
		1 = normally open (make) 2 = common, 3 = normally closed (break)	



- Use shielded lines. Connect shielding with connector housing. Cover unused plug connections with protecting caps!

9 Maintenance

9.1 Cleaning



Withdraw the equipment mains plug before cleaning.

Cleaning can be carried out with water to which a few drops of surfactant (washing-up liquid) have been added and using a damp cloth.



No water must enter the control section.



Carry out appropriate decontamination if hazardous material is spilt on or in the equipment.

The cleaning or decontamination method is determined by the user's specialist knowledge respectively the corresponding data sheets. In case of doubt, contact the manufacturer of the hazardous material.

9.2 Device status

The thermostat can be conveniently checked with the Command remote control. Some values can however also be interrogated in the Master version.

9.2.1 Interrogating the device type

→ *Menu* → *Param.* → *Type*. (⇒ 7.5)

→ **Settings** → **Device status** → **Device type**

With low temperature thermostats, the device type is detected automatically and cannot be changed.

9.2.2 Software version

→ *Menu* → *Setup* → *Ver* (⇒ 7.5).

Here, only the version of the control system in the Master is displayed.

→ **Settings** → **Device status** → **Software version**.

With the Command remote control the versions of the control system (**Control**), safety system (**Safety**), Command remote control (**Command**), cooling system (**Cool**) and, where applicable, other connected modules are displayed.

9.2.3 Serial numbers

→ *Menu* → *Setup* → *Snr H* and *Snr L* (⇒ Section 7.5).

Under *Snr H* the first five places of the ten-character serial number of the Master device are displayed. Under *Snr L* the last five places are shown.

→ **Settings** → **Device status** → **Serial numbers**.

With the Command remote control the serial number of the Master (**Master**), Command remote control (**Command**), cooling system (**Cool**) and other connected modules are displayed.

9.2.4 Device data

Master		→ Menu → Show (⇒ Section 7.5)																																	
		– Various device datas are displayed.																																	
Command		Device data																																	
<table> <tr> <td>T ext Pt</td><td>25.70</td><td>T int</td><td>-8</td></tr> <tr> <td>T ext analog</td><td>---.---</td><td>Mains U(%)</td><td>100.74</td></tr> <tr> <td>T ext serial</td><td>---.---</td><td>Mains frequ.</td><td>50</td></tr> <tr> <td>T cont. head</td><td>39.80</td><td>Level</td><td>4</td></tr> <tr> <td>T heatsink</td><td>51.68</td><td>Low voltage</td><td>27.90</td></tr> <tr> <td>Pump pow.</td><td>44.90</td><td>5V supply</td><td>5.00</td></tr> <tr> <td>Pump rpm</td><td>5460</td><td>Fan voltage</td><td>7.0</td></tr> <tr> <td>Pumpe cur.</td><td>1.68</td><td>Cur. cons.</td><td>2.84</td></tr> </table>		T ext Pt	25.70	T int	-8	T ext analog	---.---	Mains U(%)	100.74	T ext serial	---.---	Mains frequ.	50	T cont. head	39.80	Level	4	T heatsink	51.68	Low voltage	27.90	Pump pow.	44.90	5V supply	5.00	Pump rpm	5460	Fan voltage	7.0	Pumpe cur.	1.68	Cur. cons.	2.84	→ Settings → Device status → Device data → Display	
T ext Pt	25.70	T int	-8																																
T ext analog	---.---	Mains U(%)	100.74																																
T ext serial	---.---	Mains frequ.	50																																
T cont. head	39.80	Level	4																																
T heatsink	51.68	Low voltage	27.90																																
Pump pow.	44.90	5V supply	5.00																																
Pump rpm	5460	Fan voltage	7.0																																
Pumpe cur.	1.68	Cur. cons.	2.84																																
		– T ext shows various actual temperatures in °C from ext. Pt100 and the modules. – T cont. head and T heatsink are temperatures of electronics in the Master in °C. – Pump power in Watts, speed in rpm, current in ampere (A). – T _{int} indicates the current internal bath temperature in °C. – Mains voltage in percentage (%) of nominal and frequency in hertz (Hz). – Level indicates the liquid level in the internal bath. – Voltage of power transformer, 5 V supply and fan in Volt. – Cur. cons.: Mains current consumption in Ampere.																																	
Pump	Menu	End	T _{set} T _{fix}																																

9.2.5 Fault memory

For the analysis and localization of faults the Command version includes a fault memory in which up to 45 fault and alarm messages are saved.

Command						Error store
No.	Source	Code	Type	Date	Time	<div>→ Settings → Device status → Error store → Display.</div> <ul style="list-style-type: none">– The last message is at the top.– Each message line can be marked with the cursor keys. The message appears in plain text in the footer.– Under Source the CAN node is displayed which signaled the fault.– Code is the number, which in the Master is shown in the display until the cause has been rectified.– Type: Alarm, Warning or Fault (Error).
10	Safety	2	Alarm	-----	-----	
9	Safety	4	Warn.	28.08.03	15:32:02	
8	Contro.	32	Error	17.07.03	10:52:02	
7	Contro.	3	Warn.	06.06.03	11:15:11	
6	Contro.	9	Alarm	05.06.03	08:45:01	
5	Contro.	3	Alarm	01.06.03	17:58:22	
4	Contro.	4	Warn.	28.05.03	20:01:22	
3	Contro.	5	Warn.	27.05.03	07:58:00	
Low level						
Pump	Menu	End	T _{set}	T _{fix}		

9.3 Servicing repair and disposal information




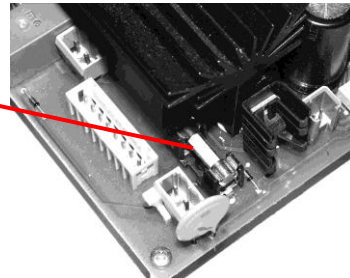
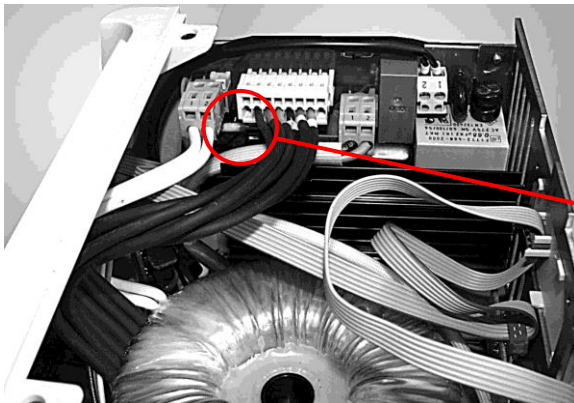
- Withdraw the mains plug before all service and repair work.
- Only specialists must carry out repairs in the control section.
- Keep to service intervals (⇒ 9.3.2). If servicing does not occur at the stated intervals, then the manufacturer can no longer guarantee the safe operation of the thermostatic circulator.

9.3.1 Servicing

LAUDA Thermostats largely require no service. If the heat transfer liquid becomes contaminated, it should be replaced (⇒ Section 6.2).



- At the back of the Proline head a main fuse switch  is located which interrupts the mains connection when an overload occurs. It is then in the "o" position and can be set in the "-" position again.
- If the fuse trips again, Service must locate the cause.
- Additionally, a safety fuse, which protects the low voltages, is situated on the mains board. If a fuse fails (→ mains lamp does not light) only replace with a fuse with the specified data (one x T (= slow-blow) 10 A, size 5 x 20 → Fuse is located in the unit as shown below).



UL 533

9.3.2 Servicing intervals

System part	Mandatory for initial operation and before any longer unsupervised operation, then with recommended frequency	Comment
Complete device		
External condition of the device	Monthly	
Heat transfer liquid		
Analysis of heat transfer liquid	Half-yearly (and as required)	(⇒ 9.3.4)
Bath vessel with drain tap		
Sealing	Daily	External visual inspection
External hoses		
Material fatigue	Monthly	External visual inspection
Cooling unit		
Cleaning of air-cooled condenser	Monthly	(⇒ 9.3.3) Air-cooled thermostat
Electronics		
Overtemperature protection	Quarterly	(⇒ 7.14.1)
Low-level protection	Quarterly	(⇒ 7.14.2)
High-level protection	Quarterly	(⇒ 7.14.3)

Bring the device parts and accessories to room temperature before touching them.

9.3.3 Cleaning the condenser

The SmartCool System refrigerating machine operates largely without servicing. So that the full cooling power is available, the condenser should be cleaned of dust at intervals of one month or longer depending on the operating period and dust level in the ambient air. To do this, open the front grille, brush off the condenser and, where necessary, blow over with compressed air.

Extreme contamination is detected by the Proline SelfCheck Assistant, which then issues a warning.

9.3.4 Testing the heat transfer liquid

If the heat transfer liquid becomes contaminated or degenerated, it should be renewed.

If required, the heat transfer should be checked for fitness for use (e.g. when changing the method of operation), or at least half-yearly. Further use of the heat transfer liquid is only permissible if the inspection indicates this.

The test of the thermal transfer medium should take place according to DIN 51529; Testing and assessment of used heat transfer media.

Source: VDI 3033; DIN 51529.

9.3.5 Repair information

If you need to send in a unit for repair, it is essential to first contact the LAUDA Service Constant Temperature Equipment (⇒ 9.4).



- When sending in the unit, ensure that it is carefully and properly packed. LAUDA cannot be held liable for any damage caused by improper packing.

9.3.6 Disposal information



The following applies for EU member states: The device must be disposed of according to Directive 2012/19/EU (WEEE Waste of Electrical and Electronic Equipment).

9.3.7 Disposal of the refrigerant

The refrigerant type and filling weight are printed on the type plate. Repair and disposal only through a qualified refrigeration engineer!


The following applies for EU member states: Disposal of refrigerant must proceed according to regulation 2015/2067/EU in combination with regulation 517/2014/EU.

9.3.8 Disposal of the packaging

The following applies for EU member states: The disposal of the packaging must proceed according to the EC Directive 94/62/EC.

9.4 Service, ordering replacement parts and rating label

When ordering spares please quote instrument type and serial number from the rating label. This avoids queries and supply of incorrect items.

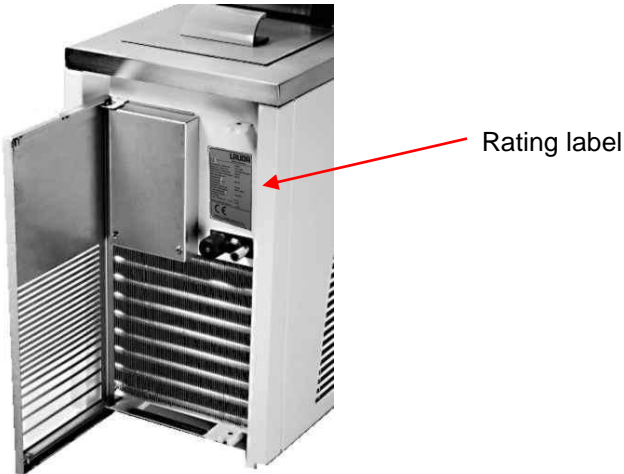

Contact LAUDA Service Constant Temperature Equipment in the following cases:

- In the event of faults on the device
- For technical questions about the device
- For spare part orders



Contact our Sales Department for application-specific questions.

LAUDA Service Constant Temperature Equipment
Telephone: +49 9343 / 503-350 (English and German)
E-Mail service@lauda.de

We are available any time for your queries and suggestions.

LAUDA DR. R. WOBSE GMBH & CO. KG
Pfarrstraße 41/43
97922 Lauda-Koenigshofen
Germany

Phone: +49 9343 / 503-0

Fax: +49 9343 / 503-222

E-Mail info@lauda.de

Internet <http://www.lauda.de>

10 Accessories

Description	Application	Catalogue No.
LAUDA Wintherm Plus PC Program	Control of the thermostat, online display of all values as a graph with free choice of time frame. Incl. RS-232 cable (2 m).	LDSM2002
RS-232/485 Interface modules	Digital Communication, operation of the LAUDA PC software Wintherm Plus (⇒ 8.3)	LRZ 913
RS-232 Cable (2 m)	Thermostat-PC Sub-D (9 pin. 9 pin)	EKS 037
RS-232 Cable (5 m)	Thermostat-PC Sub-D (9 pin. 9 pin)	EKS 057
Analogue module	Current and voltage interface (⇒ 8.4)	LRZ 912
Relays module with 3 input and 3 output channels	Import and export of thermostat signals (⇒ 8.5.1)	LRZ 915
Relays module with 1 input and 1 output channel	NAMUR NE28 functionality (⇒ 8.5.2)	LRZ 914
T-piece adapter cable for the LAUDA internal bus (LiBus) ①	For the connection of further LiBus components (with heating thermostats two LiBus ① connections are not occupied and one with cooling thermostats)	EKS 073
Extension for LiBus ① 5 m	For LiBus ① components, but especially for remote operation with the command console	EKS 068
Extension for LiBus ① 25 m		EKS 069
Automatic refill device with LiBus ① control	Evaporating heat transfer liquid is automatically topped up	LCZ 9661
Shut-off unit with LiBus ① control.	Prevents the return of cooling liquid into the bath from external containers located above the bath	LCZ 9673
Controlled high temperature cooler, control via LiBus ①	For the rapid cooling of high bath temperatures, using water cooling.	LCZ 9663
Level controller without reverse-flow protection, mechanical function.	Keeps the liquid level in an open external bath at a constant level	LCZ 0660
Raising platform 300 mm x 200 mm for P 18, RP 1840/1845	For lowering and lifting out objects for P 18, RP 1840/1845	LCZ 0664
Raising platform 300 mm x 350 mm for P 26, RP 3530	For lowering and lifting out objects for P 26, RP 3530 (depth 250 mm).	LCZ 0665
Application frame for 56 tubes, diam. 10-13 mm, 80 mm ID②.	2 frames fit in each of P 18, RP 1840 and RP 1845; 4 frames fit in P 26.	UG 070
Application frame for 33 tubes, diam. 14-18 mm, 80 mm ID②	2 frames fit in each of P 18, RP 1840 and RP 1845; 4 frames fit in P 26.	UG 071
Application frame for 33 tubes, diam. 14-18 mm, 110 mm ID②	2 frames fit in each of P 18, RP 1840 and RP 1845; 4 frames fit in P 26.	UG 072

Description	Application	Catalogue No.
Application frame for 14 tubes, diam. 24-30 mm, 110 mm ID ^②	2 frames fit in each of P 18, RP 1840 and RP 1845; 4 frames fit in P 26.	UG 073
Application frame for 20 tubes, diam. 14-18 mm, 80mm ID ^② .	1 frame fits in P 8, (P 12), RP 845, RP 855, RP 870, RP 890.	UG 076
Application frame for 20 tubes, diam. 14-18 mm, 110 mm ID ^② .	1 frame fits in P 8, (P 12), RP 845, RP 855, RP 870, RP 890.	UG 077
Gable cover for beer forcing test, 0.3 litre bottles	For RP 3530 and P26.	LCZ 011
Gable cover for beer forcing test, 0.5 litre bottles	For RP 3530 and P26.	LCZ 058
Displacement body for 8 litre baths.	The heating and cooling rates are reduced due to the bath volume being reduced to approx. 4 litres.	LCZ 0667
Suspended basket for notched bar impact samples.	For RP 870/ RP 890.	LCZ 0658
Wall bracket for command remote control.	For mounting the console securely on the wall or on a laboratory stand.	LCZ 0659
Conversion kit for guide rollers with 2 stops for RP 890/ RP 1290.	For replacing the two standard production rollers by guide rollers with a brake.	LCZ 0669
Conversion kit for guide rollers with 4 stops for RP 890/ RP 1290.	For replacing the two standard production rollers and the two feet by guide rollers with a brake.	LCZ 0672
Equipment trolley for bench-top cooling thermostats	Movable on lockable castors, height adjusts from 370 mm to 455 mm, footprint 555 mm x 465 mm, holds up to 160 kg load.	LCZ 036

① LiBus = LAUDA internal BUS (based on CAN).

② ID = Immersion depth for test tubes.

We will inform you about other accessories on request (⇒ 9.4). Also, refer to our special and accessory brochures.

11 Technical data and diagrams

The figures have been determined according to DIN 12876.

				RP 845C	RP 855C	RP 870C	RP 890C	RP1290C	RP1840C	RP1845C	RP3530C	
Operating temp.- ACC range			°C	-45 – 200	-55 – 200	-70 – 200	-90 – 200	-88 – 200	-40 – 200	-50 – 200	-35 – 200	
Ambient temp. range			°C	5 – 40								
Relative humidity				maximum relative humidity 80 % for temperatures up to 31 °C, decreasing linearly to 50 % relative humidity at 40 °C								
Storage temperature range			°C	-20 – 44								
Setting resolution			°C	0.1 / 0.01 (Master); 0.01 (Command)								
Display resolution			°C	Master: 0.01 Command: 0,1 / 0,01 / 0,001								
Accuracy of indication				±0.2 K can be calibrated additively (⇒ 1.2)								
Temperature stability			K	±0.01	±0.01	±0.02	±0.02	±0.02	±0.01	±0.01	±0.02	
Heater power 230 V; 50 Hz 115 V; 60 Hz 200 V; 50/60 Hz 100 V; 50/60 Hz 208-220 V; 60 Hz			kW kW kW kW kW	3.5 1.75 2.7 1.3 2.9								
Cooling power at 20 °C t _{amb} (Pump Level 3 ^①) @bath temperature	with thermal transfer oil	200 °C	kW	1.0	1.7	0.5	0.5	0.5	1.0	1.7	1.0	
	with ethanol	20 °C	kW	0.8	1.6	0.38	1.1	1.1	0.9	1.6	0.9	
		0 °C	kW	0.7	1.1	0.36	1.0	1.0	0.7	1.1	0.7	
		-20 °C	kW	0.36	0.6	0.33	0.9	0.9	0.35	0.55	0.3	
		-30 °C	kW	0.22	0.38	0.3	0.83	0.83	0.2	0.32	0.15	
		-40 °C	kW	0.11	0.21	0.25	0.75	0.75	0.09	0.18	--	
		-45 °C	kW	0.05	0.15				--	0.1	--	
		-50 °C	kW	--	0.1	0.25	0.58	0.58	--	0.045	--	
		-55 °C	kW	--	0.04	--	--	--	--	--	--	
		-60 °C	kW	--	--	0.2	0.42	0.42	--	--	--	
		-70 °C	kW	--	--	0.1	0.24	0.24	--	--	--	
		-80 °C	kW	--	--	--	0.13	0.13	--	--	--	
		-88 °C	kW	--	--	--	0.04	0.04	--	--	--	
Pump type				Pressure/suction pump, 8 power levels								
Discharge pressure max.			bar	0.7 at Pump Power Level 8								
Intake suction max.			bar	0.4 at Pump Power Level 8								
Flow rate max. (pressure)			L/min	25 at Pump Power Level 8								
Flow rate max. (suction)			L/min	23 at Pump Power Level 8								
Hose connections				Thread M16 x 1; olives 13 mm external diameter								
Bath volume from – to			L	5.5 – 8			7.4 – 8.9	14.8 – 17.8	12.5 – 19		23 – 35	
Bath opening B x L			mm	150 x 150				300 x 150	300 x 200		300 x 350	
Bath depth / usable depth			mm	200 / 180								250 / 230
Height to top of bath			mm	488	570	535	535	535	488	570	540	

		RP 845C	RP 855C	RP 870C	RP 890C	RP1290C	RP1840C	RP1845C	RP3530C
Overall dims. B x L	mm	285 x 430	400 x 540	375 x 540	495 x 615	495 x 615	375 x 465	400 x 540	375 x 615
Overall dim. H ②	mm	688	770	735	735	735	688	770	740
Weight	kg	41	60	68	100	100	46	61	51
Power consumption 230 V; 50 Hz 115 V; 60 Hz 200 V; 50/60 Hz 115 V; 50/60 Hz 208-220 V; 60 Hz	kW kW kW kW kW	3.6 1.8 3.2 1.6 3.6							
IP protection class		IP 2 1							
Safety equipment		Class III to DIN 12876-1, FL suitable for flammable and non-flammable liquids							
Class of protection for electrical operating equipment		Protection class I according to DIN EN 61140; VDE 0140-1							

① The cooling power will be reduced by 30 – 35 W, when pump level 8 is chosen instead of level 3.

② Put-on Command remote control: 56 mm higher.

Mains connection data

Mains connection data	RP 845 C	RP 855 C	RP 870 C	RP 890 C	RP 1290C	RP 1840C	RP 1845C	RP 3530C
230 V ±10 %; 50 Hz	X	X	X	X	X	X	X	X
115 V ±10 %; 60 Hz	X	-----	-----	-----	-----	X	-----	X
200 V ±10 %; 50/60 Hz	X	X	X	X	X	X	X	X
100 V ±10 %; 50/60 Hz	X	-----	-----	-----	-----	X	-----	X
208-220 V ±10 %; 60 Hz	X	X	X	X	X	X	X	X

Technical modifications reserved.

Refrigerant and Filling quantity

The cooling thermostat contains fluorinated greenhouse gases.

	Unit	RP 845 C	RP 855 C	RP 1840 C	RP 1845 C	RP 3530 C
Refrigerant	---	R-404A	R-404A	R-404A	R-404A	R-404A
maximum filling quantity	kg	0.39	0.63	0.63	0.63	0.63
GWP _(100a) *	---	3922	3922	3922	3922	3922
CO ₂ equivalent	t	1.5	2.5	2.5	2.5	2.5

Devices with two compressors

	Unit	RP 870 C	RP 890 C	RP 1290 C
Refrigerant 1	---	R-404A	R-404A	R-404A
maximum filling quantity 1	kg	0.63	0.63	0.63
GWP _(100a) *	---	3922	3922	3922
CO ₂ equivalent	t	2.5	2.5	2.5
Refrigerant 2	---	R-23	R-508B	R-508B
maximum filling quantity 2	kg	0.085	0.2	0.2
GWP _(100a) *	---	14800	13400	13400
CO ₂ equivalent	t	1.3	2.7	2.7




Global Warming Potential (GWP),
Comparison CO₂ = 1.0


* Time span 100 years - according to IPCC IV

Pump characteristics
measured with water

Proline Varioflex pressure/suction pump VF
Proline Varioflexpumpe Druck-Saugpumpe VF
Proline Pompe Varioflex refoulante aspirante VF

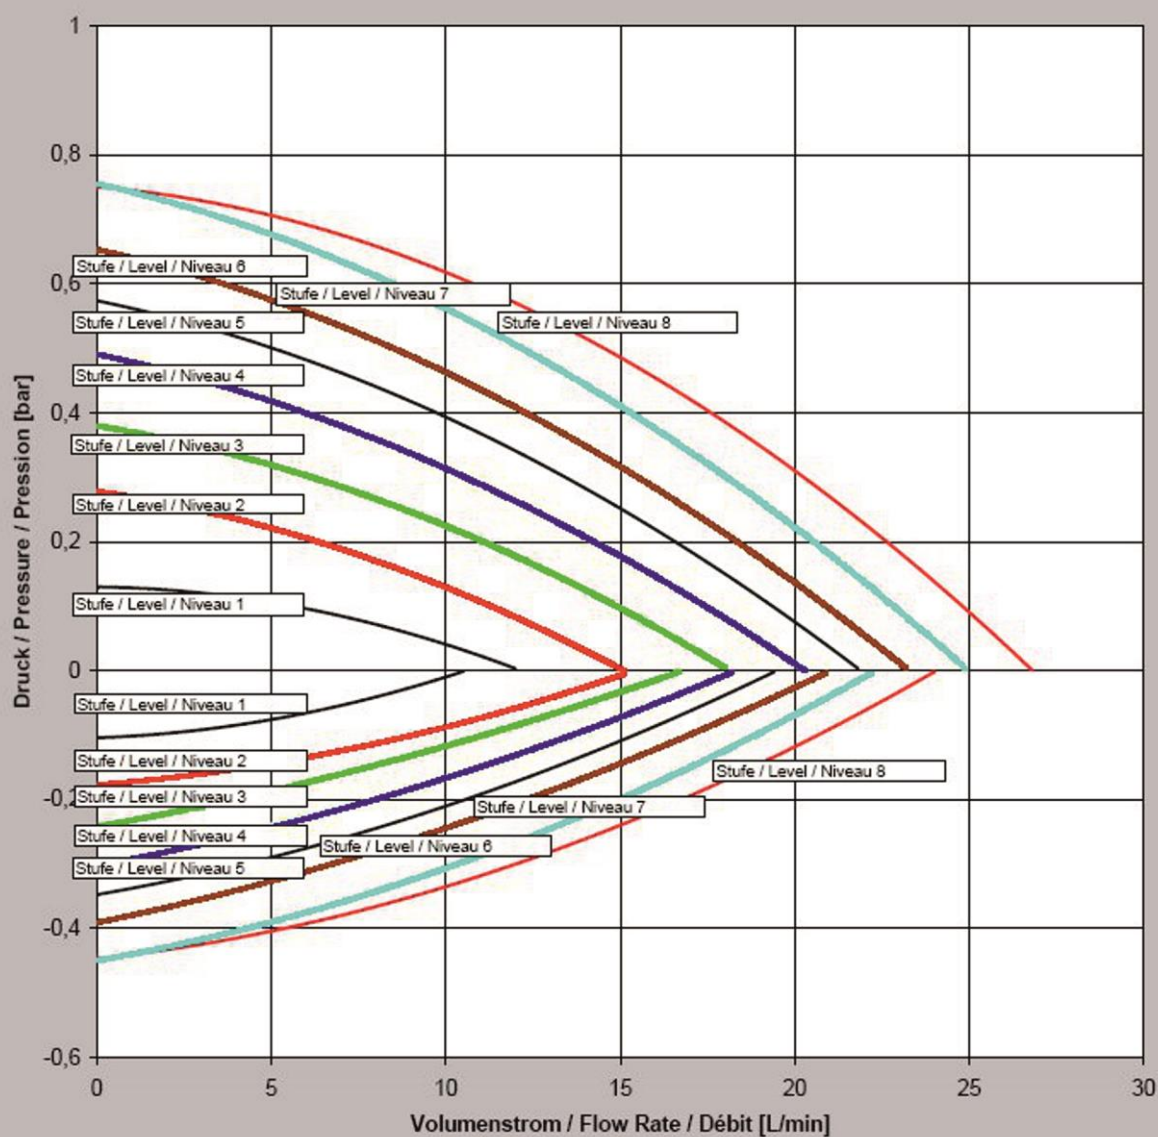

Cooling curves

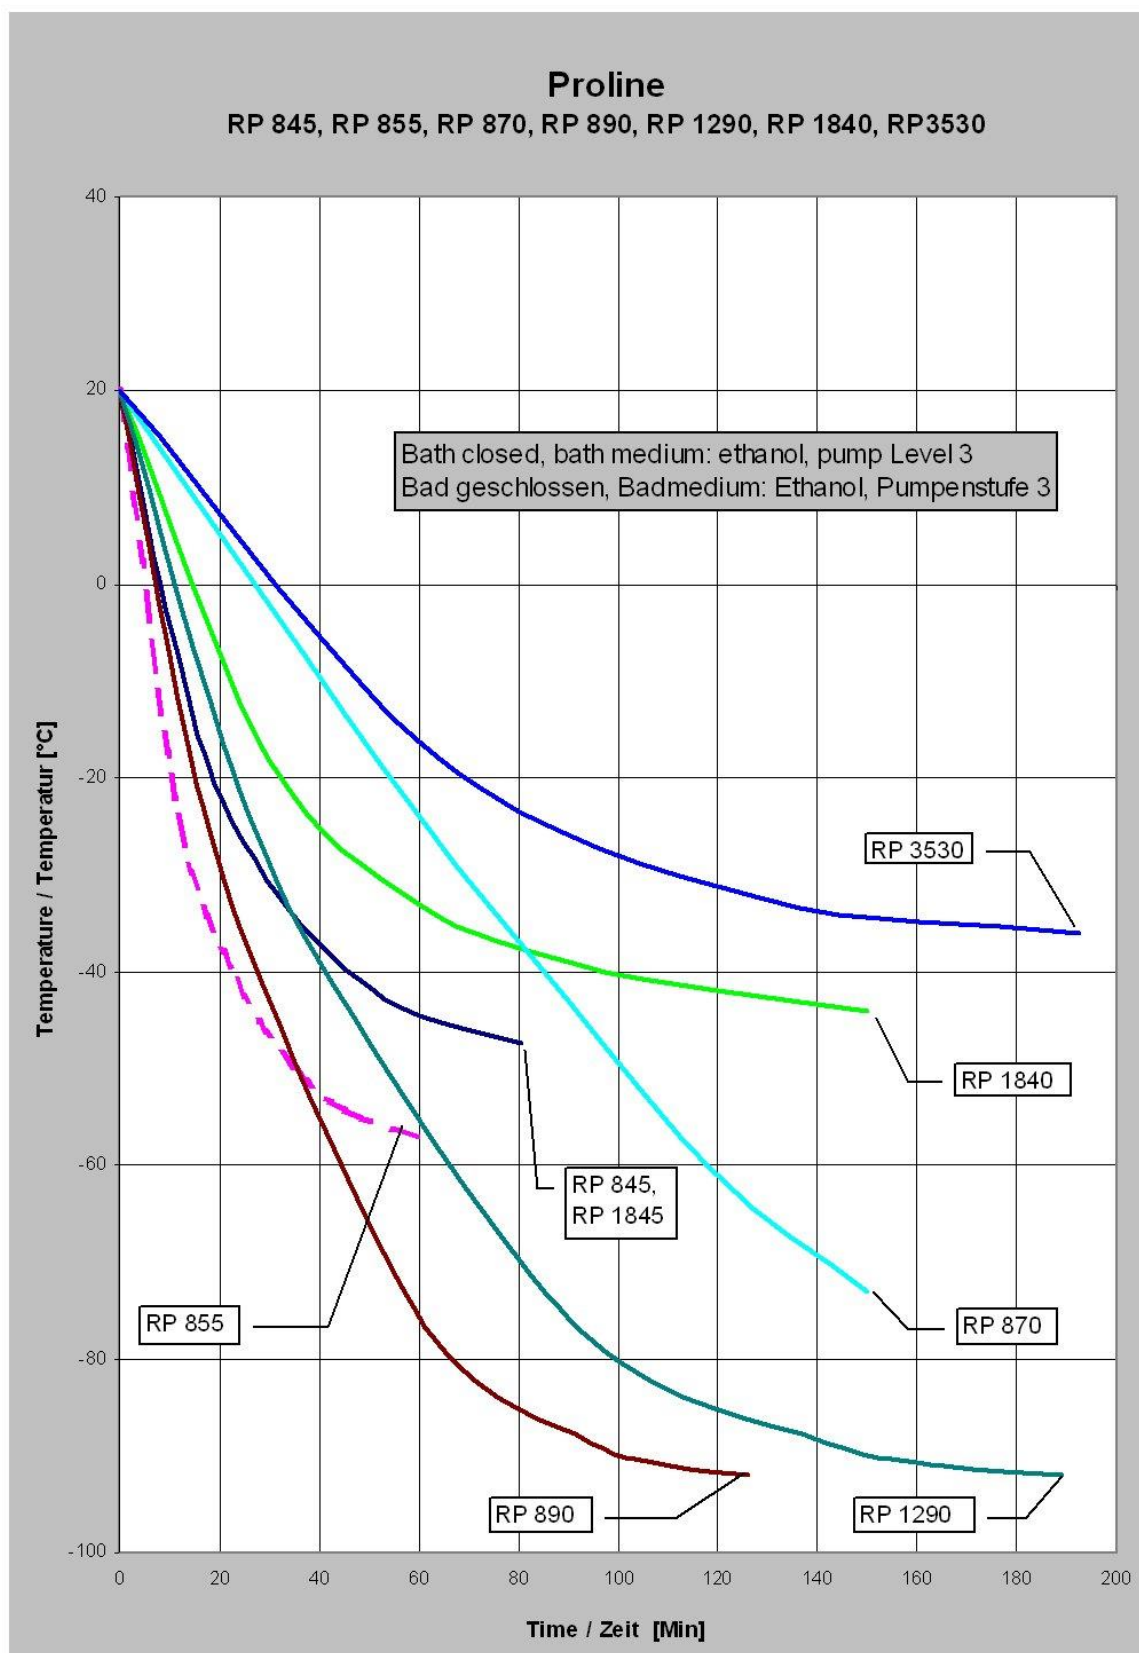

Cooling curves; Bath closed, heat transfer liquid ethanol, Pump Level 3; Time in minutes; Temperature in °C

12 Index

A

Acoustic signals	52
Activate standby	40
Activating external control.....	41
Alarms	80
alternating mode	98
Ambient temperature	21
Analog module	18
Analogue module	97
<i>Aud io</i> acoustic signal setting..	52
<i>Auto</i>	46
Auto start	46

B

Basic	
window	30
Bath liquid	
Viscosity	16
Bath temperature display.....	26
<i>BLDC</i> Pump blocked	85
Brightness	30
Bypass valve.....	16

C

<i>CAL I</i> offset adjustment	53
<i>CAL E</i> Offset adjustment.....	55
Calibration, temperature probe	
.....	53
Changing window	32
Circuit breaker	26
Cleaning.....	100
Clock	44, 70
Compressor	19
<i>Con</i> control	41
Condensation.....	28
Condenser	19
Connection	
pump	17
Contact module.....	18, 19, 98
Contrast	30
Control parameter set	77
Control parameters	72
Control Variable	42
Cooling capacity	21
Cooling unit.....	19
Correction limitation	74
Create a program.....	63
<i>Cur</i> current consumption	43
Current consumption	42
Current Consumption	43

Cursor keys.....	29
------------------	----

D

Decimal-point key	29
<i>dEF</i> works settings	50
<i>dEF I</i> Offset, works setting	54
<i>dEF E</i> Offset, works settg.	56
Delete.....	63
Device data	101
Device status	100
Dew formation.....	28
Display data	32
Display resolution	44
Disposal	22
Disposal information	104
Draining.....	22
Duo key, Command	29

E

<i>ER</i> analog module	
control source.....	42
Edit	63
EMC standard DIN EN 61326-19	
Enter key	
Command.....	29
Master	28
<i>EP</i> external probe	
control source.....	42
Error list.....	80
error store	101
Errors	80
<i>ES</i> serial module	
control source.....	42
Escape key	29
EXT external temperature probe	
.....	40
External temperature	39

F

Fault list Alarms and Warnings	
.....	86
Filling.....	22
Filling quantity	110
Flammable liquids	22
Format of date	44
Free space	21

G

Graph	57, 67
Graph recorder	57

Graphical display	57
Graphical measurement display	
.....	31

H

Hazard sources.....	9
Hazards.....	9
Heat transfer liquid	
Selection	23
Setpoint	37
Testing.....	103
Heat transfer oils.....	22
Heater rating	19
High-level settings	83
High-level warning/alarm	84
Hoses.....	24

I

Info	68
Instructed specialist personnel .	9
Interface modules	18
Internal probe control source ..	42
Interrogating device type	100

K

Key for arithmetic sign	29
Key functions	28

L

LABVIEW	96
Language	27
LED signals.....	29
<i>LEVEL</i> Low-level alarm.....	82
Limit temperature	47
Liquid level	22
Liquids	
flammable.....	22
Load	
at higher position	25
External	39
Locking the keyboard.....	33
Locking, keyboard.....	33
Loops	67
Low-level alarm.....	82

M

Main fuse switch	26
Mains connection	26
Mains fuse	19, 42

Maintenance.....	100
Maximum temperature	47
Menu structure	
Command.....	36
Master.....	35
Minimum temperature	47
Power	46
Modules	
install	89
Modules.....	18

N

Nameplate	26
Nozzles	
outflow/inflow	16

O

Offset adjustment	53
Offset source	49
Offset, temperature probe	53
Out 1 (Program)	66
Overtemperature cut-off.....	81
Overtemperature protection ...	80

P

Pause program	62
Power level	
pump.....	17
Pressure/suction pump	16
Profibus Modules	19
Program sequence.....	67
Programmer	59, 61
Pump power levels	40
Pump.....	16
Connector	16
Low level.....	85
outflow	17
Program setting	66
unused connectors	25
Pump Level	41
Pump-motor supervision	
Dry running	85
Overload	85

R

Ramp.....	59
Ramp function	69

Rating label	105
Refrigerant	110
Refrigerating machine	19
Relative setpoint.....	48
Repair.....	102
RS-232/485	91
RS-232/485 Interf. module.....	18

S

Setpoint resolution	45
SAFE keyboard locking	33
Safety functions.....	80
Safety information	9
Safety notes	5
Safety system.....	17
Screen displays.....	30
Screen Graph recorder	57
Sealing caps.....	21
Segment.....	59
Segment "Start"	60
Segment time	65
Select program.....	61
Self Adaption.....	78
SelfCheck Assistant	17, 80
Self-test	26
Serial interfaces RS-232/485	91
Serial numbers	100
Service contact.....	105
Servicing	102
Set date	44
SEL setpoint setting	37
Set time	44
Setpoint offset	48
Setpoint resolution	45
SETr. Setpoint offset	48
Setting of numerical values....	28
Setting pump power	40
Signs in this manual.....	8
SmartCool technology.....	19
Socket 10S.....	39
Soft keys	30
Software version	100
Sounds	52
Spare parts.....	105
Standard window.....	31
Standby	28
Standby activation.....	29
Start Type of start mode	46
Starting up.....	26

Status	61, 62
Super window.....	31
Switching off.....	28

T

T end °C	63
Technical data	108
TEMP Overtemperature alarm.....	81
Temperature.....	44
display resolution.....	44
External probe	39
Gradient.....	39
Limits	47
Setpoint setting.....	37
Temperature Limits	47
T _{ext} external temperature	40
T _{fix} Default setpoint temp.	38
T _h maximum temperature	47
T _L minimum temperature	47
Time	65
Timer	70
Timer function	70
Tolerance (Program).....	65
Tolerance range	60
T _{set} Setpoint temperature setting	38
Tv manual/auto	74
Type designation.....	16
Type of start mode	45

U

UK plugs.....	26
Unlocking	33

V

Varioflex pump	16
Version of the software	100

W

Warnings.....	80
Weekplan	70
Works settings.....	50
Warning	84
Warning High-level warning.....	84

Blank page

Blank page

An / To / A:

LAUDA Dr. R. Wobser • LAUDA Service Center • Fax: +49 (0) 9343 - 503-222

Von / From / De :

Firma / Company / Entreprise: _____

Straße / Street / Rue: _____

Ort / City / Ville: _____

Tel.: _____

Fax: _____

Betreiber / Responsible person / Personne responsable: _____

Hiermit bestätigen wir, daß nachfolgend aufgeführtes LAUDA-Gerät (Daten vom Typenschild):

We herewith confirm that the following LAUDA-equipment (see label):

Par la présente nous confirmons que l'appareil LAUDA (voir plaque signalétique):

Typ / Type / Type :	Serien-Nr. / Serial no. / No. de série:

mit folgendem Medium betrieben wurde

was used with the below mentioned media

a été utilisé avec le liquide suivant

Darüber hinaus bestätigen wir, daß das oben aufgeführte Gerät sorgfältig gereinigt wurde, die Anschlüsse verschlossen sind, und sich weder giftige, aggressive, radioaktive noch andere gefährliche Medien in dem Gerät befinden.

Additionally we confirm that the above mentioned equipment has been cleaned, that all connectors are closed and that there are no poisonous, aggressive, radioactive or other dangerous media inside the equipment.

D'autre part, nous confirmons que l'appareil mentionné ci-dessus a été nettoyé correctement, que les tubulures sont fermées et qu'il n'y a aucun produit toxique, agressif, radioactif ou autre produit nocif ou dangereux dans la cuve.

Stempel Seal / Cachet.	Datum Date / Date	Betreiber Responsible person / Personne responsable

LAUDA DR. R. WOBSE R GMBH & CO. KG
Pfarrstraße 41/43 • 97922 Lauda-Königshofen • Germany
Phone: +49 (0)9343 503-0 • Fax: +49 (0)9343 503-222
E-Mail: info@lauda.de • Internet: www.lauda.de